

CODING
- 147001



nestnordic.com

Read the instruction carefully. Remove all the wrapping material, staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Be sure that you have all the parts before you start assembling. Place all the wooden furniture part on a clean and flat soft surface, such as carpet or rubbermat to prevent from scratches.

! IMPORTANT REGISTER & ACTIVATE YOUR WARRANTY WITHIN 14 DAYS !

Log onto www.nestnordic.com/warranty_registration/warranty_registration.aspx to register and activate your product warranty within 14 (fourteen) days from the purchase date.

Note: Please use the batch number as printed on the carton box packaging of your product registration purposes.
All NESTNORDIC products have 1 (one) year warranty unless stated or upgraded.

CAUTION
KEEP ALL THE PARTS OUT OF REACH OF CHILDREN.

ITEM	PHOTO	HAREWARE NAME	QTY
(A)		BOLT M8x40	12
(B)		KEY K4	1

ITEM	PHOTO	PARTS NAME	QTY
(1)		TOP	1
(2)		LEG	2

CODING
- 147001



nestnordic.com

