ZELIG



ASSEMBLY GUIDE

ISO 9001:2015 Reg.No. 000435-1-MY-1-QMS

nesthouz.com

Read the instructions carefully. Remove all the wrappings, staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.

CAUTION

KEEP ALL THE PARTS OUT OF CHILDREN'S REACH.

ITEM	РНОТО	HAREWARE NAME	ΟΤΥ
A		M4 x 110mm ALLEN KEY.	1
B	0	M6 x 50mm JCBC BOLT	10
C	Ø	Spring Washer	10
D		Wood Dowel 8 x 30mm	4
E	<commune}< td=""><td>Screw M4 x 32mm</td><td>4</td></commune}<>	Screw M4 x 32mm	4

ITEM	РНОТО	HAREWARE NAME	ΟΤΥ
		Side Frame R	1
2		Side Frame L	1
3		Back Rail 1	1
4		Back Rail 2	1
5		Front Rail	1
6		Cushion Seat	1

