


CODING - 336018

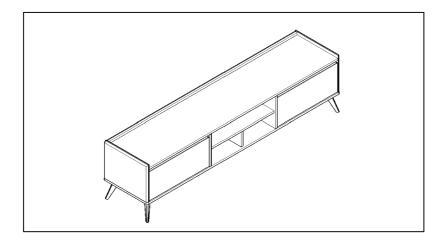

### nuhoom.com

Read the instructions carefully. Remove all the wrappings, staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.


### CAUTION KEEP ALL THE PARTS OUT OF CHILDREN'S REACH.

ITEM	PHOTO	HARDWARE NAME	QTY
Α		i)CAM PIN	8 8
		ii)CAM LOCK	0
В		WOOD DOWEL M8x30MM	12
С	8. January	SCREW M6x50MM	12
О	<b>Damman</b>	SCREW M4x45MM	4
Ш		ALLEN KEY	1
F		PVC LEG (BLACK) SCREW M4x20MM	6 24
G		SCREW M3.5x16MM	4
Н	(°)	MINIFIX CAP	4
SH		HYDRAULIC HINGES 7/8"	4
78		SCREW M3.5x16MM	24


ITEM	РНОТО	PART NAME	QTY
1		TOP PANEL	1
2		BOTTOM PANEL	1
3		SIDE PANEL (L)	1
4		SIDE PANEL (R)	1
5		CENTER PANEL (L)	1
6		CENTER PANEL (R)	1
7		STAND PANEL	1
8		SHELF PANEL	1
9		INTERNAL SUPPORT PANEL	2
10		DOOR PANEL (L)	1
11		DOOR PANEL (R)	1
12		BACK MDF BOARD	1



**CODING** - 336018

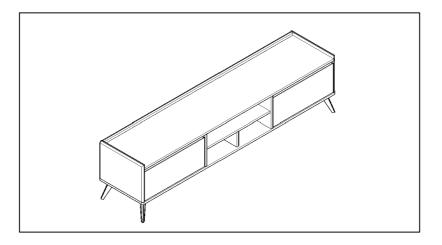

### nuhoom.com

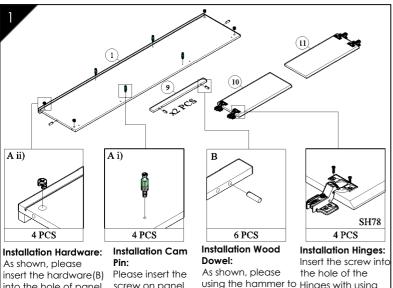

screw on panel into the hole of panel (1) using a (1).Make sure the arrow point out screwdriver.

using the hammer to


insert the hardware


(C) into the hole of

panel (3),(4) & (7).

using the hammer to Hinges with using insert the hardware the screwdriver on (C) into the hole of panel (10) & (11). panel (9).

screwdriver.

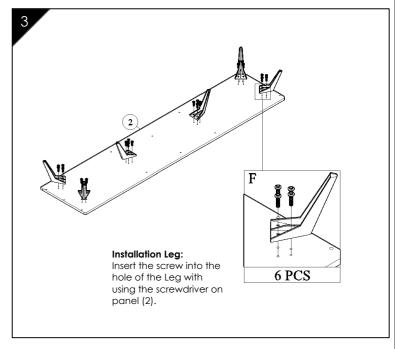


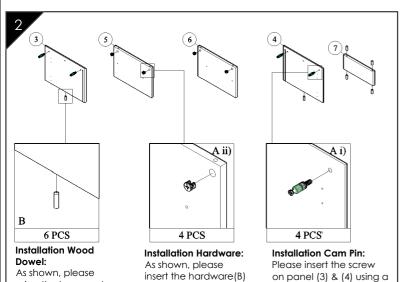

into the hole of panel


(5) & (6). Make sure

the arrow point out.

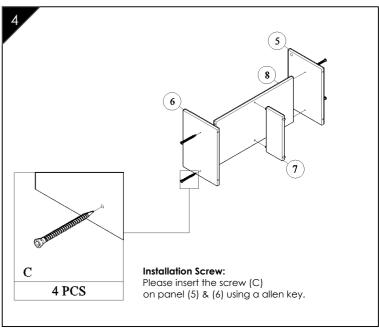



### MAXTON


CODING - 336018

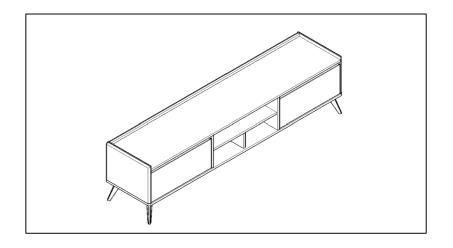


### nuhoom.com

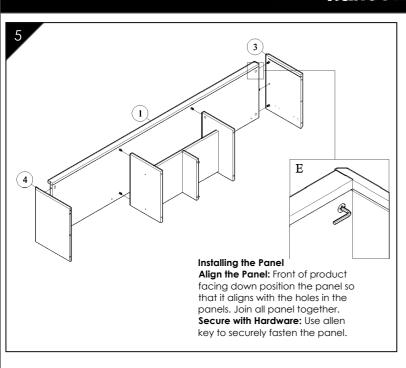

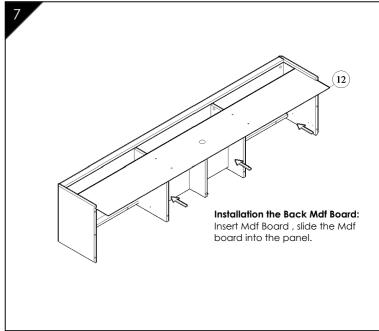


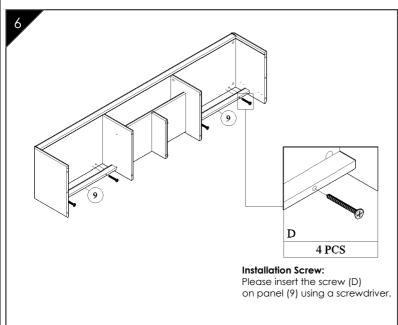

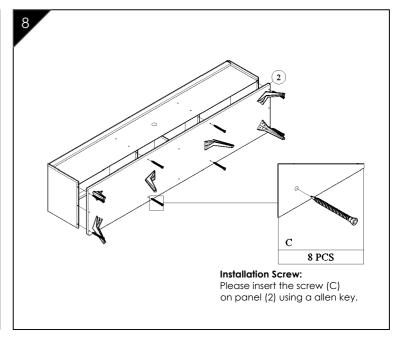



### MAXTON


CODING - 336018

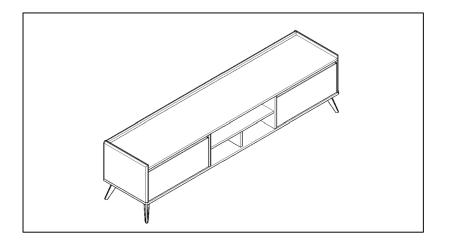


### nuhoom.com

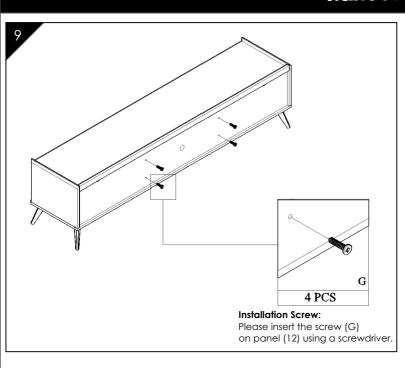

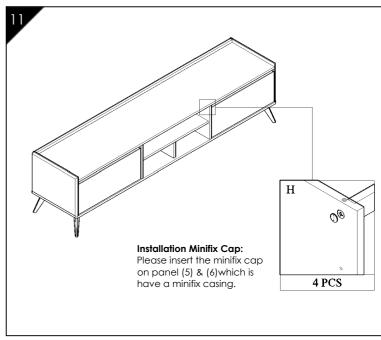

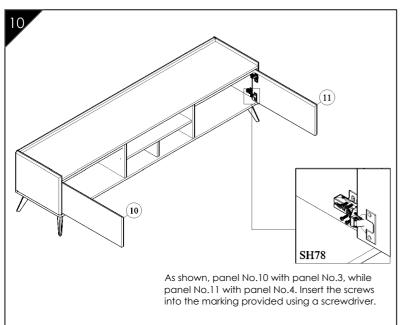

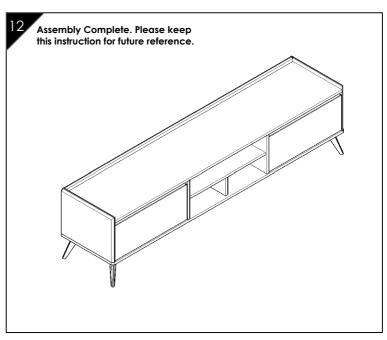





## HOW TO ADJUST GLASS/DOORS

# There is a gap between the door and the shelf with doors closed

Loosen the back adjustable screw which is one of the two screws looking from the front while supporting the doors, adjust the door by moving it back and forth, then tighten the back

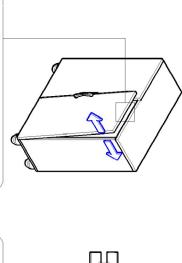

If there is a gap between the doors on the top.

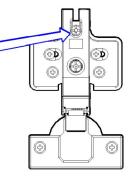


back and forth Loosen this screw, adjust by moving

If the gap is wide

There is a gap in the middle with doors closed

the middle gap. After adjusted, tighten the 1 screw. Loosen the 1 back adjustable screw which is one of the two screws looking from the front while supporting the doors, tighten the ② screw clockwise, then adjust

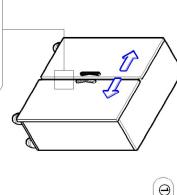

① Fixing screw (4**) ₽P (4)** 

② Adjusting screw (If you twist clockwise once, moves about 2mm inward the door


### (Glass slide hinge does not require this step) There is a gap on the top of the door when doors are closed

(4 screw hole hinge does not require ①

it up and down then tighten the screws. Loosen the slide hinge screw while supporting the door, adjust the door by moving

(Please loosen the slide hinge screws of the door completely you are adjusting

before moving it up and down.)

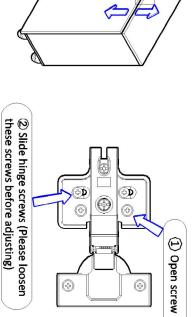

If there is a gap on the top of the door

# There is a V gap on the top with doors closed

middle gap. After adjusted, tighten the lacktriangle screw. front while supporting the doors, tighten the ② screw clockwise, then adjust the Loosen the 1 back adjustable screw which is one of the two screws looking from the

