
CODING

- 336089
- 336032

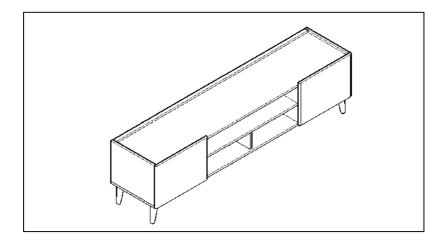

nuhoom.com

Read the instructions carefully. Remove all the wrappings, staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.


CAUTION KEEP ALL THE PARTS OUT OF CHILDREN'S REACH.

ITEM	РНОТО	HARDWARE NAME	QTY
Α	m D	CAM PIN	8
В	*	CAM LOCK	8
С		WOOD DOWEL M8x30MM	12
D	Dimension	SCREW M6x50MM	8
Е	07	ROUND PVC LEG SCREW M3.5x16MM	6 24
F		SCREW M3.5x16MM	4
G		ALLEN KEY	1
Н		RUBBER ROUND CUP	1
I	(6)	MINIFIX CAP	4
SH 58	*	hydraulic hinges 5/8" SCREW M3.5x16MM	4 24


ITEM	РНОТО	PART NAME	QTY
1		TOP PANEL	1
2		BOTTOM PANEL	1
3		SIDE PANEL (L)	1
4		SIDE PANEL (R)	1
5		CENTER PANEL (L)	1
6		CENTER PANEL (R)	1
7		SHELF PANEL	1
8		STAND PANEL	1
9		BACK MDF BOARD	1
10		DOOR PANEL	2


CODING


- 336089
- 336032

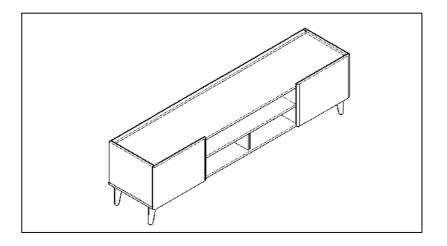

nuhoom.com

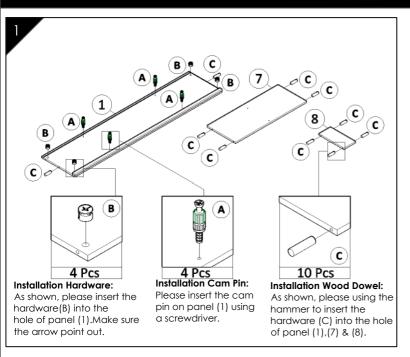

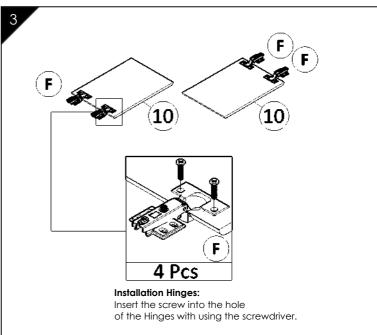

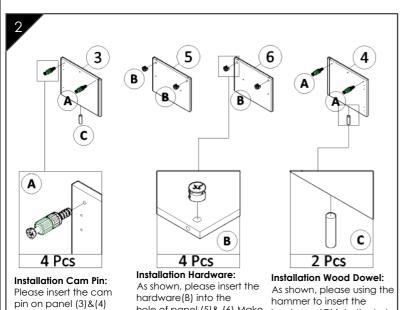


hole of panel (5)& (6).Make

sure the arrow point out.

using a screwdriver.


hardware (C) into the hole

of panel (3) & (4).

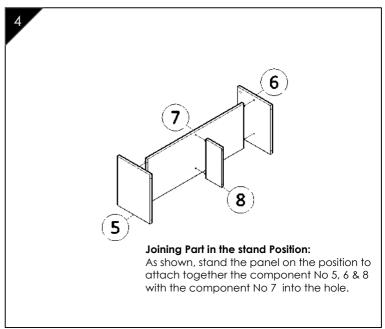



CODING


- 336089
- 336032

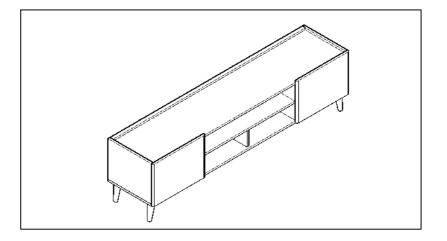


nuhoom.com

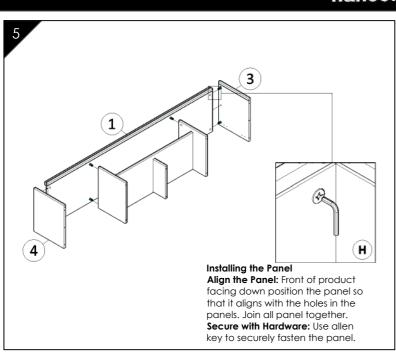

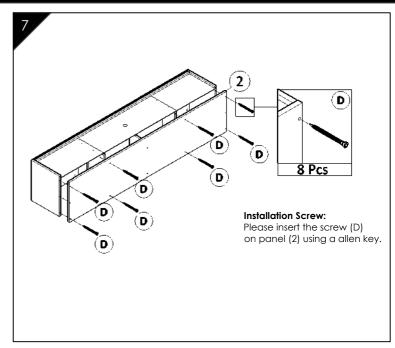


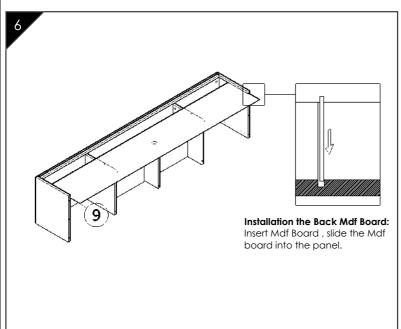

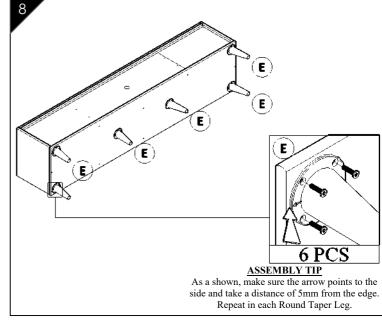



CODING


- 336089
- 336032

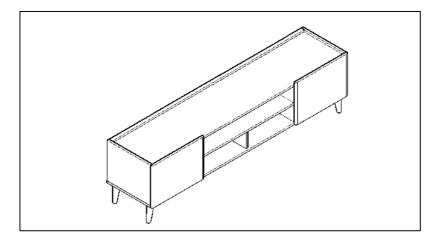


nuhoom.com

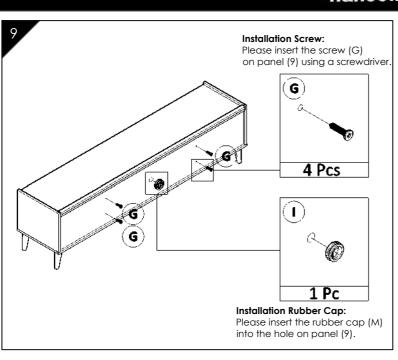

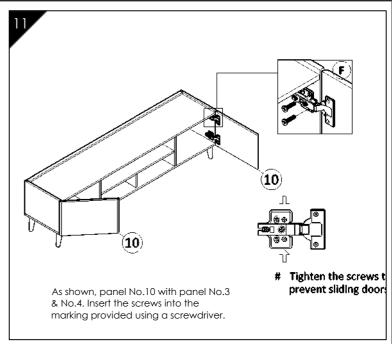

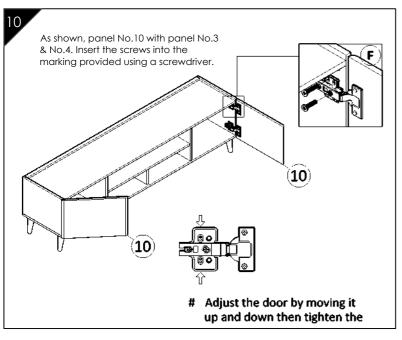

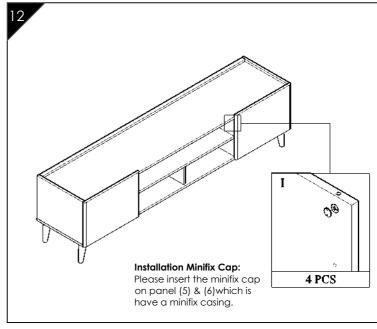





CODING

- 336089

- 336032

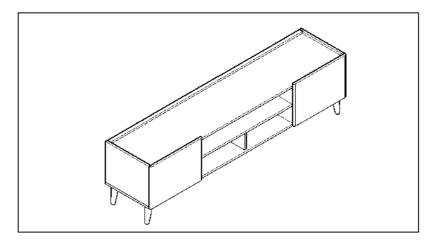

nuhoom.com

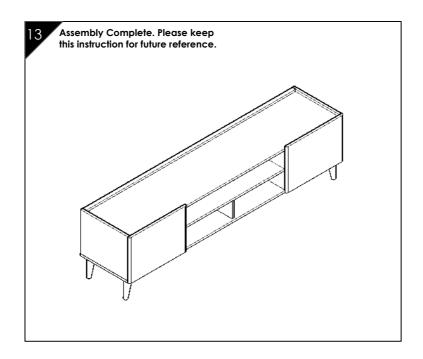




HOW TO ADJUST GLASS/DOORS

There is a gap between the door and the shelf with doors closed

Loosen the back adjustable screw which is one of the two screws looking from the front while supporting the doors, adjust the door by moving it back and forth, then tighten the back screw.

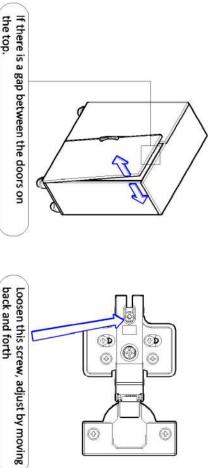


There is a gap on the top of the door when doors are closed

(Glass slide hinge does not require this step)
(4 screw hole hinge does not require ①)

Loosen the slide hinge screw while supporting the door, adjust the door by moving it up and down then tighten the screws.


(Please loosen the slide hinge screws of the door completely you are adjusting

before moving it up and down.)

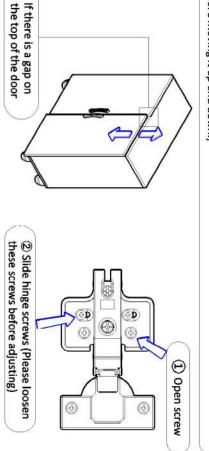

There is a gap in the middle with doors closed

Loosen the 1 back adjustable screw which is one of the two screws looking from the front while supporting the doors, tighten the 2 screw clockwise, then adjust the middle gap. After adjusted, tighten the 1 screw.

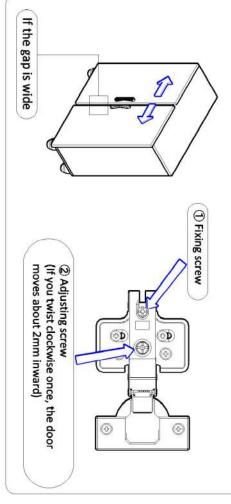

There is a V gap when doors are closed

Loosen the 1 back adjustable screw which is one of the two screws looking from the front while supporting the doors, tighten the 2 screw clockwise, then adjust the middle gap. After adjusted, tighten the 1 screw.

