 


CODING
- 373018

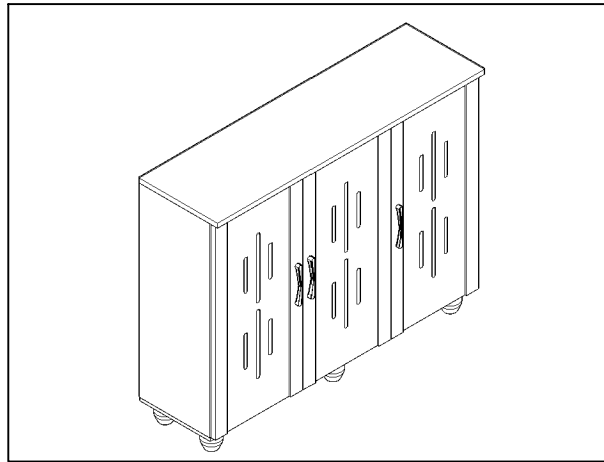

nuhoom.com


Read the instructions carefully. Remove all the wrappings, staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.

CAUTION
KEEP ALL THE PARTS OUT OF CHILDREN'S REACH.





ITEM	PHOTO	HARDWARE NAME	QTY
A		SCREW M7 x 50MM	4
B		WOOD DOWEL M8 x 30MM	12
C		IRON SHELF SUPPORT	18
D		PVC CUP LEG SCREW M4 x 45MM	5 5
E		POWER PIN	30
F		PVC H RAIL	2
G		MINIFIX M5 x 24MM	2
H		MINIFIX CASING	2
I		IRON L-BRACKET SCREW M3 x 12MM	4 8
J		PVC HANDLE SCREW M4 x 30MM	3 6
K		ALLEN KEY	1
NH 58		DOOR HINGES 5/8" SCREW M3.5x16MM	6 36

ITEM	PHOTO	HARDWARE NAME	QTY
1		TOP PANEL	1
2		BOTTOM PANEL	1
3		SIDE PANEL (L)	1
4		SIDE PANEL (R)	1
5		INTERNAL CENTER PANEL	1
6		CENTER STAND PANEL	1
7		BACK MDF BOARD	3
8		DOOR PANEL	3
9		INTERNAL SHELF PANEL	3

 
CODING
- 373018

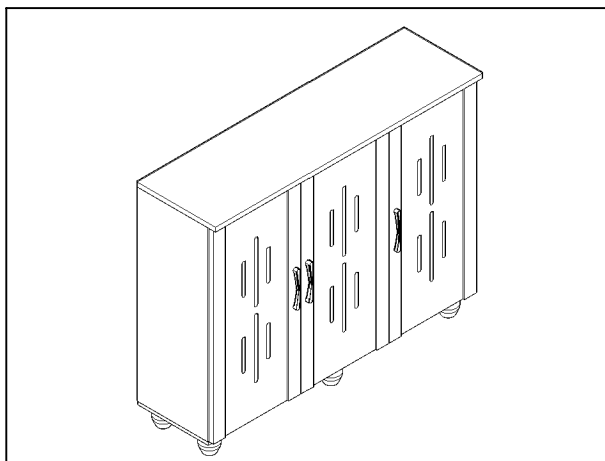

nuhoom.com

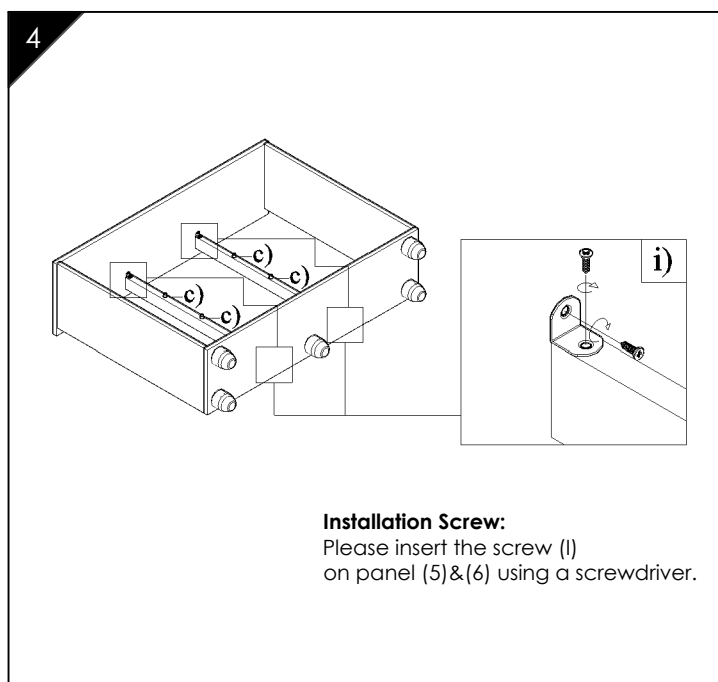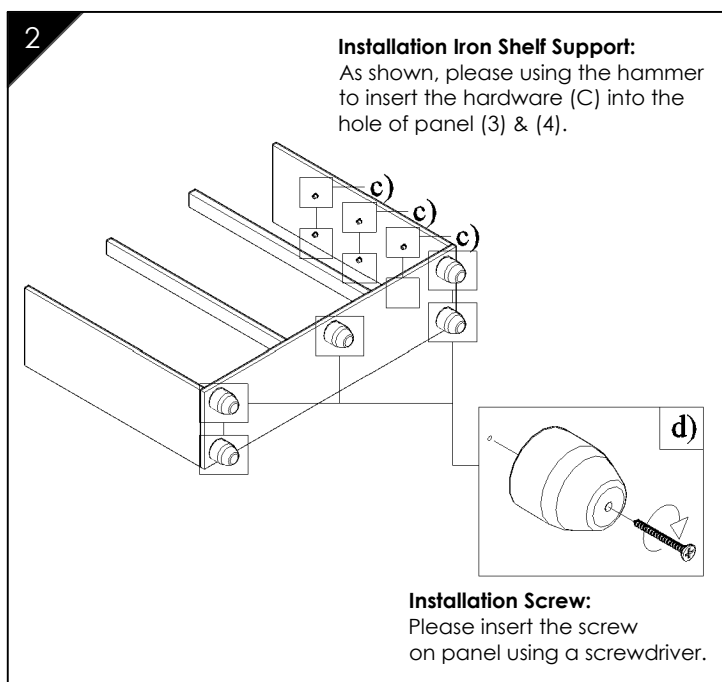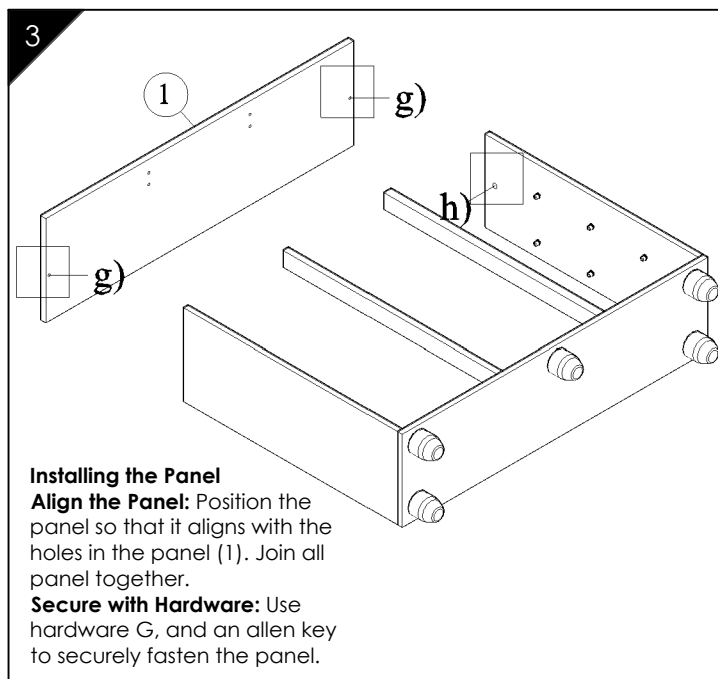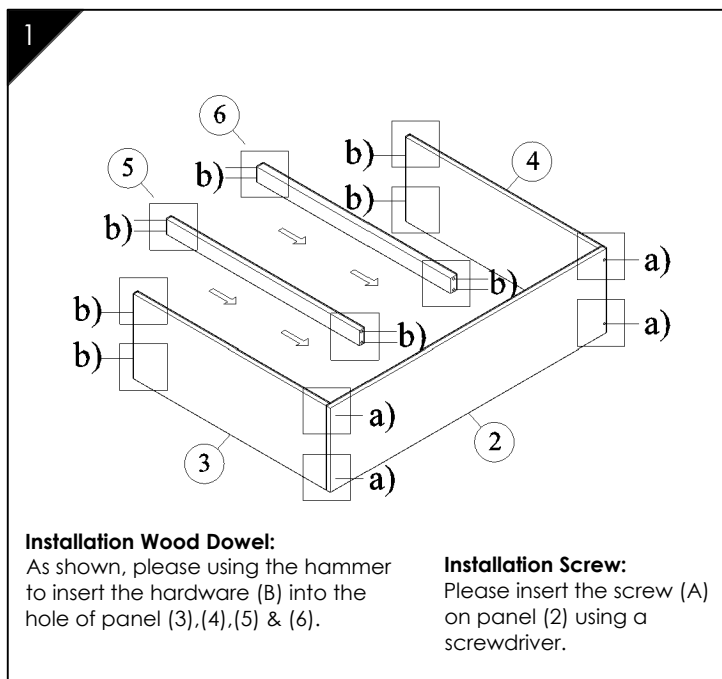    


CODING
- 373018

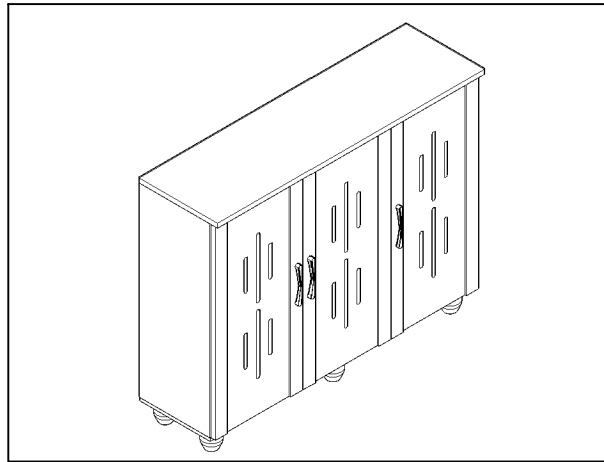 


nuhoom.com

 5

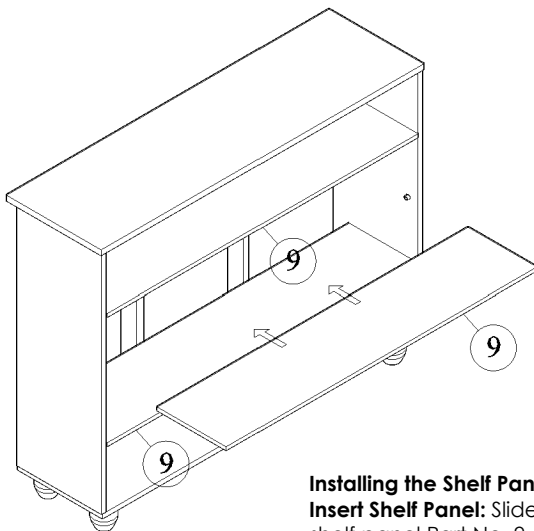


Installing the Shelf Panel:
Insert Shelf Panel: Slide the shelf panel, Part No. 9, into the cabinet.

 7

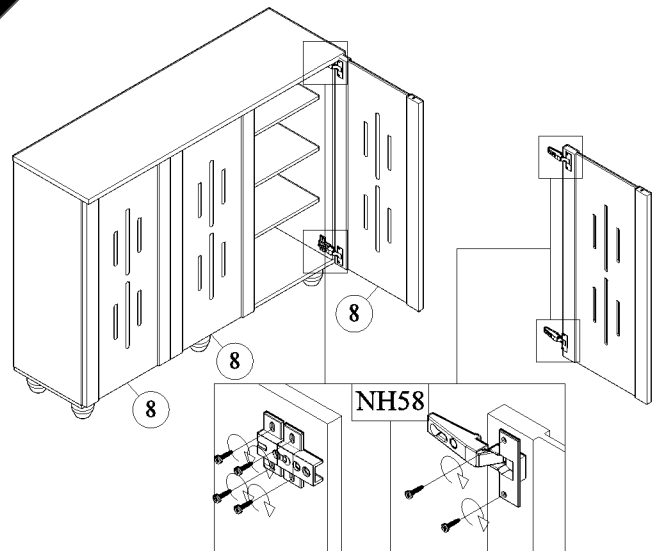

Installation Hinges:
Insert the screw into the hole of the Hinges with using the screwdriver.

 
6

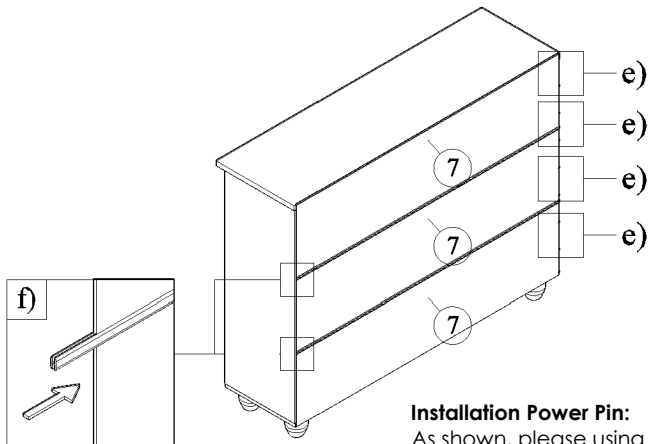

Installation:
As Shown, attach Pvc H Rail (F) between the panel (7) and follow the direction of arrow to insert the Back Mdf Board.


Installation Power Pin:
As shown, please using the hammer to insert the hardware (E) into the panel (7).

 8

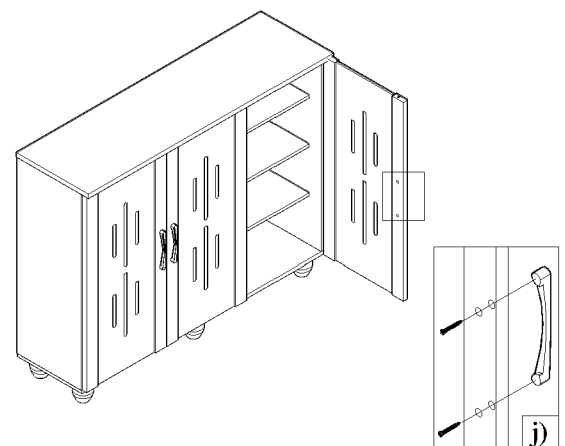


Installation Screw:
Please insert the screw (J) on panel (8) using a screwdriver.

 CODING
- 373018

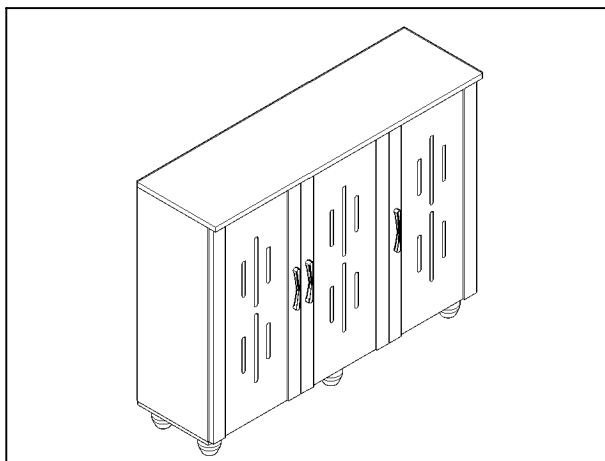

nuhoom.com

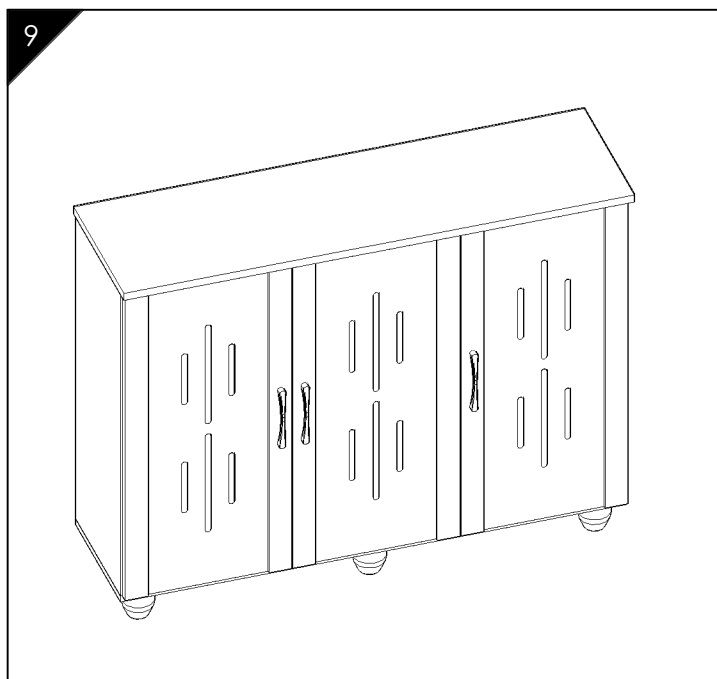 





HOW TO ADJUST GLASS/DOORS

- There is a gap between the door and the shelf with doors closed

Loosen the back adjustable screw which is one of the two screws looking from the front while supporting the doors, adjust the door by moving it back and forth, then tighten the back screw.

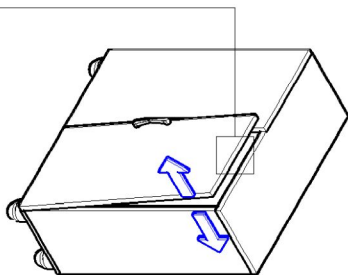

 
If there is a gap between the doors on the top.

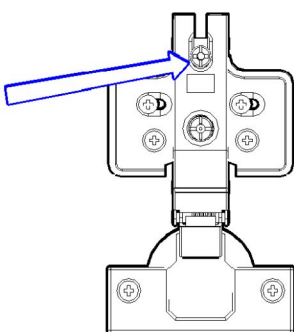


Loosen this screw, adjust by moving back and forth

- There is a gap in the middle with doors closed

 Loosen the ① back adjustable screw which is one of the two screws looking from the front while supporting the doors, tighten the ② screw clockwise, then adjust the middle gap. After adjusted, tighten the ① screw.

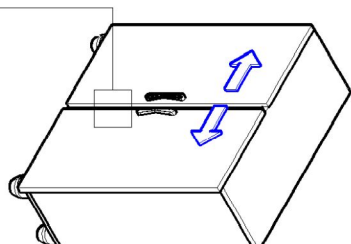

① Fixing screw

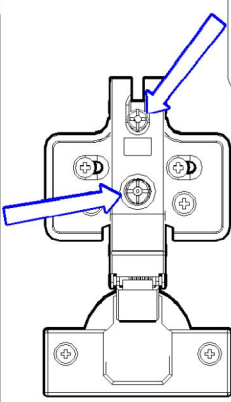 



② Adjusting screw
(If you twist clockwise once, the door moves about 2mm inward)

- There is a V gap when doors are closed

Loosen the ① back adjustable screw which is one of the two screws looking from the front while supporting the doors, tighten the ② screw clockwise, then adjust the middle gap. After adjusted, tighten the ① screw.


If there is a gap between the doors on the top (Please adjust slide hinge the top part door)

  ① Fixing screw

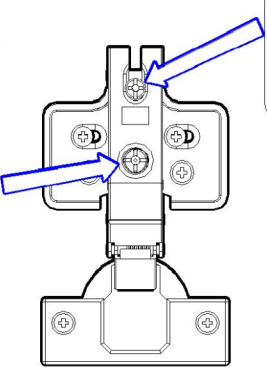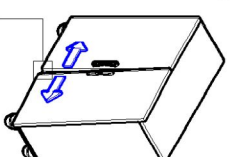


② Adjusting screw
(If you twist clockwise once, the door moves about 2mm inward)

 If there is a gap between the doors on the bottom (Please adjust slide hinge the bottom part door)

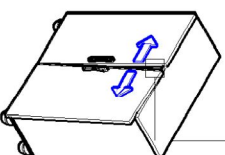


- There is a gap on the top of the door when doors are closed
(Glass slide hinge does not require this step)
(4 screw hole hinge does not require ①)

 Loosen the slide hinge screw while supporting the door, adjust the door by moving it up and down then tighten the screws.
(Please loosen the slide hinge screws of the door completely you are adjusting before moving it up and down.)

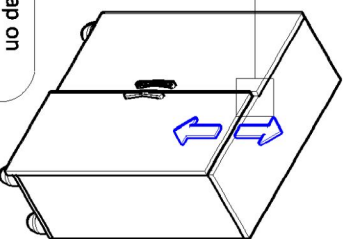

 If there is a gap on the top of the door

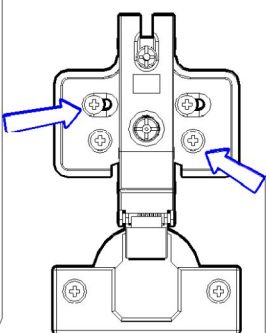

① Open screw

② Slide hinge screws (Please loosen these screws before adjusting)