


CODING
-1119028

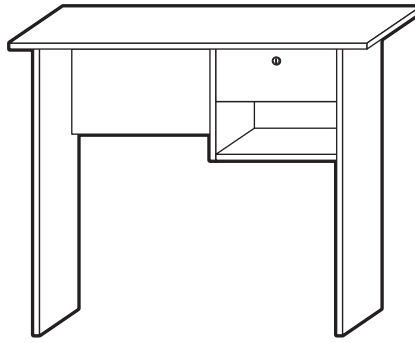











ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS











nuhoom.com

Read the instructions carefully. Remove all the wrappings, staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.


CAUTION

KEEP ALL THE PARTS OUT OF REACH OF CHILDREN.

ITEM	HARDWARE LIST		QTY
①		M4 x 38mm Chipboard Screw	10
②		M4 x 32mm Chipboard Screw	8
③		M3.5 x 16mm Chipboard Screw	6
④		Nail	16
⑤		Wood Dowel 6 x 25mm	16
⑥		Minifix Pin	5
⑦		Minifix Cam	5
⑧		Square Leg	4
⑨		Cam Lock	1
⑩		PVC Drawer Slide	1set

ITEM	PART LIST		QTY
Ⓐ	Centre Panel		1
Ⓑ	Bottom Panel		1
Ⓒ	Back Panel		1
Ⓓ	Left Side Panel		1
Ⓔ	Right Side Panel		1
Ⓕ	Desktop Panel		1
Ⓖ	Drawer Front Panel		1
Ⓗ	Drawer Side Panel		2
Ⓘ	Drawer Back Panel		1
Ⓙ	Drawer Bottom Panel		1


CODING
-1119028

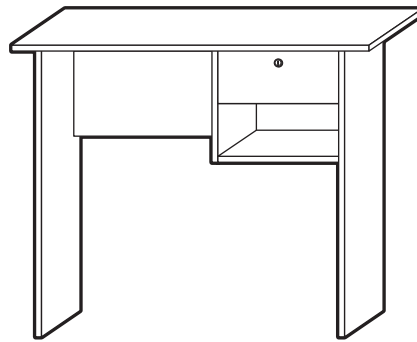


ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

nuhoom.com


Step 1

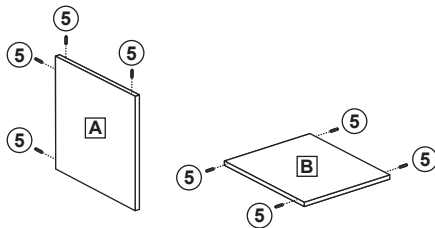


Step 2

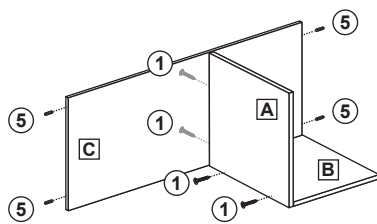


Step 3

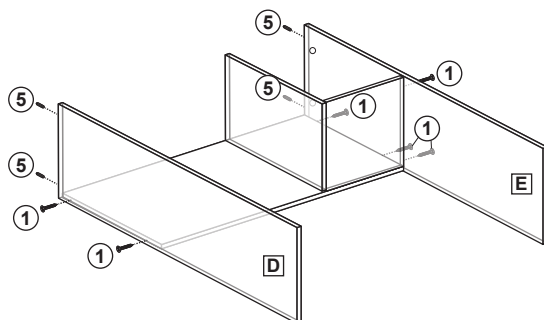


Step 4

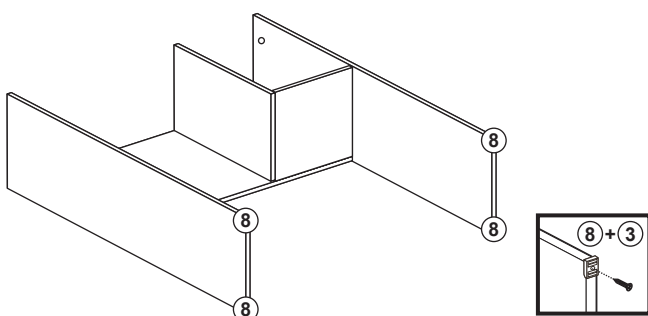

Step 5

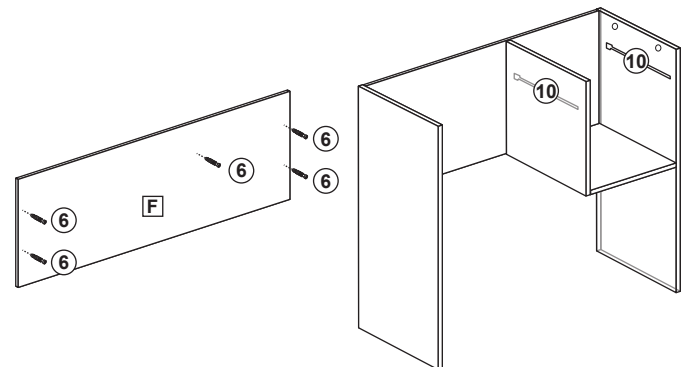

Step 6

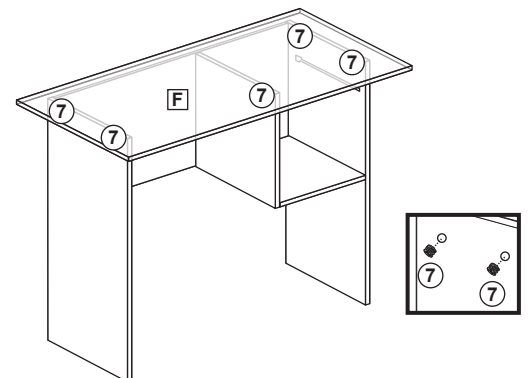

Step 7

