

CODING
-121001



ISO 9001:2015
Reg.No. 000435-1-MY-1-QMS

LUOMA.com

Read the instruction carefully. Remove all the wrapping material, staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Be sure that you have all the parts before you start assembling. Place all the wooden furniture part on a clean and flat soft surface, such as carpet or rubbermat to prevent from scratches.

CAUTION
KEEP ALL THE PARTS OUT OF REACH OF CHILDREN.

ITEM	PHOTO	HARDWARE NAME	QTY
(A)		Bolt M6x15	8
(B)		Screw Ø4x10	4
(C)		Allen key 4 mm	1
(D)		Adjustable foot Ø13x15	4

ITEM	PHOTO	PARTS NAME	QTY
(1)		Left side	1
(2)		Right side	2
(3)		Rail (L=318mm)	4
(4)		Top plate	1


CODING
-121001




ISO 9001:2015
Reg.No. 000435-1-MY-1-QMS

LUOMA.COM

1

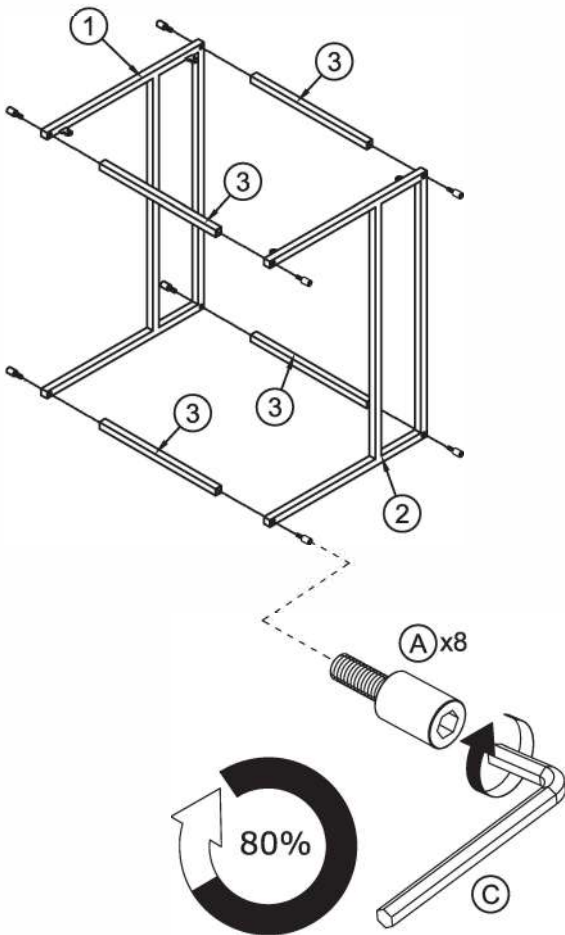

2

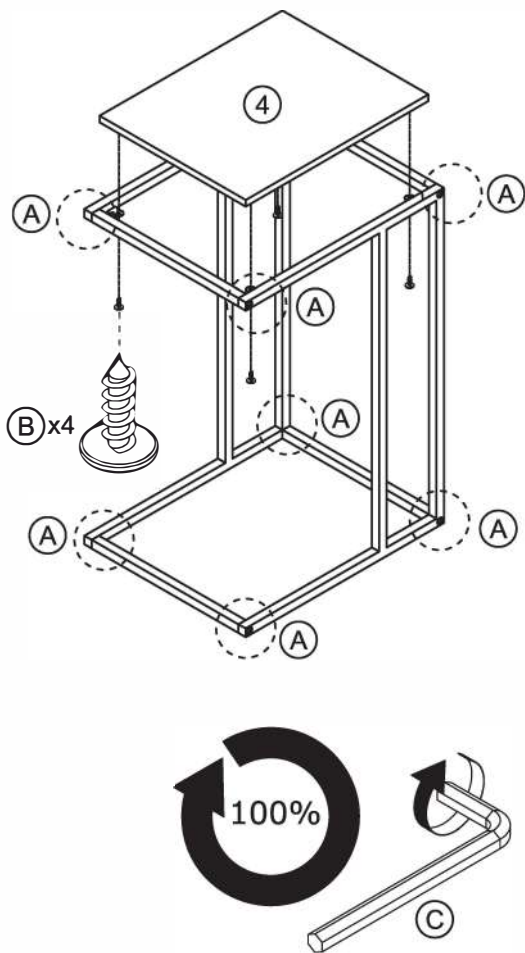

CODING
-121001



ISO 9001:2015
Reg.No. 000435-1-MY-1-QMS

LUOMA.COM

3

