

CODING

122007



ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

nuhoom.com


Read the instructions carefully. Remove all the wrappings , staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.

CAUTION

KEEP ALL THE PARTS OUT OF CHILDREN'S REACH.

CAUTION

KEEP ALL THE PARTS OUT OF CHILDREN'S REACH.

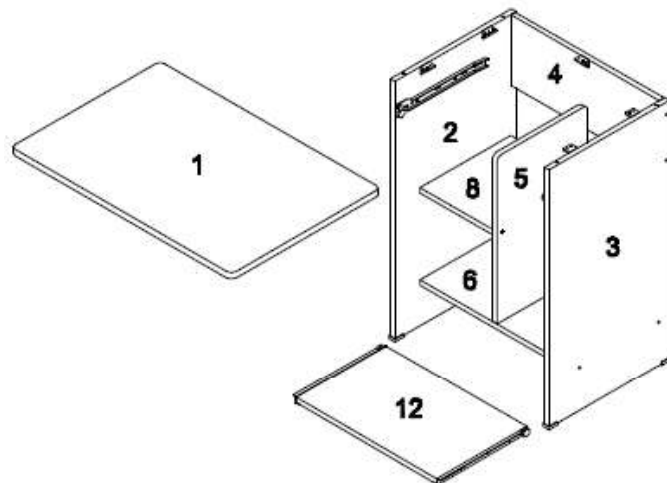

ITEM	PHOTO	HARDWARE NAME	QTY
(A)		JCBC SCREW 40MM	15 PCS
(B)		ALLEN KEY	1 PC
(C)		SCREW 16MM	32 PCS
(D)		WOOD DOWEL 25MM	18 PCS
(E)		L BRACKET	5 PCS
(F)		METAL DRAWER SLIDE	1 SET
(G)		PVC LEG	4 PCS

ITEM	PHOTO	PARTS NAME	QTY
(1)		TOP PANEL	1 PC
(2)		LEFT SIDE PANEL	1 PC
(3)		RIGHT SIDE PANEL	1 PC
(4)		BACK PANEL	1 PC
(5)		CENTER PANEL	1 PC
(6)		BOTTOM PANEL	1 PC
(8)		SHELF PANEL	1 PC
(12)		SLIDE PANEL	1 PC

CODING
122007



ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

nuhoom.com

