

**CODING**  
-123009



**ISO 9001:2015**  
Reg.No. 000435-1-MY-1-QMS

**LUOMA.COM**

Read the instruction carefully. Remove all the wrapping material, staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Be sure that you have all the parts before you start assembling. Place all the wooden furniture part on a clean and flat soft surface, such as carpet or rubbermat to prevent from scratches.

**CAUTION**  
KEEP ALL THE PARTS OUT OF REACH OF CHILDREN.

ITEM	PHOTO	HARDWARE NAME	QTY
(A)		Bolt M6x15	6
(B)		Bolt M6x15	1
(C)		Bolt M6x12	4
(D)		Screw Ø4x12	4
(E)		Nut M6	1
(F)		Spanner	1
(G)		Allen key 4 mm	1

ITEM	PHOTO	PARTS NAME	QTY
①		Left side	1
②		Right side	1
③		Top rail (L=968mm)	2
④		Bottom rail (L=968mm)	1
⑤		Middle rail (L=1100mm)	2
⑥		Top plate	1


**CODING**  
-123009



**ISO 9001:2015**  
Reg.No. 000435-1-MY-1-QMS

**LUOMA.COM**

1

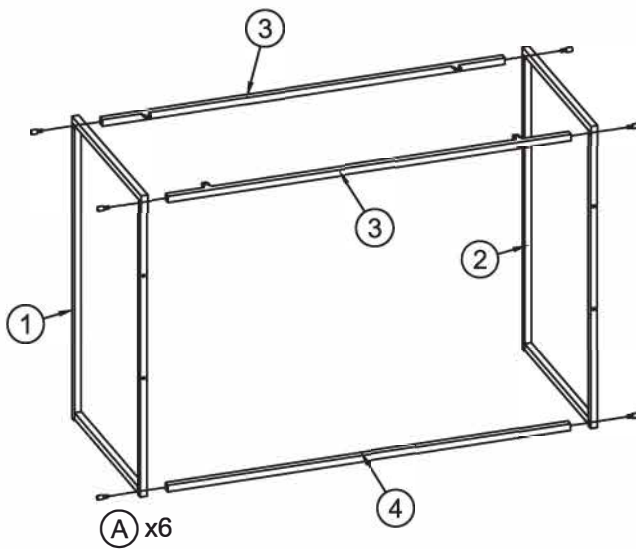

2

