

CODING
- 123021




ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

nuhoom.com

Read the instructions carefully. Remove all the wrappings , staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.

CAUTION
KEEP ALL THE PARTS OUT OF CHILDREN'S REACH.

CAUTION
KEEP ALL THE PARTS OUT OF CHILDREN'S REACH.

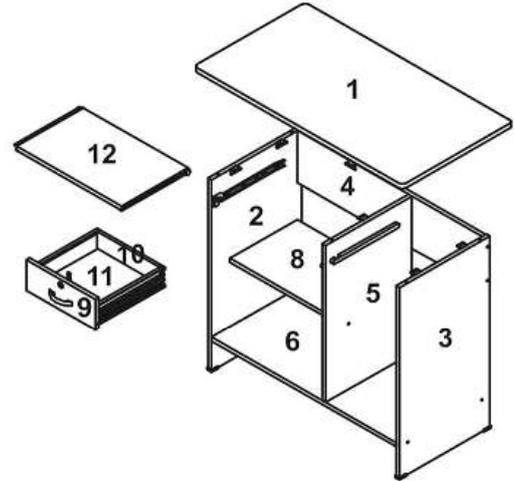

ITEM	PHOTO	HARDWARE NAME	QTY
(A)		JCBC SCREW 40MM	16 PCS
(B)		ALLEN KEY	1 PC
(C)		SCREW 16MM	40 PCS
(D)		SCREW 25MM	6 PCS
(E)		WOOD DOWEL 25MM	21 PCS
(F)		HANDLE	1 PC
(G)		L BRACKET	6 PCS
(H)		METAL DRAWER SLIDE	1 SET
(I)		PVC DRAWER SLIDE	2 PCS
(J)		DRAWER SLIDE PANEL	2 PCS
(K)		LOCK	1 SET
(L)		PVC LEG	4 PCS
(M)		NAIL	5 PCS

ITEM	PHOTO	PARTS NAME	QTY
(1)		TOP PANEL	1 PC
(2)		LEFT SIDE PANEL	1 PC
(3)		RIGHT SIDE PANEL	1 PC
(4)		BACK PANEL	1 PC
(5)		CENTER PANEL	1 PC
(6)		BOTTOM PANEL	1 PC
(8)		SHELF PANEL	1 PC
(9)		DRAWER FRONT PANEL	1 PC
(10)		DRAWER BACK PANEL	1 PC
(11)		DRAWER BOTTOM PANEL	1 PC
(12)		SLIDE PANEL	1 PC

CODING
- 123021



ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

nuhoom.com

