

CODING

-123044




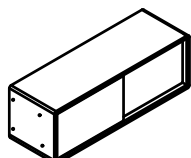
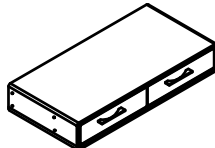
ISO 9001:2015
Reg. No. 000435-I-MY-I-QMS

fyndfurniture.com

Read the instruction carefully. Remove all the wrapping material, staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Be sure that you have all the parts before you start assembling. Place all the wooden furniture part on a clean and flat soft surface, such as carpet or rubbermat to prevent from scratches.

Caution**KEEP ALL PARTS OUT OF REACH OF CHILDREN.**

ITEM	HARDWARE LIST	QTY
Ⓐ	JCBC SCREW M6 X 35MM 	16
Ⓑ	SPRING WASHER 5/16" 	16
Ⓒ	FLAT WASHER 5/16" 	16
Ⓓ	ALLEN KEY M6 	1
Ⓔ	ASSEMBLY SCREW 	2
Ⓕ	CAM 	2
Ⓖ	WOOD DOWEL 	4

ITEM	PART LIST	QTY
①	TIER 1 	1
②	TIER 2 	1
③	SUPPORT BAR (L&R) 	1
④	LOWER SUPPORT BAR 	1

CODING

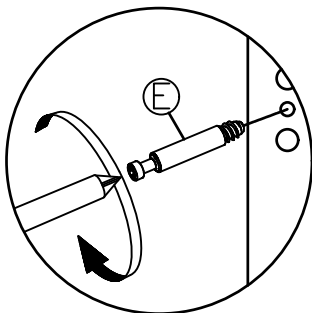
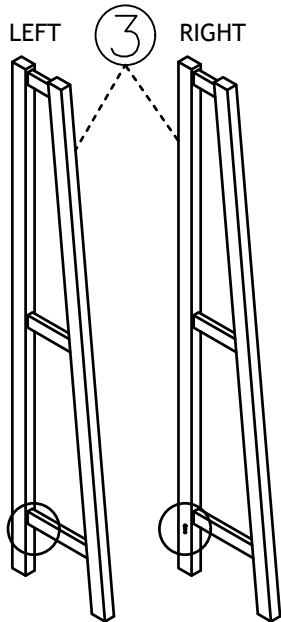
-123044



ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

fyndfurniture.com

1



2

