

CODING

-124016


ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

fynd.
FURNITURE

Read the instruction carefully. Remove all the wrapping material. Staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Be sure that you have all the parts before you start assembling. Place all the wooden furniture part on a clean and flat soft surface, such as carpet or rubbermat to prevent from scratches

CAUTION
KEEP ALL THE PARTS OUT REACH OF CHILDREN

ITEM.	PHOTO.	HARDWARE NAME	Q'TY
A		BOLTS M6 x 20	16
B		WASHERS M6 x 19	18
C		LOCK WASHERS M6 x 11	16
D		ALLEN KEY 4	1
E		BOLTS M6 x 45	2

ITEM.	PHOTO.	PART NAME	SPARE Q'TY
①		TOP	1
②		LEGS	2
③		SUPPORT BAR	1


CODING
-124016



ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

fynd.
FURNITURE

1

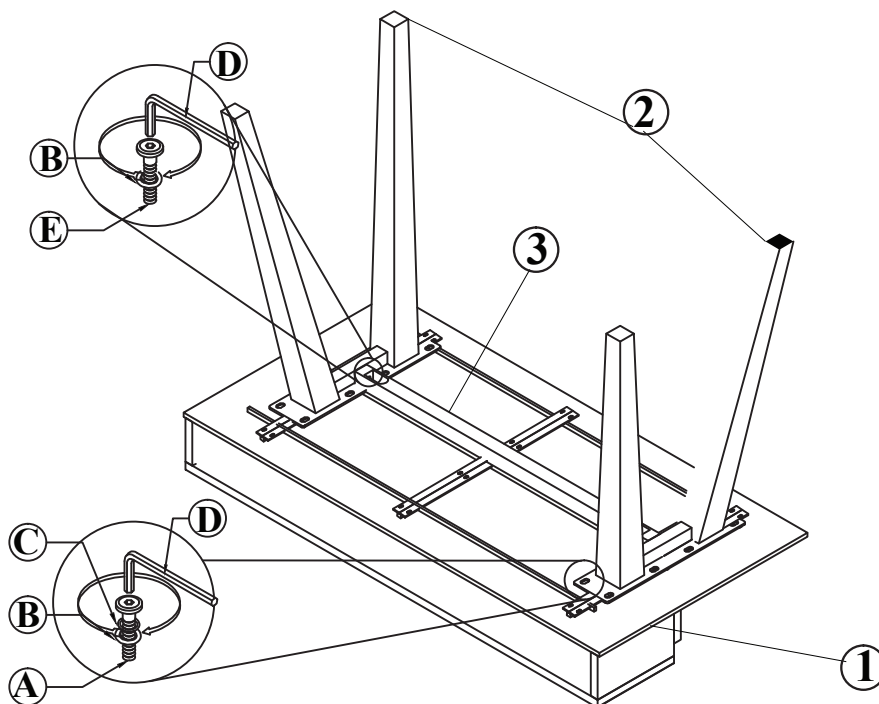

2

