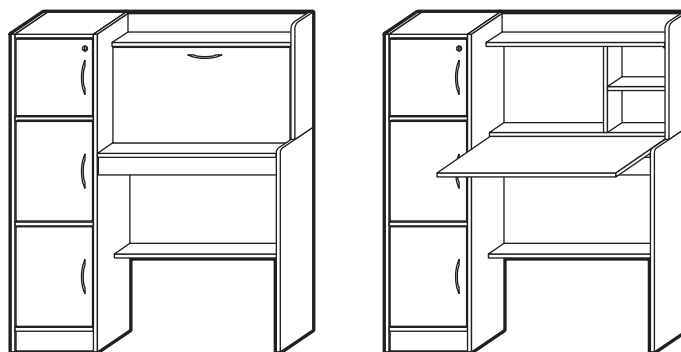


CODING

-124019
-124020
-124021



ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS












nuhoom.com

Read the instructions carefully. Remove all the wrappings , staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.

CAUTION


KEEP ALL THE PARTS OUT OF REACH OF CHILDREN.

ITEM	HARDWARE LIST		QTY
①		M5 x 40mm JCBCW Screw	29
②		M4 x 25mm Chipboard Screw	11
③		M3.5 x 16mm Chipboard Screw	16
④		M3 x 12mm Chipboard Screw	4
⑤		Nail	100
⑥		Wood Dowel 6 x 25mm	46
⑦		Magnet	4
⑧		Magnet Plate	4
⑨		Black Door Spring	2
⑩		Door Stopper	1
⑪		Square Leg (End)	6
⑫		L Bracket	1
⑬		Handle	4
⑭		Cam Lock 40mm	1
⑮		Shelf Holder	4
⑯		Door Support	6
⑰		Allen Key	1

ITEM	PART LIST		QTY
Left Part			
Ⓐ	Left Side Panel		1
Ⓑ	Right Side Panel		1
Ⓒ	Shelf Panel		4
Ⓓ	Bottom Brace Panel		1
Ⓔ	Back Panel		1
Ⓕ	Door(S) Panel		1
Ⓖ	Door(M) Panel		2
Right Part			
Ⓕ	Right Up Panel		1
Ⓖ	Right Down Panel		1
Ⓖ	780 x 70mm Panel		3
Ⓖ	780 x 170mm Panel		1
Ⓖ	780 x 189mm Panel		1
Ⓖ	780 x 196mm Panel		2
Ⓖ	332 x 168 Panel		1
Ⓖ	Shelf(S) Panel		1
Ⓖ	Door(L) Panel		1
Ⓖ	Drawer Bottom Panel		1
Ⓖ	Drawer Bottom Panel		1
Ⓖ	Drawer Bottom Panel		1

CODING

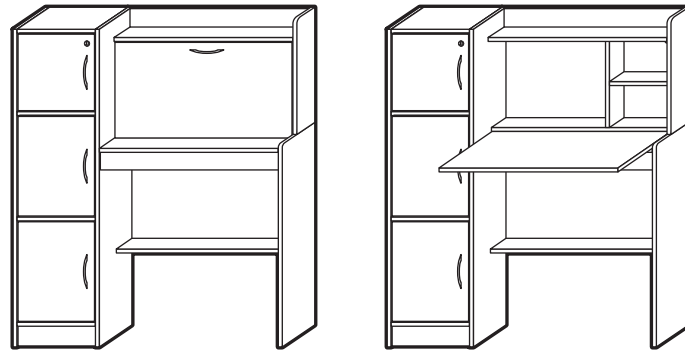
-124019
-124020
-124021




ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

nuhoom.com

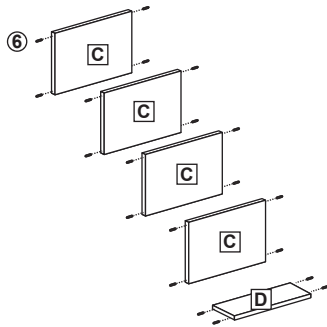
Step 1



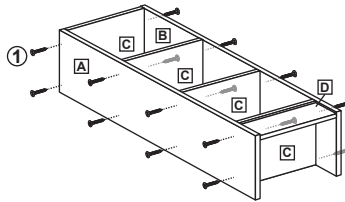
Step 2



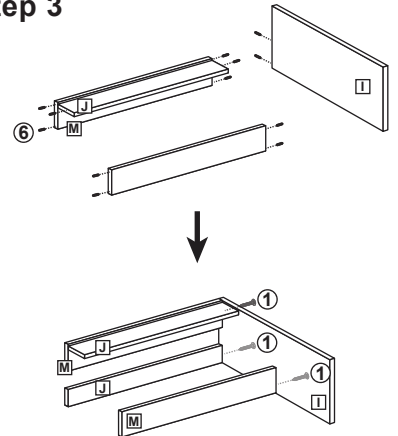
Step 3



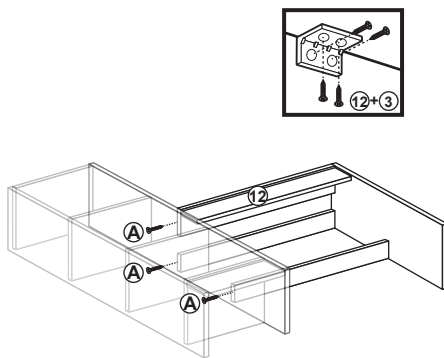
Step 4



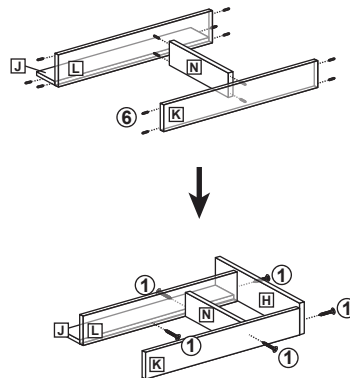
Step 5



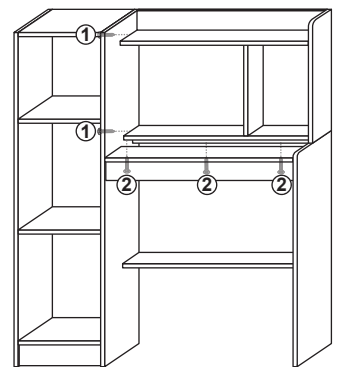Step 6



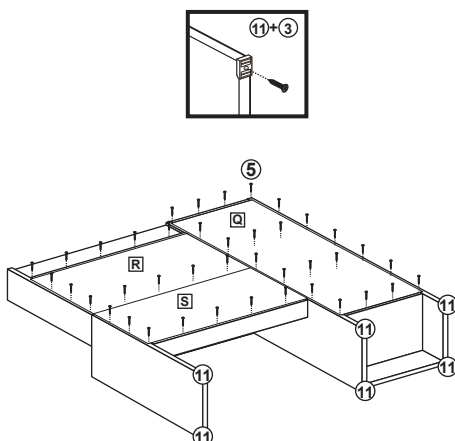Step 7



Step 8

