RHODES

CODING - 124070



ISO 9001:2015

nuhoom.com

Read the instructions carefully. Remove all the wrappings, staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.

CAUTION
KEEP ALL THE PARTS OUT OF CHILDREN'S REACH.

HARDWARE				
Α	MINI FIX A1 A2 CC	™ A3 💮	37 SETS	
В	M8 X 30MM WOOD DOWEL		40 PCS	
С	M6 X 50MM CSK CAP WOOD SCREW	(Immunum>	4 PCS	
D	ALLEN KEY M4		1 PC	
Е	M3.5 X 16MM C.B SCREW	Januaro -	48 PCS	
F	M4 X 25MM C.B SCREW	Ф ининии-	4 PCS	
G	M4 X 38MM C.B SCREW	Ф ининия	4 PCS	
Н	5/8 NAIL	0	39 PCS	
ı	5/8 PVC NAIL LEG	0	6 PCS	
J	METAL SHELF SUPPORT		4 PCS	
K	SOFT CLOSING 7/8 HINGES		6 PCS	
L	WIRE CAP (35MM)	9	1 PC	
М	311 KNOD (GOLDEN 3106)	\bigcirc	4 PCS	
N	14" DRAWER SLIDE		D('	
0	STOPPER(2 PIN)		2 PCS	

SELF-PREPARED TOOLS: Tools below are NOT included in package.				
SCREWDRIVER	HAMMER			


PART LIST		QTY
1	UP TOP PANEL	1 PC
2	UP MIDDLE PANEL	1 PC
3	UP SIDE PANEL - L	1 PC
4	UP SIDE PANEL - R	1 PC
5	UP CENTER PANEL - L	1 PC
6	UP CENTER PANEL - R	1 PC
7	UP MIDDLE SMALL	1 PC
8	UP BACK PANEL	1 PC
9	UP DOOR PANEL - L&R	2 PCS
10	TOP PANEL	1 PC
11	BOTTOM PANEL	1 PC
12	SIDE PANEL - L	1 PC
13	SIDE PANEL - R	1 PC
14	CENTER PANEL	1 PC
15	SHELF PANEL	1 PC
16	BACK PANEL	1 PC
17	BACK BOARD	1 PC
18	DOOR PANEL	1 PC
19	DRAWER FRONT	1 PC
20	DRAWER BACK	1 PC
21	DRAWER SIDE - L	1 PC
22	DRAWER SIDE - R	1 PC
23	DRAWER BOTTOM	1 PC


- 124070




ISO 9001:2015

nuhoom.com

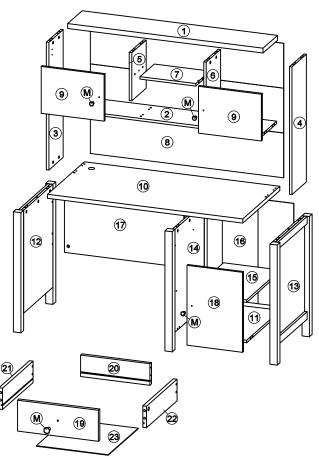


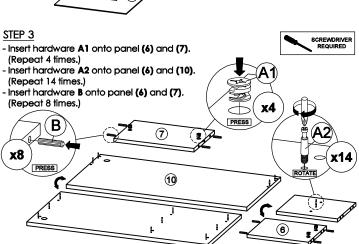


* Ensure the arrows on hardware A1 point towards mounting positions.

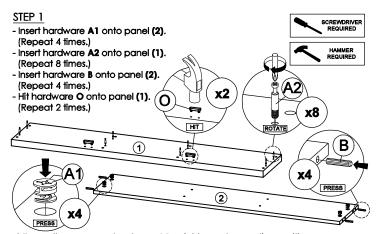

* Ensure the arrows on hardware A1 point towards mounting positions.

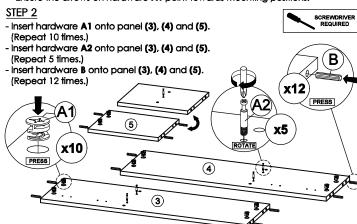

* Ensure the arrows on hardware A1 point towards mounting positions.

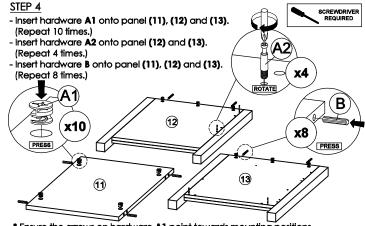


* Ensure the arrows on hardware A1 point towards mounting positions.


- 124070




ISO 9001:2015


nuhoom.com

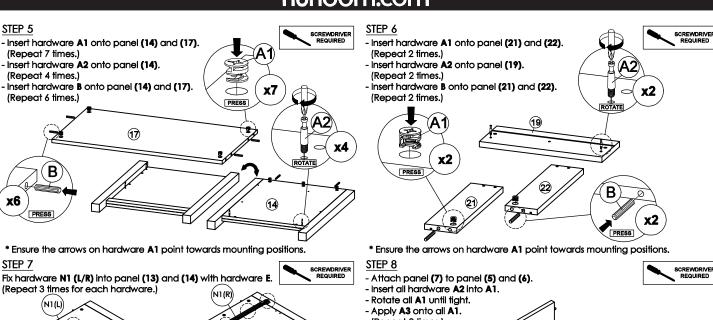


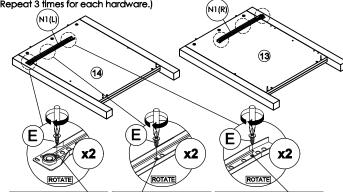

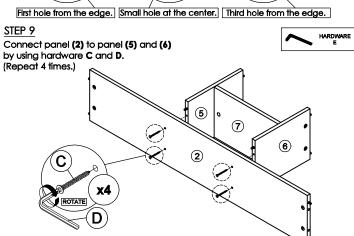

* In this step hardware B are pre-inserted.

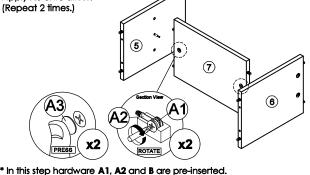

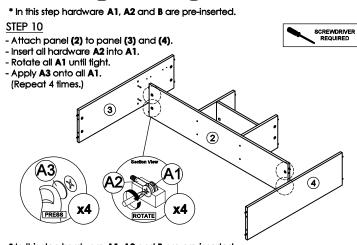

* In this step hardware A1, A2 and B are pre-inserted.

* In this step hardware A1, A2 and B are pre-inserted.


CODING

- 124070



ISO 9001:2015



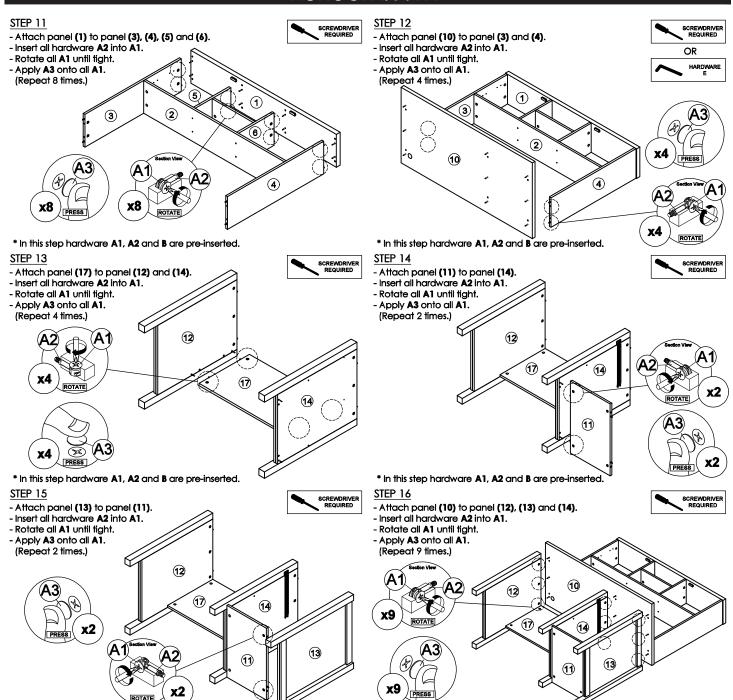


* In this step hardware A1, A2 and B are pre-inserted.

- 124070




ISO 9001:2015

nuhoom.com

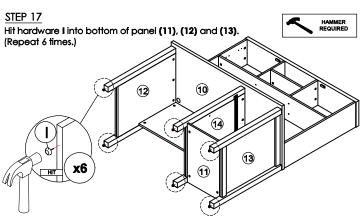


Assemble panel (8) and (16) to entire body with hardware H. (Repeat 39 times.)

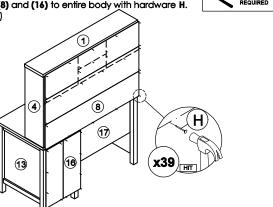

STEP 19


- Insert hardware **J** into mounting positions on panel **(13)** and **(14)** by hand. (Repeat 4 times.)

- Assemble the panel (15) into between panel (13) and (14). (Repeat 1 times.)

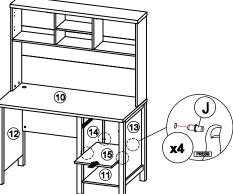


STEP 20

Fix hardware **M** onto panel **(19)** by using hardware **F**. (Repeat 1 times for each hardware.)

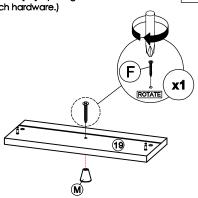

STEP 21


Assemble panel (20) with panel (21) and (22) by using hardware G.

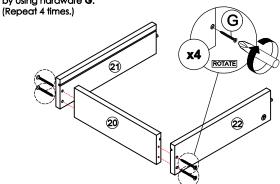

STEP 22

SCREWDRIVER REQUIRED

Insert the panel **(23)** along the slot. (Repeat 1 times.)

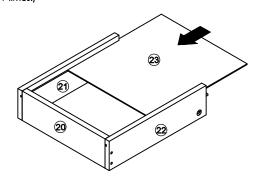


- 124070



ISO 9001:2015


nuhoom.com

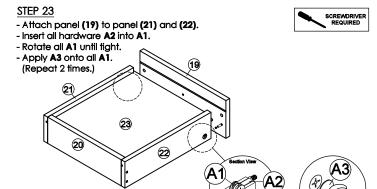


* In this step hardware A1, A2 and B are pre-inserted.

STEP 25


Put all the drawer in place along the drawer slides.

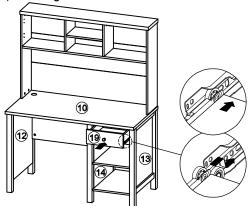

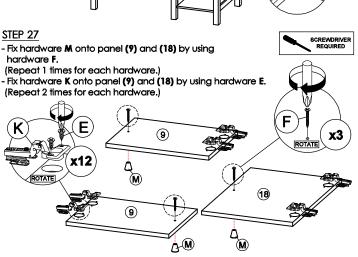

STEP 24


Assemble hardware N2 (L/R) to panel (21) and (22) by using

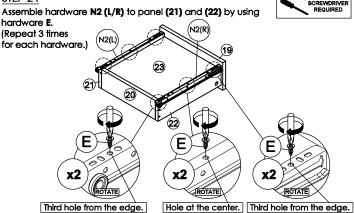


*Hardware N2 (L/R) shall be leaning against panel (19) when assembling.

STEP 26


Insert hardware Linto mounting positions on panel (10) by hand. (Repeat 1 times.)

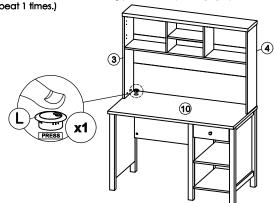



position of panel (9) and (18). (Do only when needed.) STEP 3



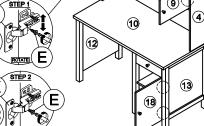

* In this step hardware K have been assembled in panel (9) and (18).

SCREWDRIVER REQUIRED