
CODING -124090

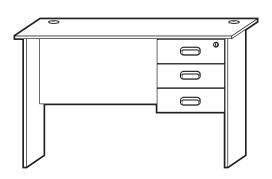

ISO 9001:2015

nuhoom.com


Read the instructions carefully. Remove all the wrappings, staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.

CAUTION KEEP ALL THE PARTS OUT OF REACH OF CHILDREN.

ITEM		HARDWARE LIST	QTY
1	(1)	M4 x 45mm Chipboard Screw	8
2	⊕ ф	M4 x 38mm Chipboard Screw	24
3	(1)	M4 x 28mm Chipboard Screw	6
4	⊕ \$==	M3.5 x 16mm Chipboard Screw	12
(5)		Wood Dowel 6 x 25mm	13
6		Minifix Pin	5
7		Minifix Cam	5
8		Square Leg	4
9	A	Drawer Lock	1
10		PVC Drawer Slide	3set
11		Handle	3
12		L Bracket	1
13	0	Wire Hole Cover	2

ITEM	PART LIST		
A	Centre Panel	1	
B	Bottom Panel	1	
©	Back Panel	1	
(D)	Left Side Panel	1	
E	Right Side Panel	1	
F	Desktop Panel	1	
G	Drawer Front Panel	3	
\bigcirc	Drawer Side Panel	6	
	Drawer Back Panel	3	
J	Drawer Bottom Panel	3	


CODING -124090

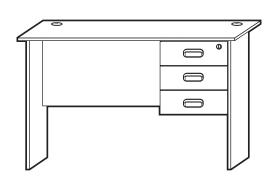


ISO 9001:2015

nuhoom.com


Step 1

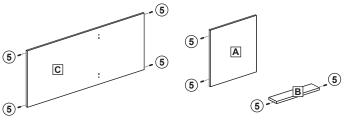



Step 2

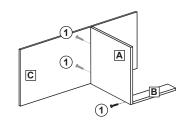


Step 3

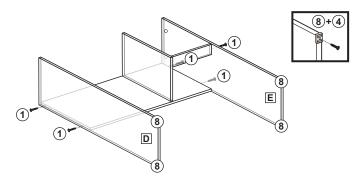


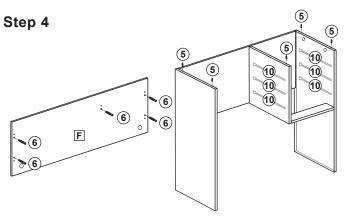

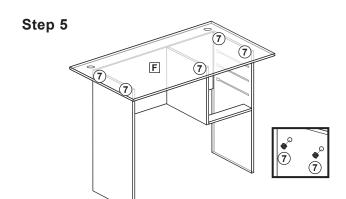

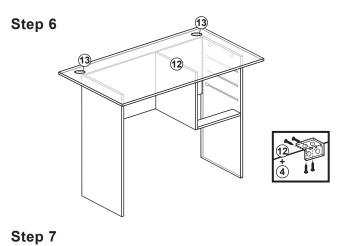

2 H G H 2 2

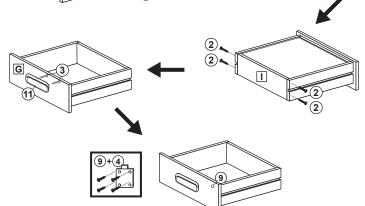

2/2