


CODING -125007

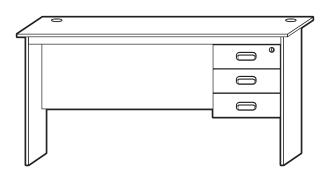

ISO 9001:2015

ASSEMBLY GUIDE

nuhoom.com


Read the instructions carefully. Remove all the wrappings, staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.

CAUTION KEEP ALL THE PARTS OUT OF REACH OF CHILDREN.

ITEM		HARDWARE LIST	QTY
1	(1)	M4 x 45mm Chipboard Screw	14
2	(4)	M4 x 32mm Chipboard Screw	24
3	*	M4 x 25mm Chipboard Screw	8
4	(4)	M3.5 x 16mm Chipboard Screw	40
(5)	ı	Nail	30
6		Wood Dowel 6 x 25mm	18
7		Minifix Pin	4
8		Minifix Cam	4
9		Square Leg	4
10	A	Drawer Lock	1
11)		Handle	3
12		L Bracket	2
13	E200 00 0000	Drawer Slide	3
14)		Drawer Slide	3
15	⊕ (j	M4 x 28mm Chipboard Screw	6
16	9	Wire Hole Cover	2


ITEM	PART LIST		
A	Left Side Panel	1	
B	Right Side Panel	1	
©	Back Panel	1	
(D)	Front Brace Panel	1	
(E)	Desktop Panel	1	
F	Left Side Panel (Drawer)	1	
G	Right Side Panel (Drawer)	1	
\bigcirc	Brace Panel (Drawer)		
	Drawer Front Panel		
J	Drawer Side Panel		
K	Drawer Back Panel		
L	Drawer Bottom Panel		


CODING -125007

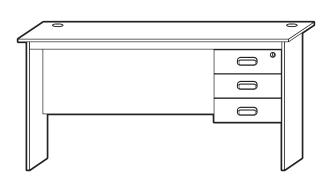


ISO 9001:2015


nuhoom.com

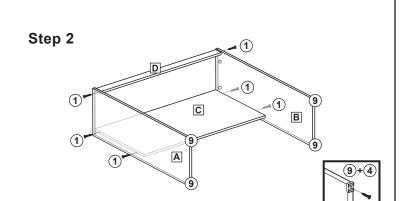


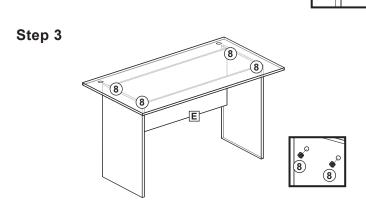

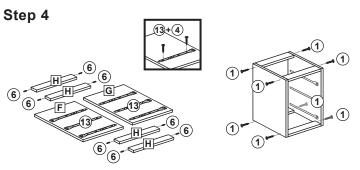




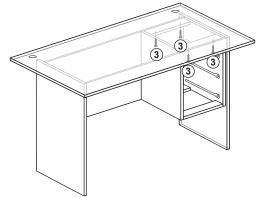

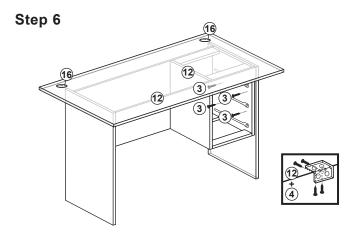

Step 7

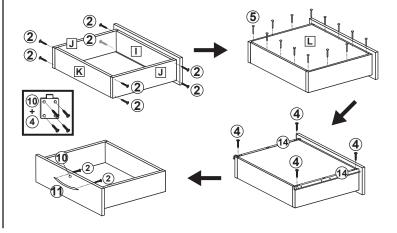

2/2