


CODING
- 125009

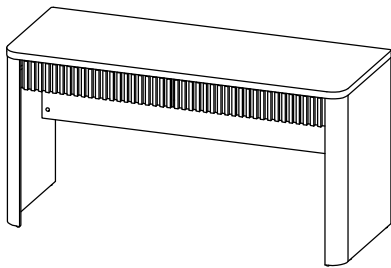

ISO 9001:2015
Reg. No. 000435-1-007-1-QMS



nuhoom.com

Read the instructions carefully. Remove all the wrappings , staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.

CAUTION
KEEP ALL THE PARTS OUT OF CHILDREN'S REACH.


HARDWARE			
A	MINI FIX	A1 A2 A3	36 SETS
B	M8 X 30MM WOOD DOWEL		29 PCS
C	ALLEN KEY M4		1 PC
D	M3.5 X 16MM C.B SCREW		24 PCS
E	M4 X 38MM C.B SCREW		8 PCS
F	5/8 PVC NAIL LEG		6 PCS
G	12" DRAWER SLIDE	G1 (L/R) G2 (L/R)	2 SETS

PART LIST		QTY
1	TOP PANEL	1 PC
2	SIDE PANEL (L)	1 PC
3	SIDE PANEL (R)	1 PC
4	SIDE SUPPORT (L)	1 PC
5	SIDE SUPPORT (R)	1 PC
6	CENTER PANEL	1 PC
7	BACK PANEL	1 PC
8	LEG CORNER (L)	1 PC
9	LEG CORNER (R)	1 PC
10	DRAWER FRONT (L)	1 PC
11	DRAWER FRONT (R)	1 PC
12	DRAWER BACK	2 PCS
13	DRAWER SIDE (L)	2 PCS
14	DRAWER SIDE (R)	2 PCS
15	DRAWER BOTTOM	2 PCS
16	DRAWER BONE	2 PCS

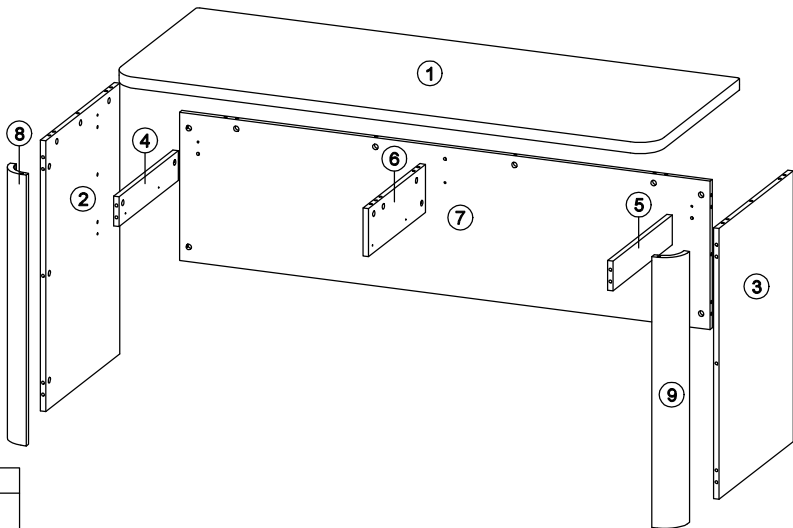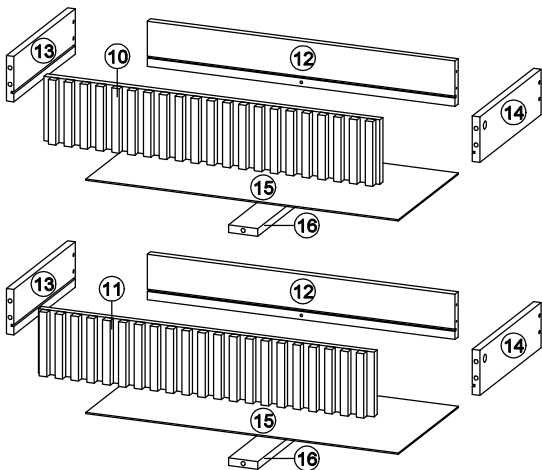

SELF-PREPARED TOOLS: Tools below are NOT included in package.	
SCREWDRIVER	HAMMER

CODING
- 125009

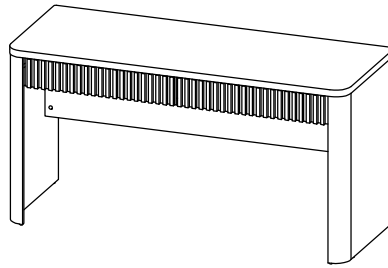


ISO 9001:2015
Reg. No. 000435-1-KTY-1-QMS

nuhoom.com


STEP 1

- Insert hardware **A2** onto panel (1), (2), (3), (7), (8), (9), (10), (11) and (12).
(Repeat 36 times.)
- Insert hardware **B** into panel (2), (3), (4), (5), (6), (7), (8), (9), (13) and (14).
(Repeat 29 times.)

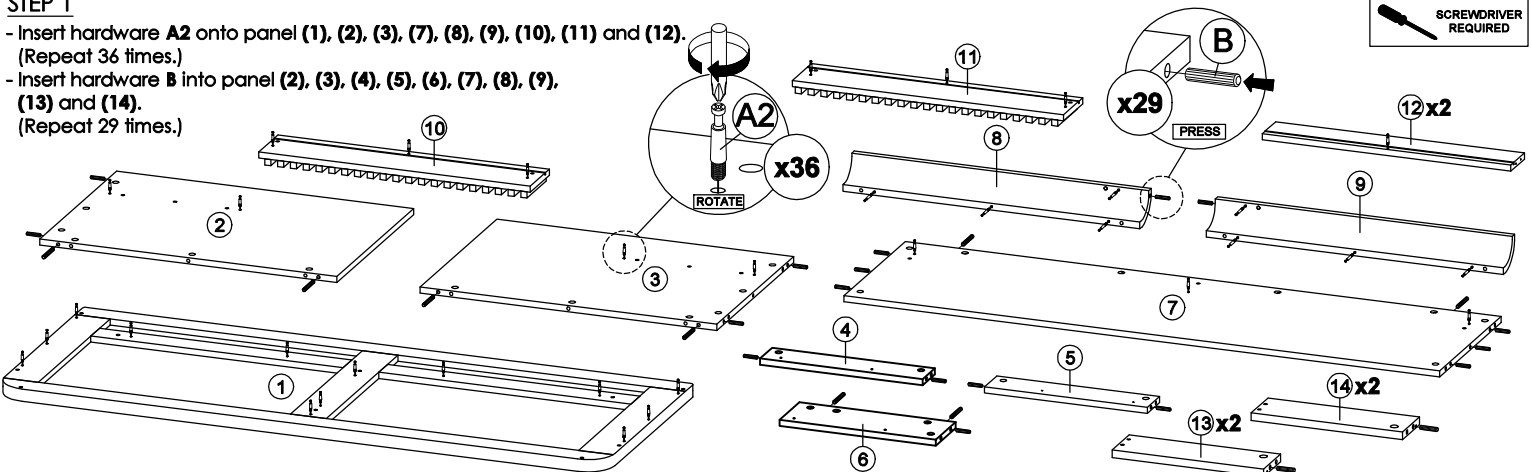


STEP 2

- Insert hardware **A1** into panel (7).
(Repeat 4 times.)
- Attach panel (2) and (3) to panel (7).
- Insert all hardware **A2** into **A1**.
- Rotate all **A1** until tight.
- Apply **A3** onto all **A1**.
(Repeat 4 times.)

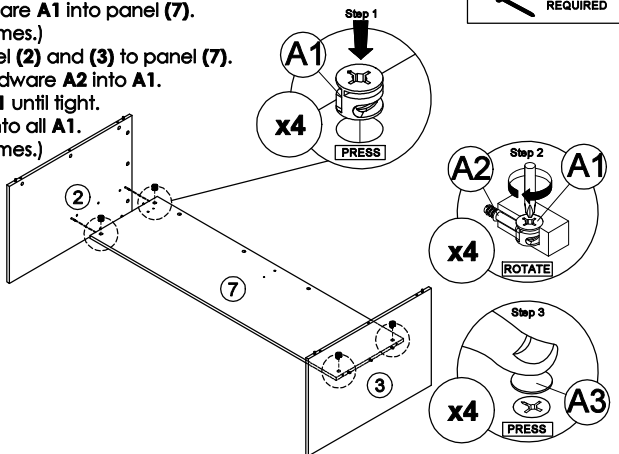


STEP 4

- Fix hardware **G1 (R)** onto panel (6) with hardware **D**.
(Repeat 3 times for each hardware.)

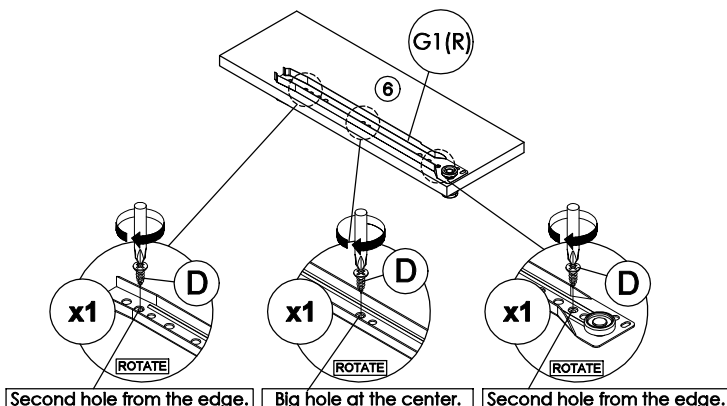


STEP 3

- Fix hardware **G1 (L/R)** onto panel (4), (5) and (6) with hardware **D**.
(Repeat 3 times for each hardware.)

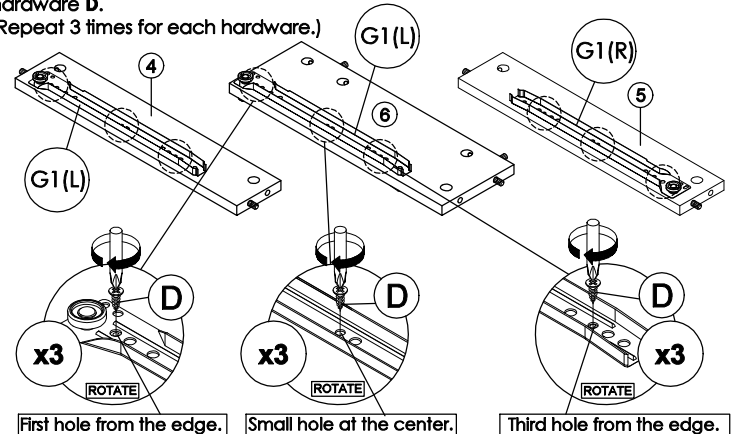


STEP 5

- Insert hardware **A1** into panel (4), (5) and (6).
(Repeat 3 times.)
- Attach panel (4), (5) and (6) to panel (7).
- Insert all hardware **A2** into **A1**.
- Rotate all **A1** until tight.
- Apply **A3** onto all **A1**.
(Repeat 3 times.)

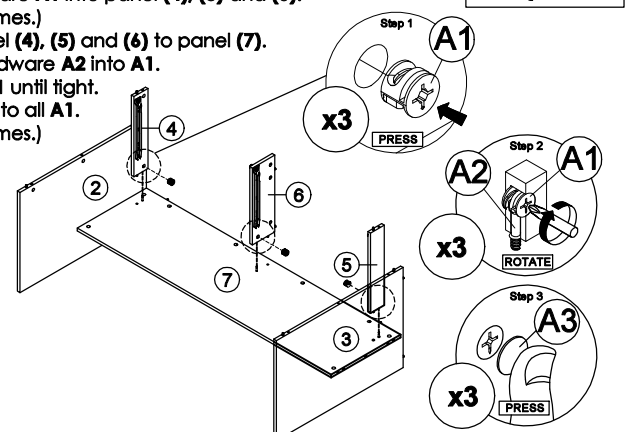

CODING
- 125009

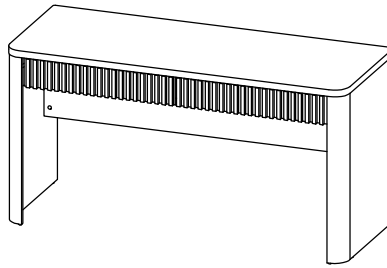


ISO 9001:2015
Reg. No. 000435-1-KTY-1-QMS

nuhoom.com


STEP 6

- Insert hardware **A1** into panel **(2)**, **(3)**, **(4)** and **(5)**.
(Repeat 8 times.)
- Attach panel **(8)** and **(9)** to panel **(2)**, **(3)**, **(4)** and **(5)**.
- Insert all hardware **A2** into **A1**.
- Rotate all **A1** until tight.
- Apply **A3** onto all **A1**.
(Repeat 8 times.)

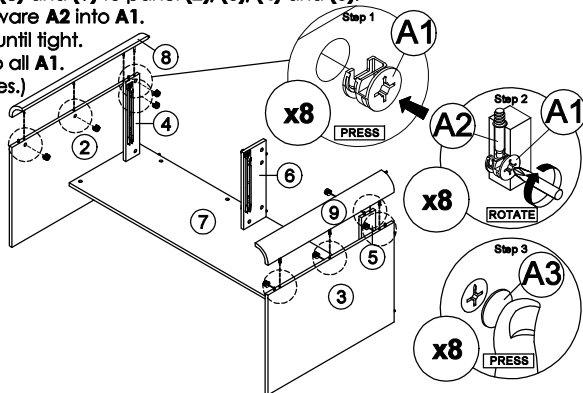


STEP 8

- Hit hardware **F** onto bottom of panel **(2)**, **(3)**, **(8)** and **(9)**.
(Repeat 6 times.)

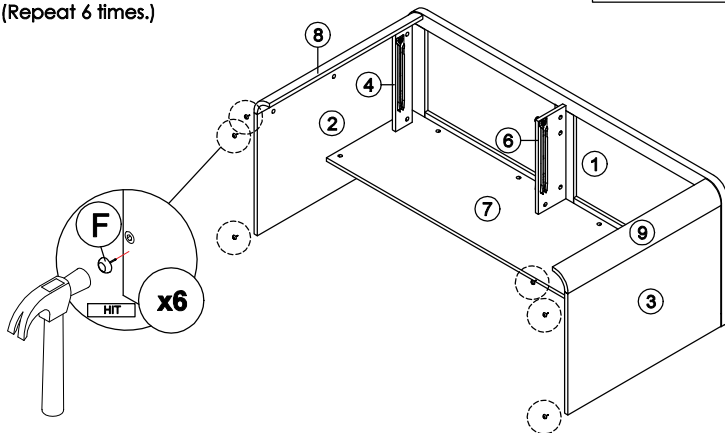


STEP 10

- Insert the panel **(15)** along the slot.
(Repeat 2 times.)

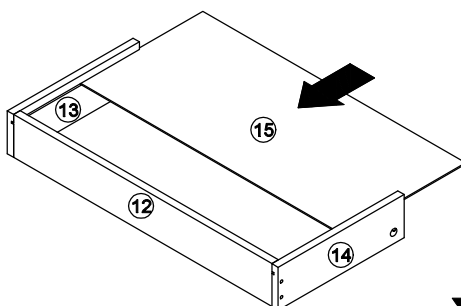


STEP 7

- Insert hardware **A1** into panel **(2)**, **(3)**, **(6)** and **(7)**.
(Repeat 13 times.)
- Attach panel **(1)** to panel **(2)**, **(3)**, **(6)**, **(7)**, **(8)** and **(9)**.
- Insert all hardware **A2** into **A1**.
- Rotate all **A1** until tight.
- Apply **A3** onto all **A1**.
(Repeat 13 times.)

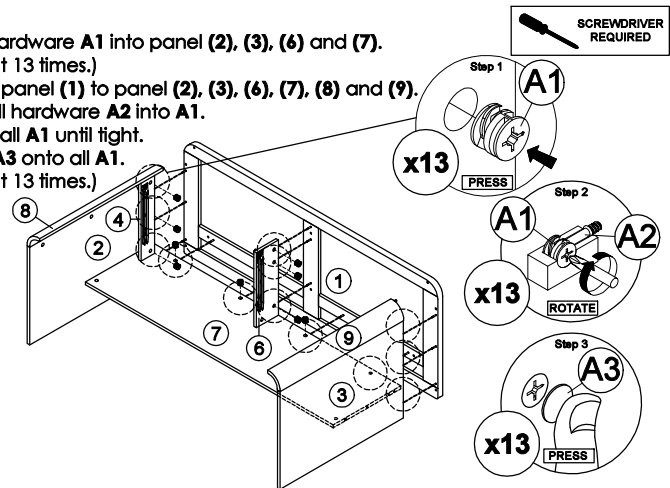


STEP 9

- Assemble panel **(13)** and **(14)** to panel **(12)** by using hardware **E**.
(Repeat 8 times.)

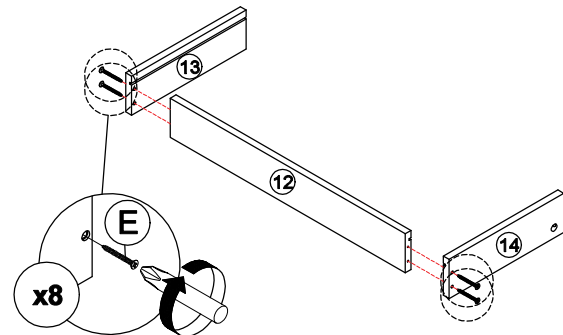


STEP 11

- Insert hardware **A1** into panel **(16)**.
(Repeat 1 times.)
- Attach panel **(16)** to panel **(12)**.
- Insert all hardware **A2** into **A1**.
- Rotate all **A1** until tight.
- Apply **A3** onto all **A1**.
(Repeat 1 times.)

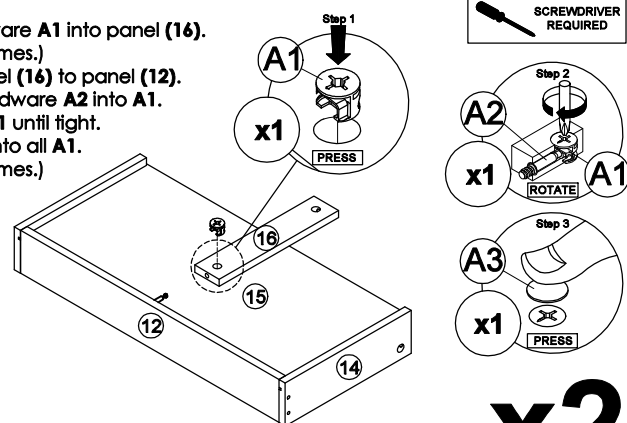

CODING
- 125009

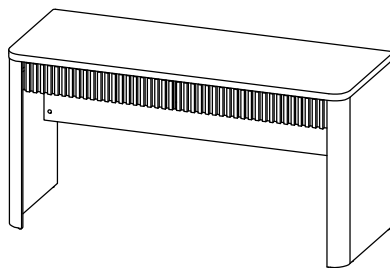


ISO 9001:2015
Reg. No. 000435-1-007-1-QMS

nuhoom.com


STEP 12

- Insert hardware **A1** into panel (13), (14) and (16).
(Repeat 6 times.)
- Attach panel (10) and (11) to panel (13), (14) and (16).
- Insert all hardware **A2** into **A1**.
- Rotate all **A1** until tight.
- Apply **A3** onto all **A1**.
(Repeat 6 times.)

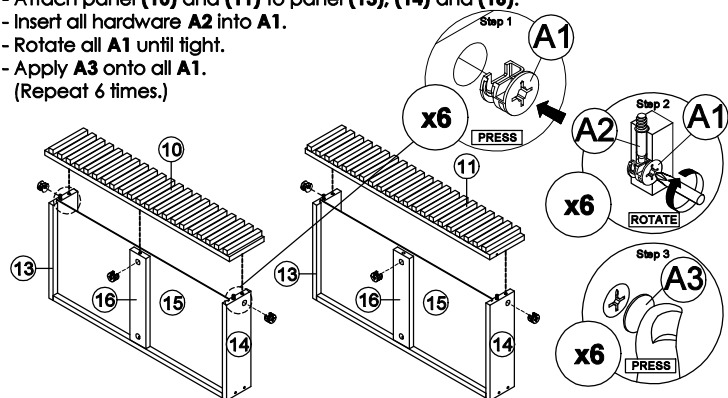

STEP 14

Put all the drawer in place along the drawer slides.

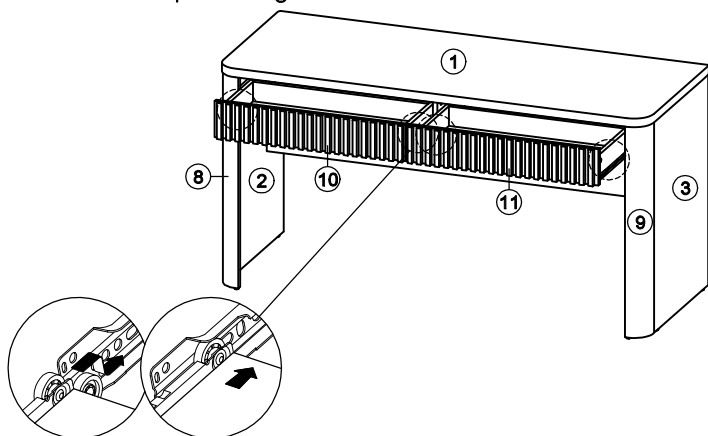

STEP 13

Assemble hardware **G2 (L/R)** to panel (13) and (14) by using hardware **D**.
(Repeat 3 times for each hardware.)

