

CODING

- 131130

ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

nesthouz.com

Read the instructions carefully. Remove all the wrappings, staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.

CAUTION

KEEP ALL THE PARTS OUT OF CHILDREN'S REACH.

ITEM	PHOTO	HARDWARE NAME	QTY
①		Minifix Bolt	8
②		Cam 12/15	4
③		Cam 9/15	4
④		Wood Dowel 6 x 30	12
⑤		Csk Screw 3.5 x 15	24
⑥		Csk Screw 4.7 x 38	8
⑦		Unitar Screw 6.3 x 40	4
⑧		Euro Screw 6 x 9	8
⑨		Drawer Slide 350mm	2 Set
⑩		Solidwood Leg (150)	4
⑪		Metal Braket 1.5 x 82 x 82	4
⑫		Aluminium Handle	2

⑬		Backply Stopper	6
⑭		Csk Screw 3.1 x 20	6
⑮		Allen Key M4	1

ITEM	PHOTO	PARTS NAME	QTY
Ⓐ		Side Panel Left	1
Ⓑ		Side Panel Right	1
Ⓒ		Top Panel	1
Ⓓ		Bottom Panel	1
Ⓔ		Drawer Front Panel	2
Ⓕ		Drawer Side Left Panel	2
Ⓖ		Drawer Side Right Panel	2
Ⓗ		Drawer Back Panel	2
⒴		Backply Panel	1
Ⓐ		Drawer Bottom	2


CODING
- 131130




ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

nesthouz.com


1

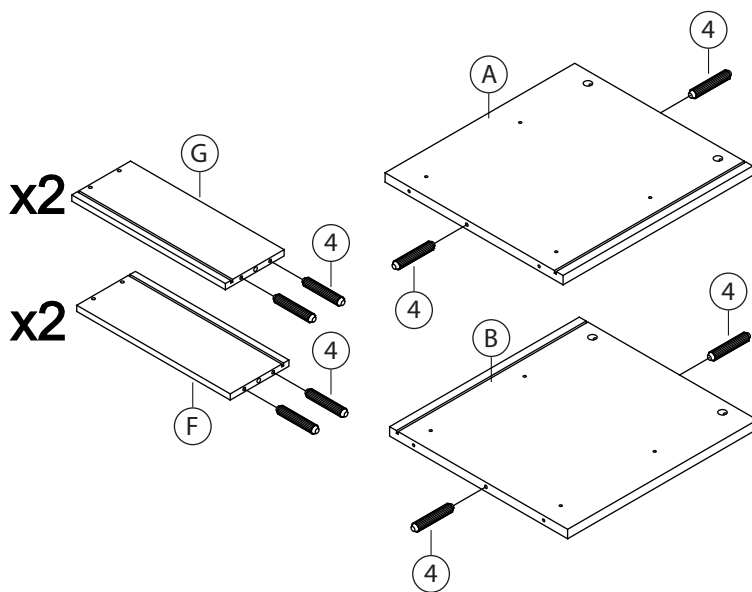


2

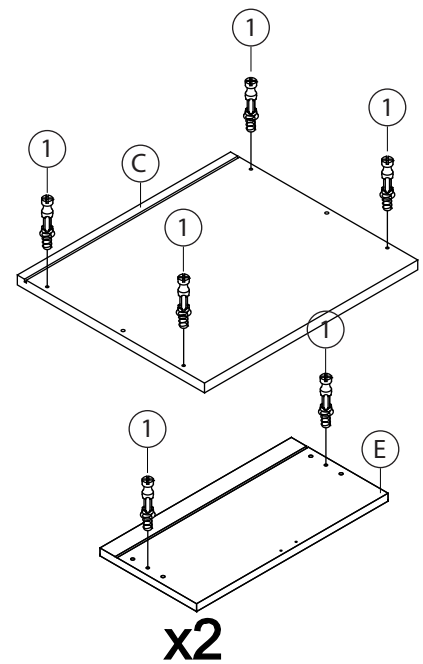

3

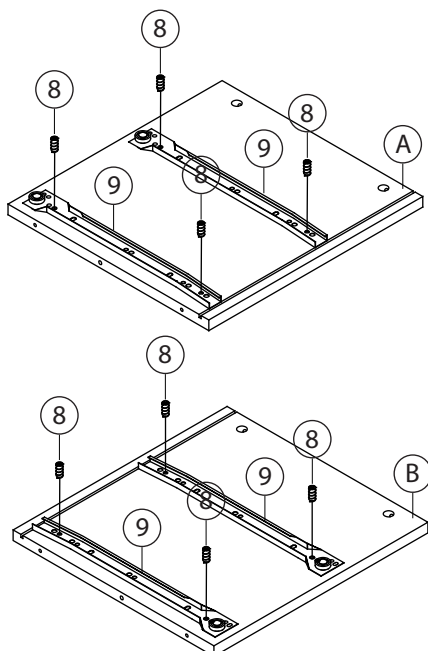

4

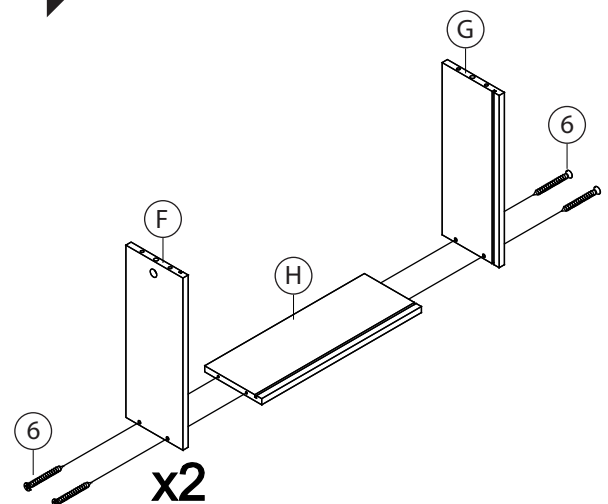


CODING
- 131130




ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

nesthouz.com


5

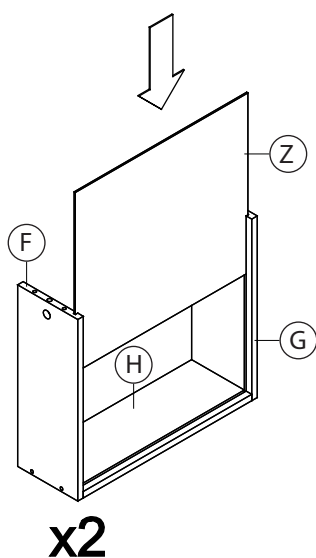


6

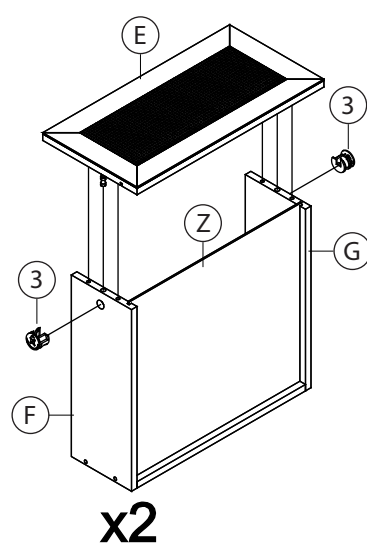

7

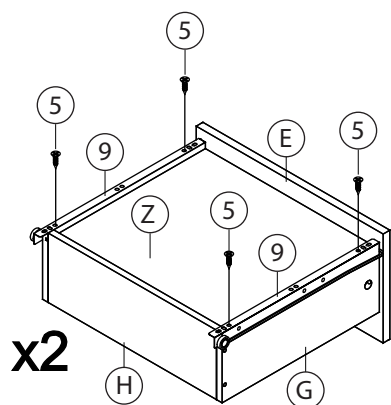

8




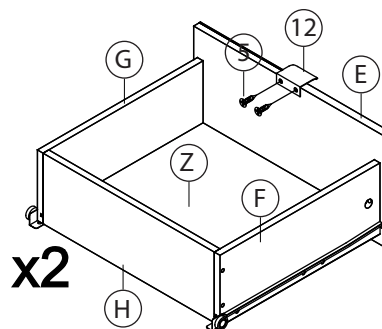


CODING
- 131130



ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

nesthouz.com

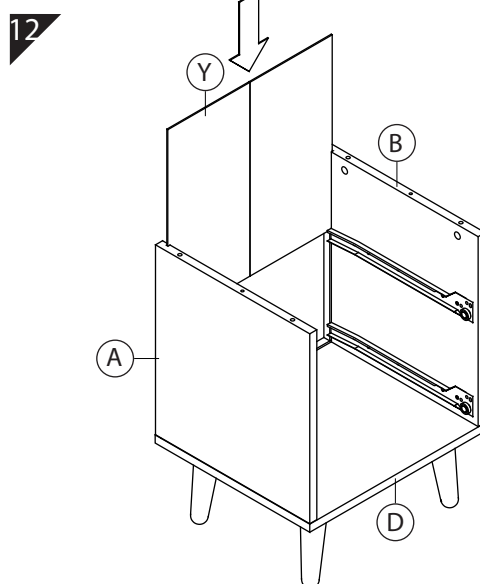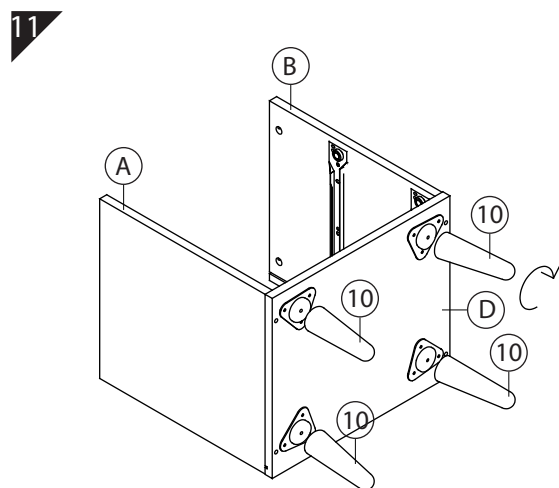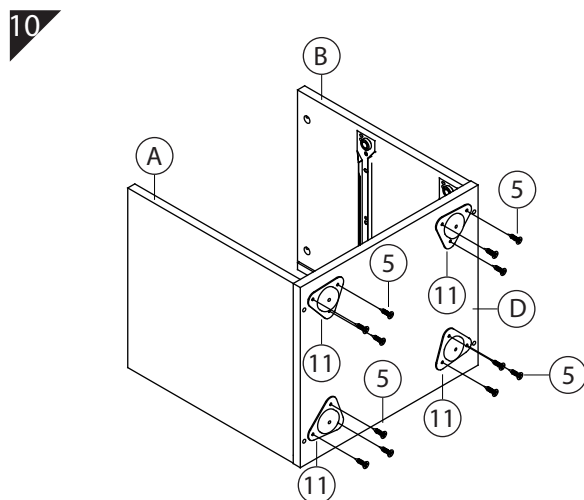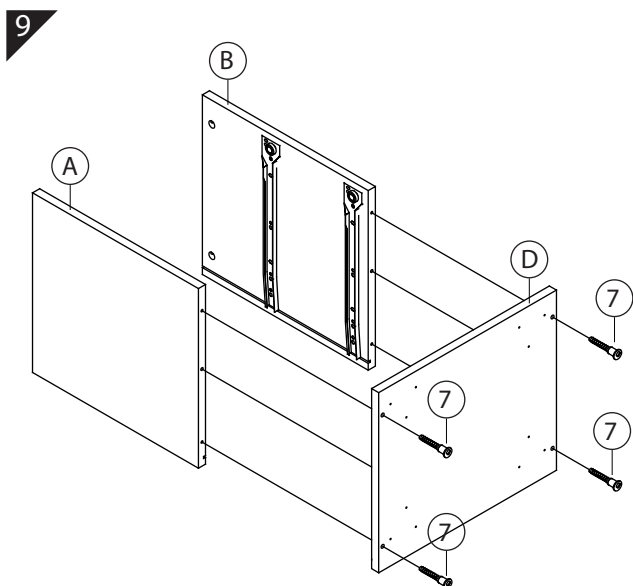


CODING
- 131130




ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

nesthouz.com


13

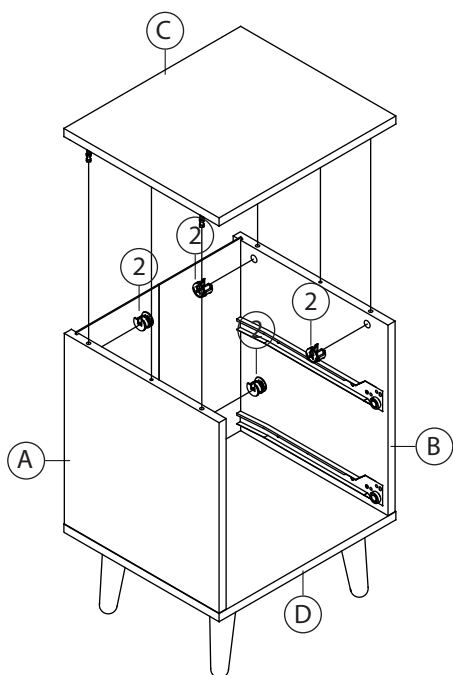

14

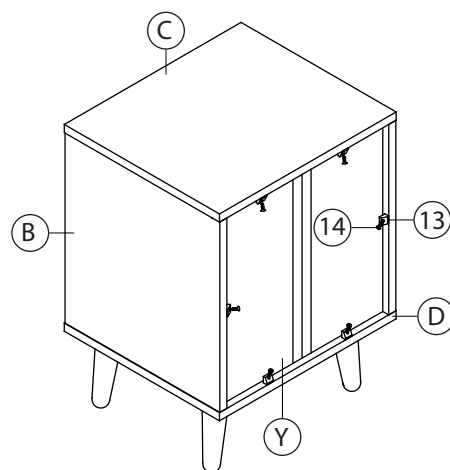

15

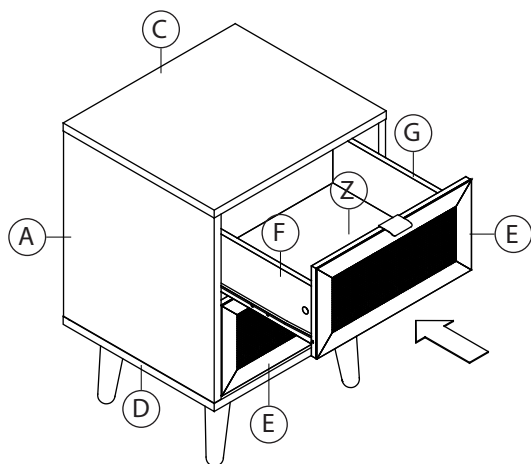

16

