

CODING
-131134



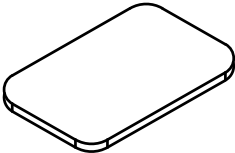
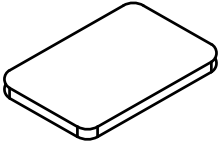

ISO 9001:2015
Reg. No. 000435-I-MY-I-QMS

nesthouz.com

Read the instruction carefully. Remove all the wrapping material , staples and straps from the carton . Refer to the hardware and furniture part list for guidance . Be sure that you have all the parts before you start assembling . Place all the wooden furniture part on a clean and flat soft surface, such as carpet or rubbermat to prevent from scratches .

Caution
KEEP ALL PARTS OUT OF REACH OF CHILDREN.

ITEM	HARDWARE LIST	QTY
Ⓐ	JCBC SCREW M6 X 40MM 	3
Ⓑ	JCBC SCREW M6 X 35MM 	3
Ⓒ	SPRING WASHER 5/16" 	6
Ⓓ	FLAT WASHER 5/16" 	6
Ⓔ	ALLEN KEY M6 	1

ITEM	PART LIST	QTY
①	TOP (19mm) 	1
②	BOTTOM (25mm) 	1
③	BODY 	1

CODING

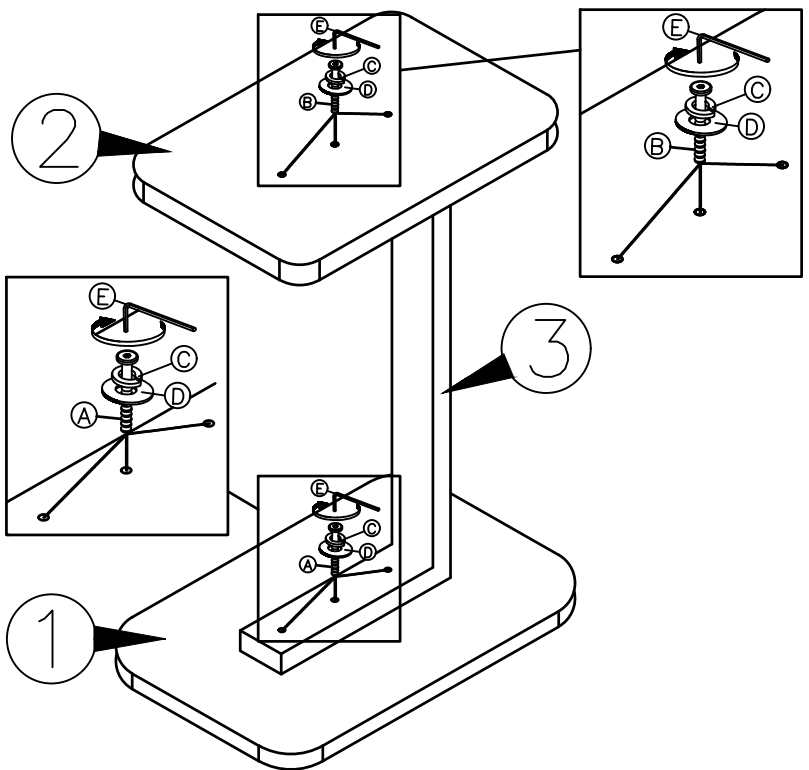
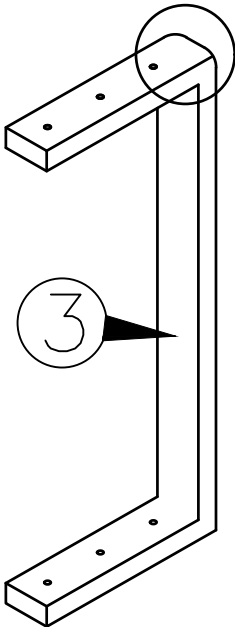
-131134



ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

nesthouz.com

1
Curved side facing upward.



2

