


CODING
- 131135









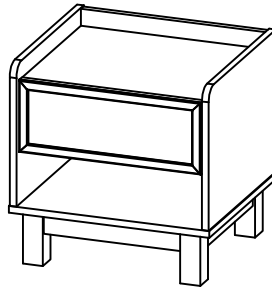




ISO 9001:2015
Reg. No. 000435-1-007-1-QMS

nuhoom.com



Read the instructions carefully. Remove all the wrappings , staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.

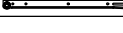CAUTION
KEEP ALL THE PARTS OUT OF CHILDREN'S REACH.


HARDWARE			
A	MINI FIX	A1  A2  A3 	16 SETS
B	M8 X 30MM WOOD DOWEL		18 PCS
C	M6 X 50MM CSK CAP WOOD SCREW		6 PCS
D	ALLEN KEY M4		1 PC
E	M3.5 X 16MM C.B SCREW		12 PCS
F	M4 X 38MM C.B SCREW		12 PCS
G	5/8 PVC NAIL LEG		4 PCS
H	14" DRAWER SLIDE	 H1 (L/R)  H2 (L/R)	1 PC

SELF-PREPARED TOOLS: Tools below are NOT included in package.	
 SCREWDRIVER	 HAMMER

PART LIST		QTY
1	TOP PANEL	1 PC
2	BOTTOM PANEL	1 PC
3	SIDE PANEL (L)	1 PC
4	SIDE PANEL (R)	1 PC
5	BACK PANEL	1 PC
6	APRON FRONT & BACK	2 PCS
7	APRON SIDE	2 PCS
8	DRAWER FRONT	1 PC
9	DRAWER BACK	1 PC
10	DRAWER SIDE-L	1 PC
11	DRAWER SIDE-R	1 PC
12	DRAWER BOTTOM	1 PC
13	CABINET LEG-L	2 PCS
14	CABINET LEG-R	2 PCS

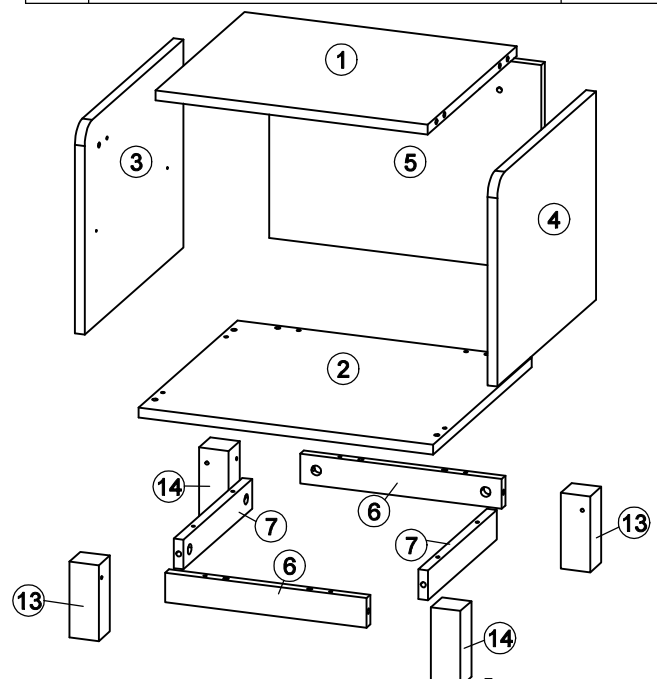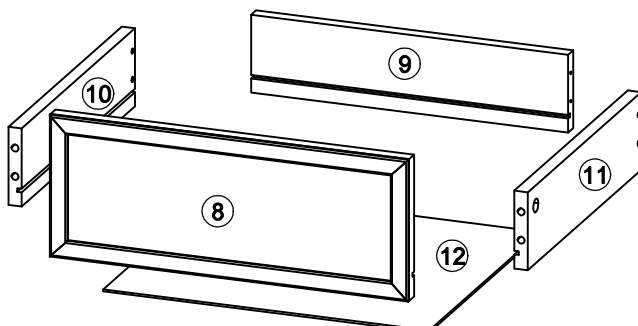

CODING
- 131135

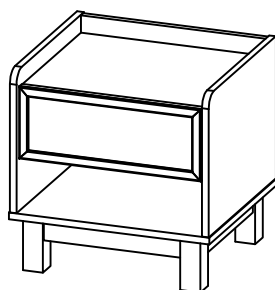


ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

nuhoom.com


STEP 1

- Insert hardware **A1** onto panel (1).
(Repeat 6 times.)
- Insert hardware **A2** onto panel (5).
(Repeat 2 times.)
- Insert hardware **B** onto panel (1) and (5).
(Repeat 8 times.)

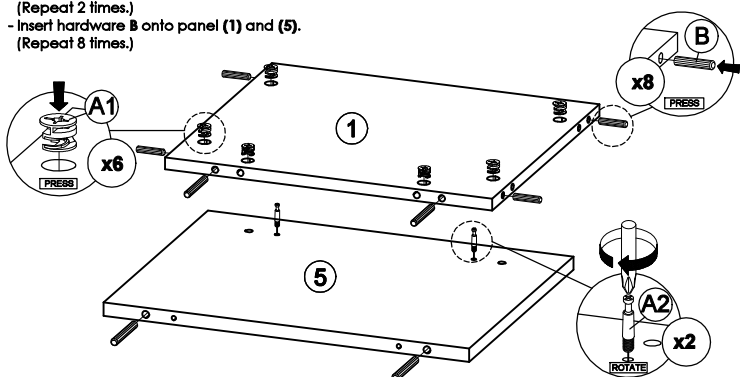


STEP 2

- Insert hardware **A2** onto panel (3) and (4).
(Repeat 4 times.)
- Insert hardware **B** onto panel (3) and (4).
(Repeat 4 times.)

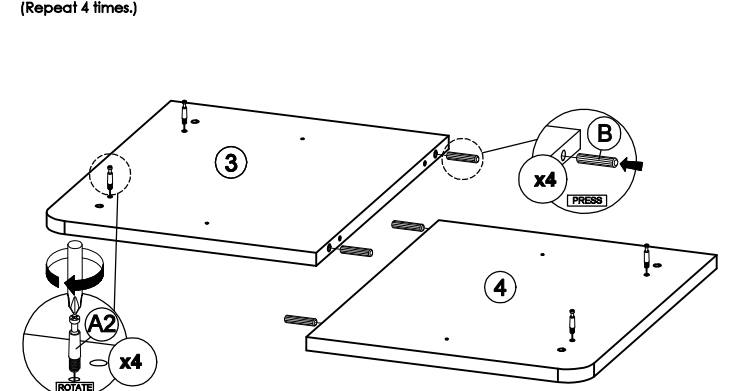


STEP 3

- Insert hardware **A1** onto panel (6), (7), (10) and (11).
(Repeat 10 times.)
- Insert hardware **A2** onto panel (8), (13) and (14).
(Repeat 10 times.)
- Insert hardware **B** onto panel (6), (10) and (11).
(Repeat 6 times.)

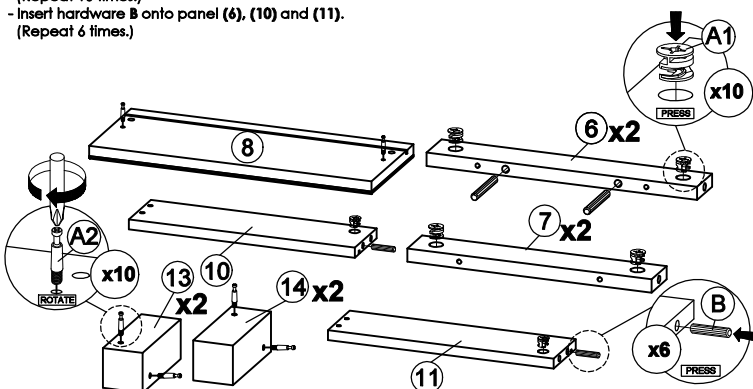


STEP 4

- Fix hardware **H1 (L/R)** into panel (3) and (4) with hardware **E**.
(Repeat 3 times for each hardware.)

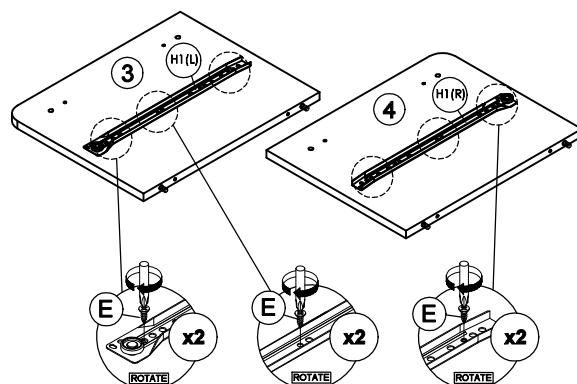


STEP 5

- Attach panel (3), (4) and (5) to panel (1).
- Insert all hardware **A2** into **A1**.
- Rotate all **A1** until tight.
- Apply **A3** onto all **A1**.
(Repeat 6 times.)

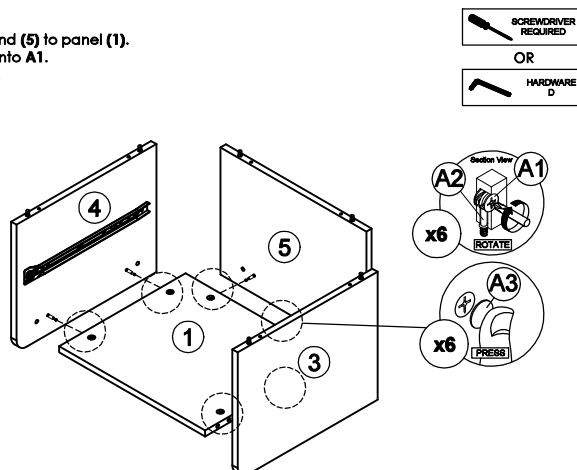


STEP 6

- Connect panel (2) to panel (3), (4) and (5) by using hardware **C** and **D**.
(Repeat 6 times.)

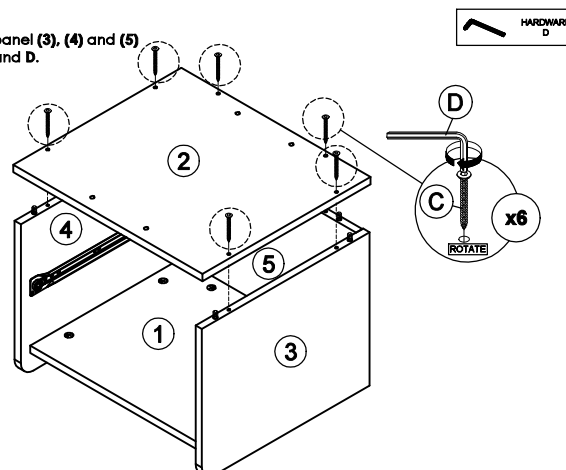

CODING
- 131135

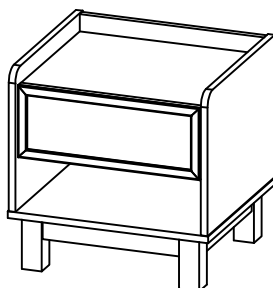


ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

nuhoom.com


STEP 7

- Attach panel (13), (14) to panel (6) and (7).
- Insert all hardware A2 into A1.
- Rotate all A1 until tight.
- Apply A3 onto all A1.
- (Repeat 8 times.)

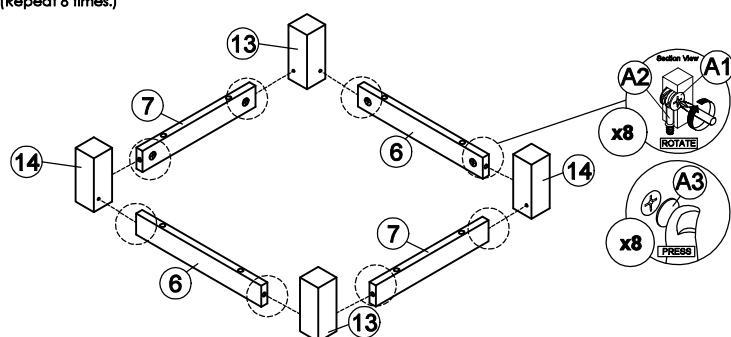


STEP 8

- Assemble panel (6) and (7) to panel (2) by using hardware F.
- (Repeat 8 times.)

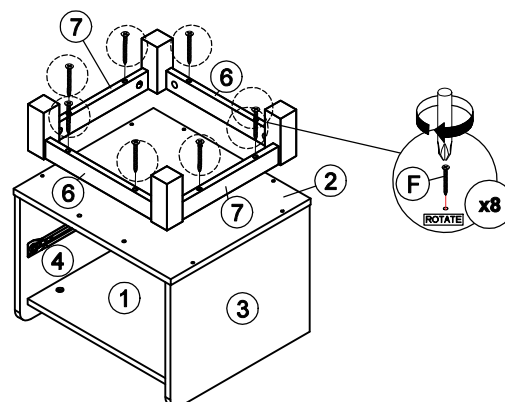


STEP 9

- Hit hardware G into bottom of panel (13) and (14).
- (Repeat 4 times.)

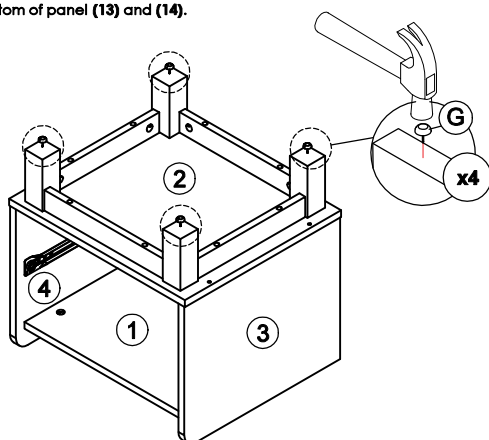


STEP 10

- Assemble panel (9) with panel (10) and (11) by using hardware F.
- (Repeat 4 times.)

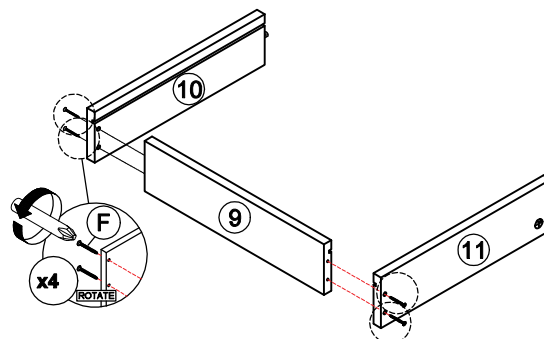


STEP 11

- Insert the panel (12) along the slot.
- (Repeat 1 times.)

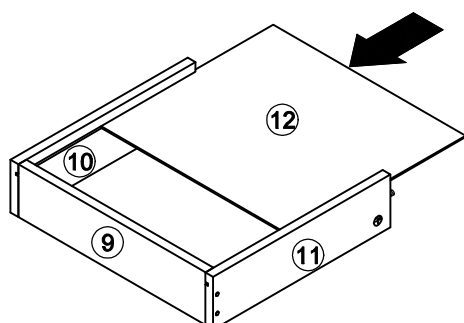


STEP 12

- Attach panel (8) to panel (10) and (11).
- Insert all hardware A2 into A1.
- Rotate all A1 until tight.
- Apply A3 onto all A1.
- (Repeat 2 times.)

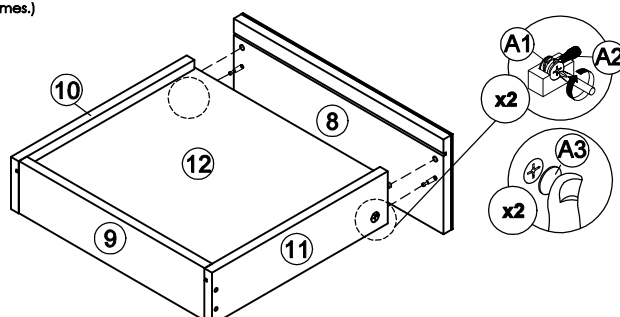

CODING
- 131135

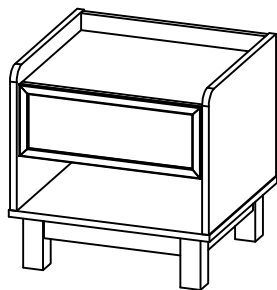


ISO 9001:2015
Reg. No. 000435-1-047-1-QMS



STEP 13

- Assemble hardware H2 (L/R) to panel (10) and (11) by using hardware E. (Repeat 3 times for each hardware.)

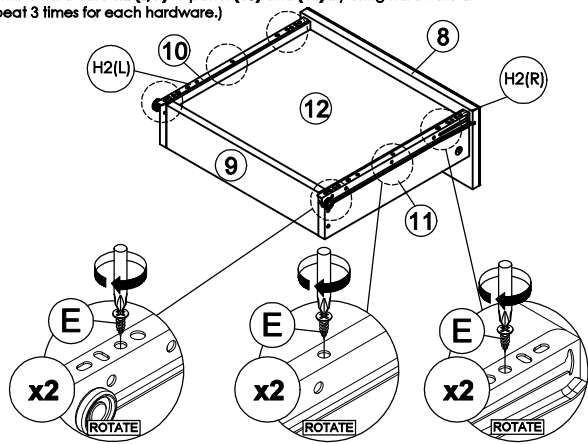

STEP 14

- Put all the drawer in place along the drawer slides.

