


## CODING

-131154

-131168

ISO 9001:2015  
Reg. No. 000435-1-MY-1-QMS

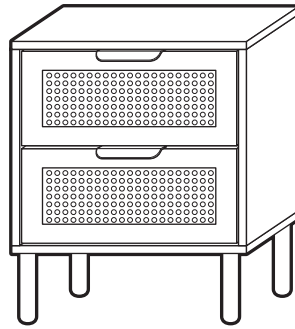








nuhoom.com

Read the instructions carefully. Remove all the wrappings, staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.


## CAUTION

KEEP ALL THE PARTS OUT OF REACH OF CHILDREN.

	HARDWARE LIST		QTY
<b>A</b>		M4 x 45mm Chipboard Screw	4
<b>B</b>		M4 x 38mm Chipboard Screw	8
<b>C</b>		M3.5 x 16mm Chipboard Screw	36
<b>D</b>		Wood Dowel 6 x 25mm	20
<b>E</b>		Minifix Pin	8
<b>F</b>		Minifix Cam	8
<b>G</b>		Nail	20
<b>H</b>		Leg	4
<b>I</b>		Handle	2
<b>J</b>		Metal Drawer Slide	4 set

ITEM	PART LIST		QTY
<b>1</b>	Lelf Panel		1
<b>2</b>	Right Panel		1
<b>3</b>	Top Panel		1
<b>4</b>	Bottom Panel		1
<b>5</b>	Back Panel		1
<b>6</b>	Drawer Panel		2
<b>7</b>	Drawer Side Panel		4
<b>8</b>	Drawer Back Panel		2
<b>9</b>	Drawer Bottom Panel		2


**CODING**  
-131154  
-131168

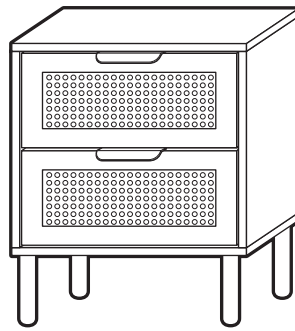


ISO 9001:2015  
Reg. No. 000435-1-MY-1-QMS

nuhoom.com


## Step 1

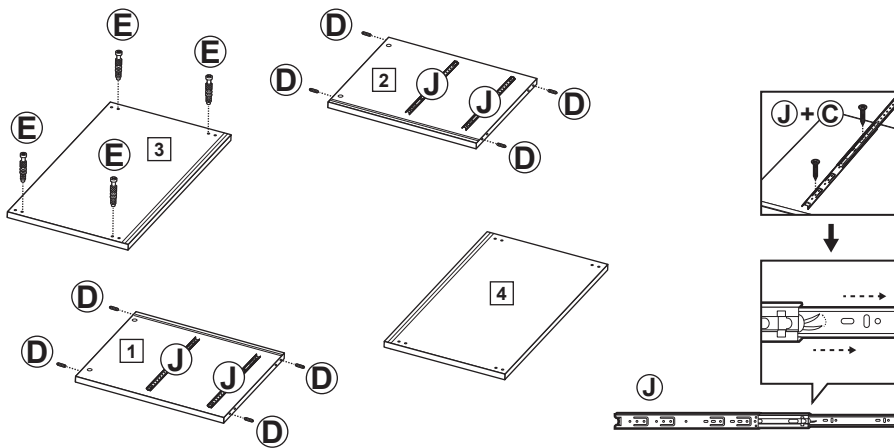


## Step 2

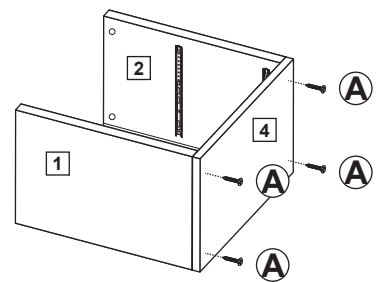


## Step 3

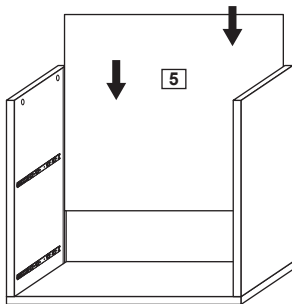

## Step 4

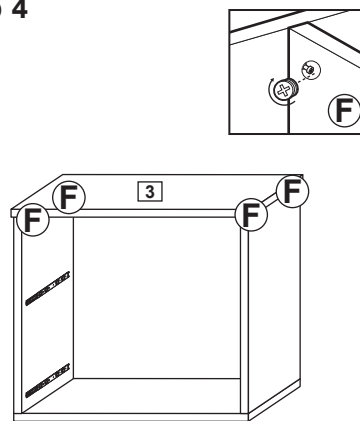

## Step 5

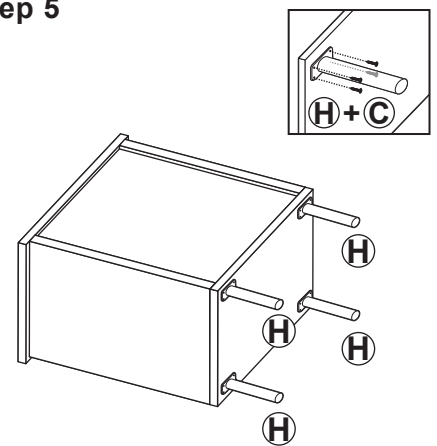

## Step 6

