

CODING
-131170ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

nuhoom.com

Read the instructions carefully. Remove all the wrappings, staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.

CAUTION

KEEP ALL THE PARTS OUT OF CHILDREN'S REACH.

ITEM	PHOTO	HARDWARE NAME	QTY
①		Minifix Bolt	6
②		Cam 12/15	4
③		Cam 9/15	2
④		Wood Dowel 6 x 30	8
⑤		Csk Screw 3.5 x 15	4
⑥		Euro Screw 6 x 9	4
⑦		Unitar Screw 6.3 x 40	4
⑧		Csk Screw 4.7 x 38	4
⑨		Csk Screw 4 x 20	16
⑩		Drawer Slide (350mm)	1 Set
⑪		Backply Stopper	6
⑫		Csk Screw 3.1 x 20	6

⑬		Metal Leg	4
⑭		Allen Key M4	1


ITEM	PHOTO	PARTS NAME	QTY
Ⓐ		Side Panel Left	1
Ⓑ		Side Panel Right	1
Ⓒ		Top Panel	1
Ⓓ		Bottom Panel	1
Ⓔ		Drawer Front Panel	1
Ⓕ		Drawer Side Left Panel	1
Ⓖ		Drawer Side Right Panel	1
Ⓗ		Drawer Back Panel	1
Ⓨ		Backply Panel	1
Ⓩ		Drawer Bottom Panel	1

CODING
-131170



ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

nuhoom.com

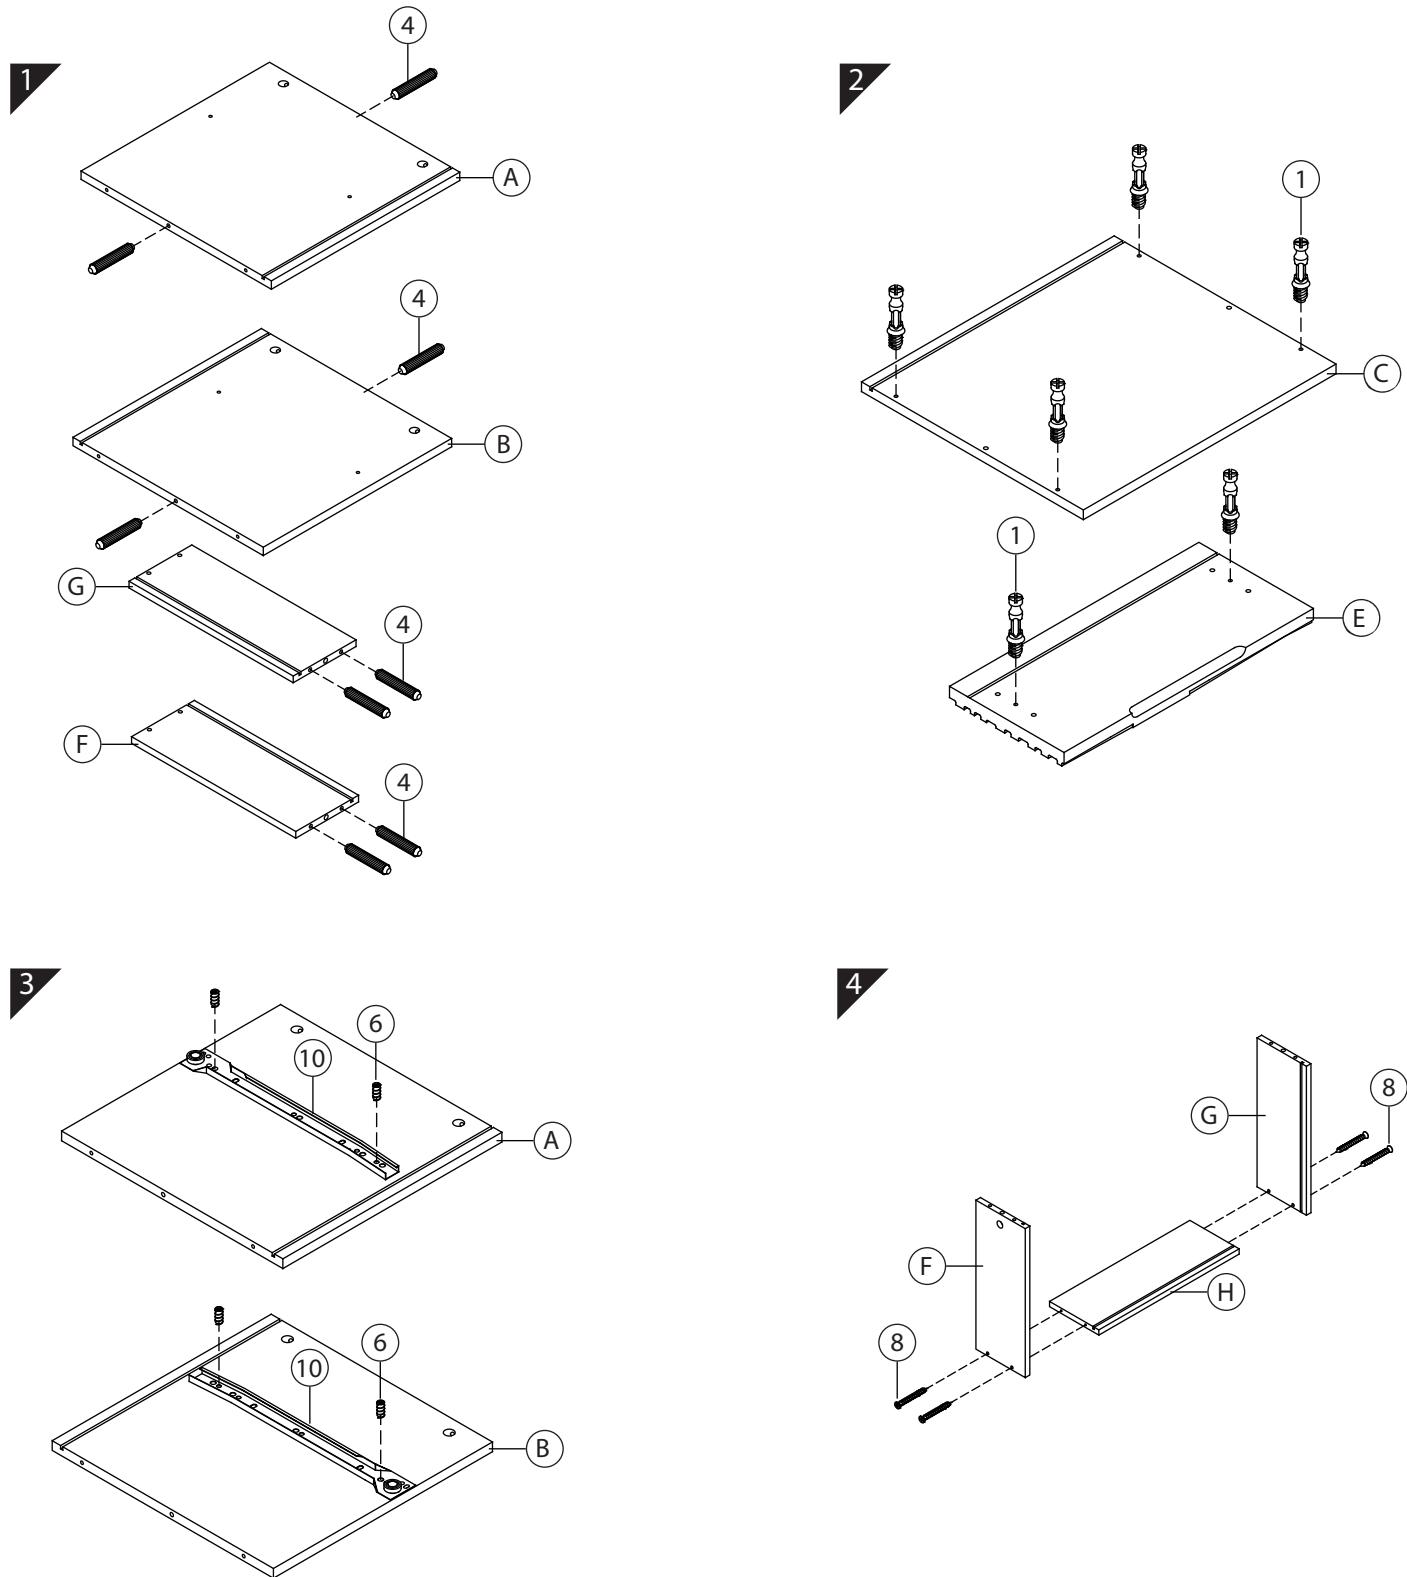


CODING
-131170




ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

nuhoom.com


5

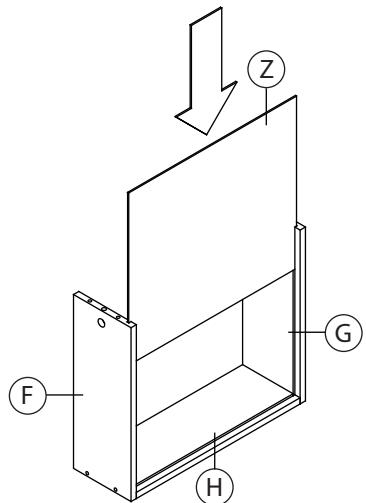


6

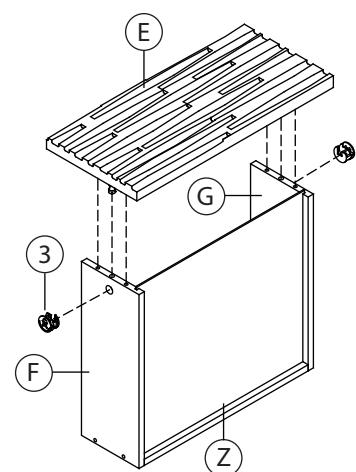

7

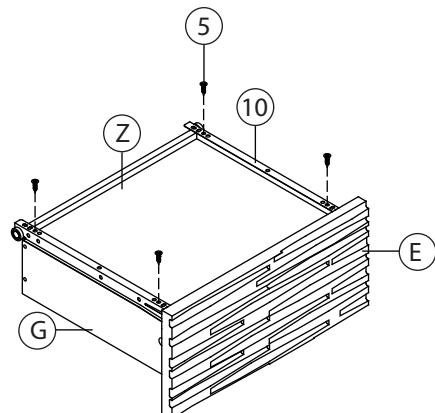

8

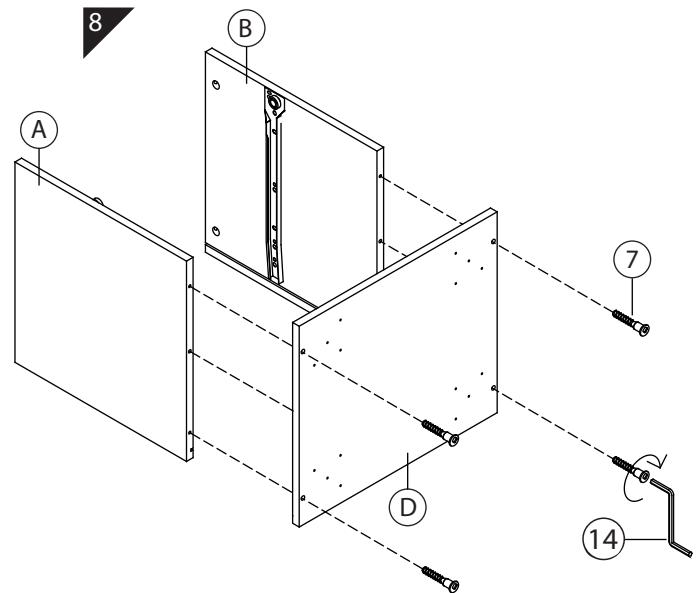


CODING
-131170




ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

nuhoom.com


9

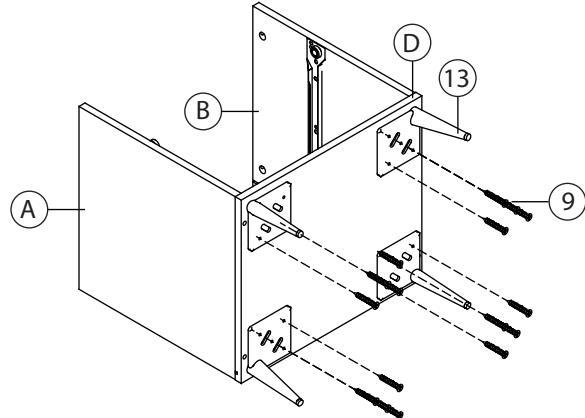


10

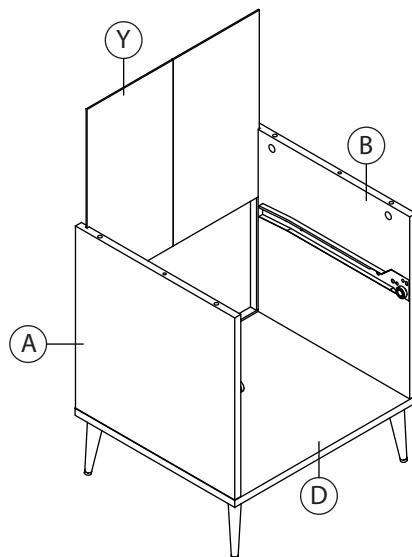

11

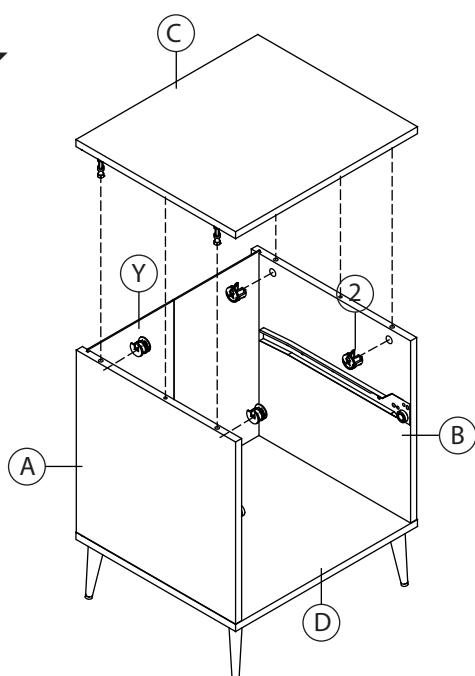

12

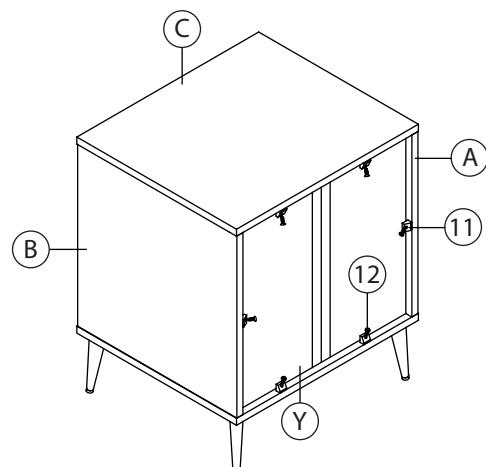


CODING
-131170



ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

nuhoom.com

13

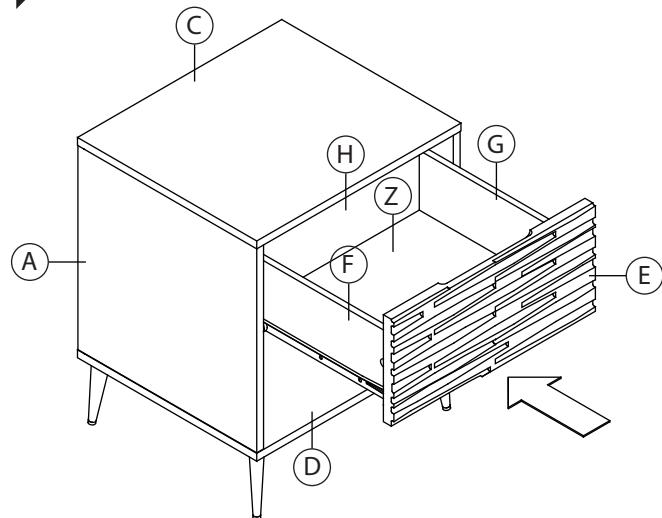

14

