

CODING
- 131177



ISO 9001 : 2015

Reg. 000435-1-MY-1-QMS

nesthouz.com

Read the instruction carefully . Remove all the wrapping material staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Be sure you have all part before you start assembling. Place all the wooden furniture part on a clean and flat surface, such as carpet or rubbermat to prevent scratches.

CAUTION

KEEP ALL THE PARTS OUT OF CHILDREN ' S REACH.

ITEM	PHOTO	HARDWARE NAME	QTY
(A)		WOOD DOWEL 8 X 30mm	12
(B)		STICKER CARPET	6
(C)		SPRING WASHER M6	6
(D)		JCBC M6 x 35 mm	12
(E)		ALLEN KEY M4	1

ITEM	PHOTO	PARTS NAME	QTY
(1)		TABLE TOP	1
(2)		TOP FRAME	1
(3)		BOTTOM FRAME	1
(4)		RAIL	3


CODING
- 131177




ISO 9001 : 2015
Reg. 000435-1-MY-1-QMS

nesthouz.com

1

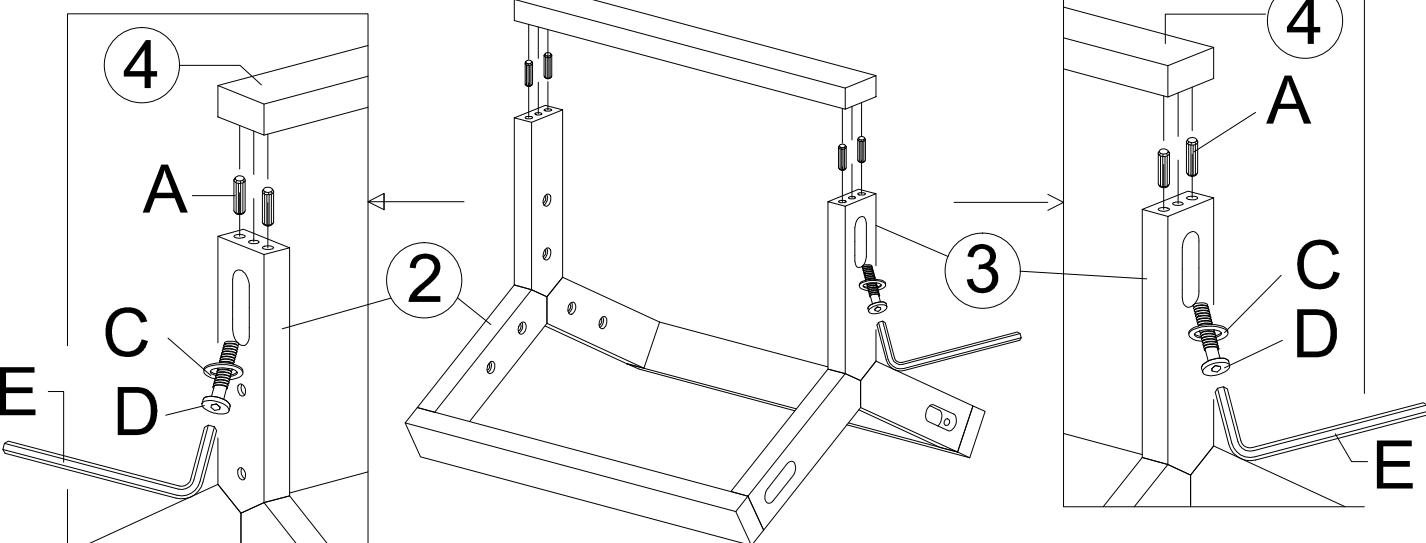

2

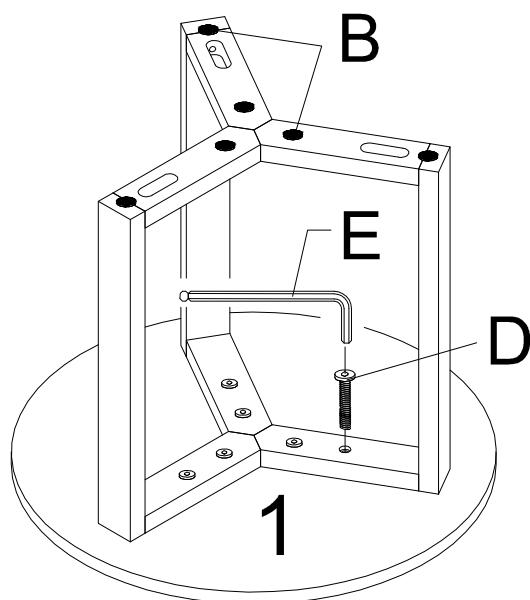

3

COMPLETED
ASSEMBLY

