


CODING
- 131190

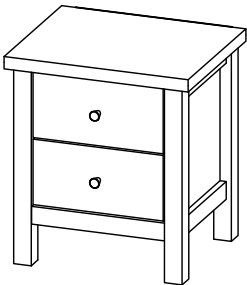


ISO 9001:2015
Reg. No. 00005-1-007-1-Q008

nuhoom.com



Read the instructions carefully. Remove all the wrappings , staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.

CAUTION
KEEP ALL THE PARTS OUT OF CHILDREN’S REACH.


HARDWARE			
A	MINI FIX	A1  A2  A3 	17 SETS
B	M8 X 30MM WOOD DOWEL		12 PCS
C	ALLEN KEY M4		1 PC
D	M4 X 38MM C.B SCREW		8 PCS
E	M4 X 30MM C.B SCREW		2 PCS
F	M3.5 X 16MM C.B SCREW		24 PCS
G	5/8 NAIL		12 PCS
H	5/8 PVC NAIL LEG		4 PCS
I	311 KNOD (GOLDEN 3106)		2 PCS
J	12" DRAWER SLIDE	 J1 (L/R) J2 (L/R)	2 SETS

SELF-PREPARED TOOLS: Tools below are NOT included in package.	
 SCREWDRIVER	 HAMMER

PART LIST		QTY
1	TOP PANEL	1 PC
2	BOTTOM PANEL	1 PC
3	SIDE PANEL (L)	1 PC
4	SIDE PANEL (R)	1 PC
5	FRONT RAIL BOTTOM	1 PC
6	BACK PANEL	1 PC
7	DRAWER FRONT	2 PCS
8	DRAWER BACK	2 PCS
9	DRAWER SIDE (L)	2 PCS
10	DRAWER SIDE (R)	2 PCS
11	DRAWER BOTTOM	2 PCS

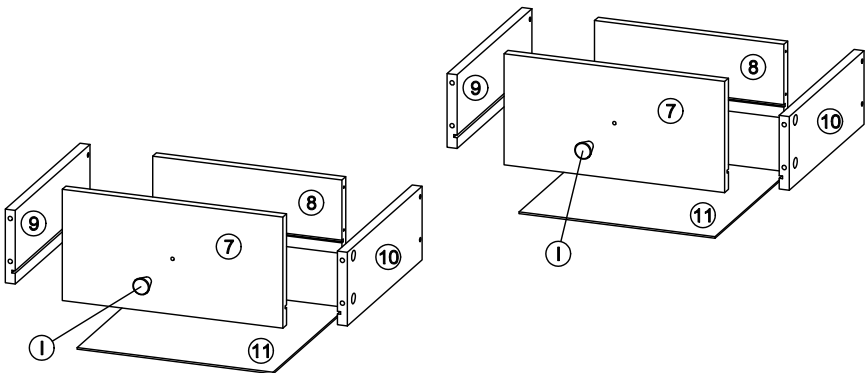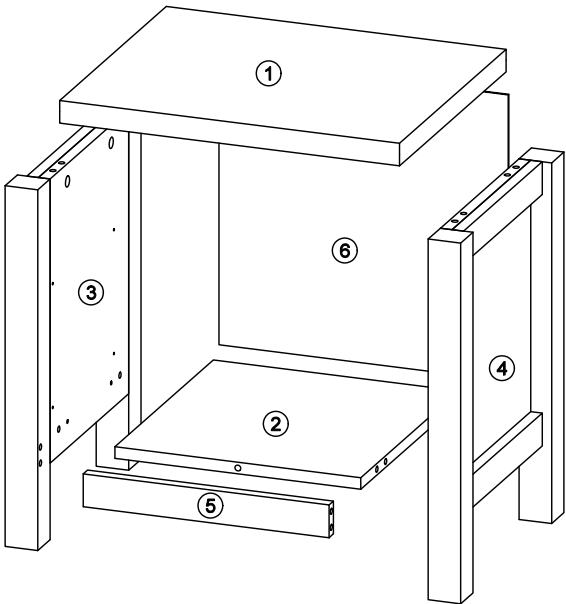

CODING
- 131190

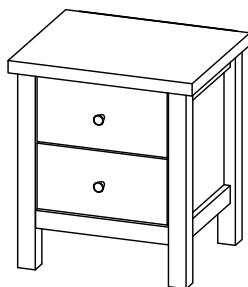


ISO 9001:2015
Reg. No. 00003-1-2017-1-Q008

nuhoom.com


STEP 1

- Insert hardware **A2** onto panel **(1)**, **(5)** and **(7)**.
(Repeat 13 times.)
- Insert hardware **B** into panel **(2)** and **(5)**.
(Repeat 8 times.)

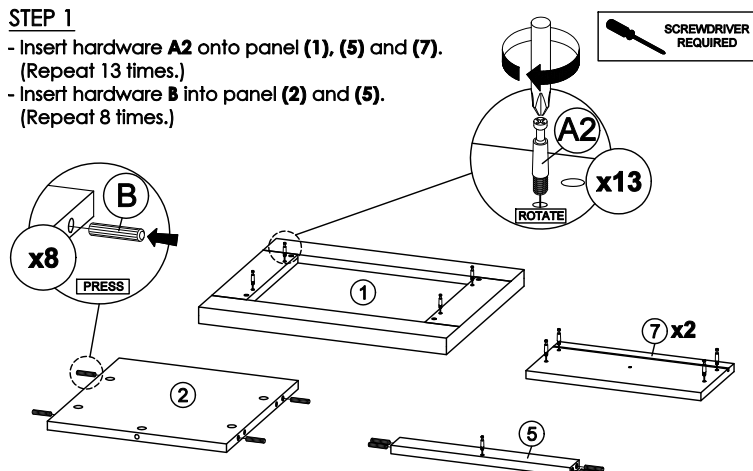


STEP 2

- Insert hardware **A2** onto panel **(3)** and **(4)**.
(Repeat 4 times.)
- Insert hardware **B** into panel **(3)** and **(4)**.
(Repeat 4 times.)

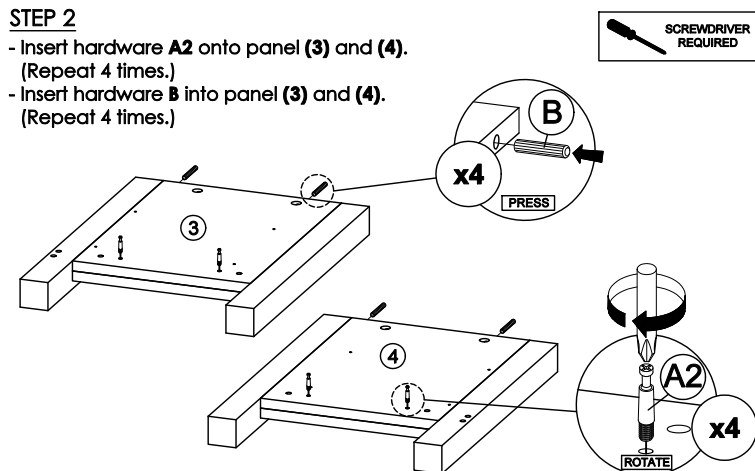


STEP 3

- Fix hardware **J1 (L/R)** onto panel **(3)** and **(4)** with hardware **F**.
(Repeat 3 times for each hardware.)

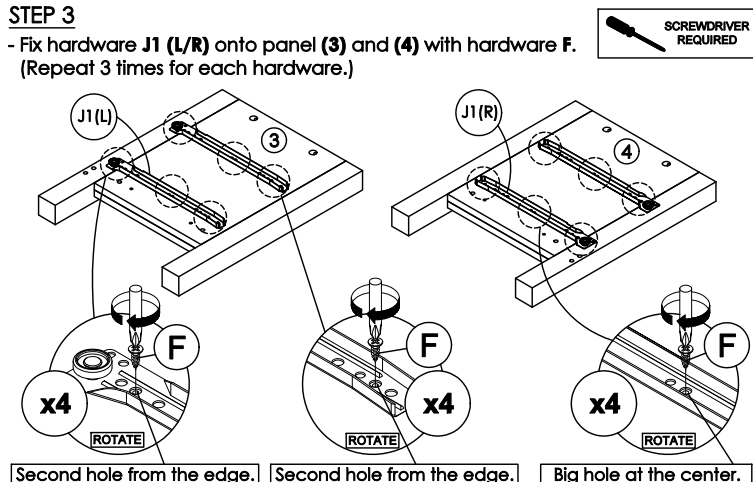


STEP 4

- Insert hardware **A1** into panel **(2)**.
(Repeat 1 times.)
- Attach panel **(2)** to panel **(5)**.
- Insert all hardware **A2** into **A1**.
- Rotate all **A1** until tight.
- Apply **A3** onto all **A1**.
(Repeat 1 times.)

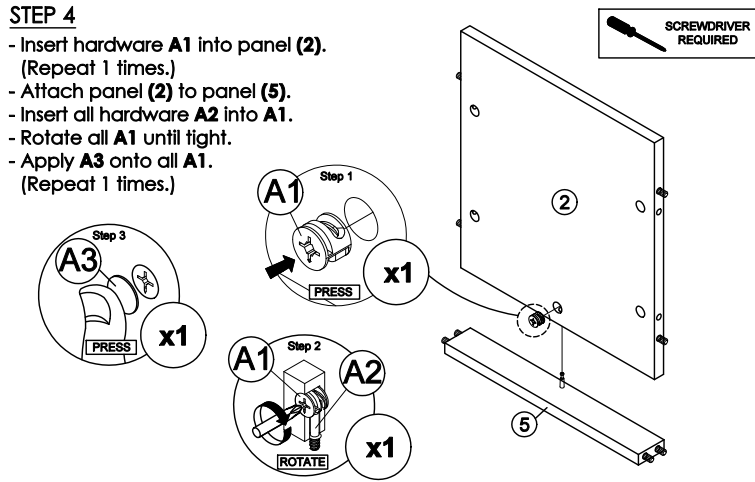


STEP 5

- Insert hardware **A1** into panel **(2)**.
(Repeat 4 times.)
- Attach panel **(3)** and **(4)** to panel **(2)**.
- Insert all hardware **A2** into **A1**.
- Rotate all **A1** until tight.
- Apply **A3** onto all **A1**.
(Repeat 4 times.)

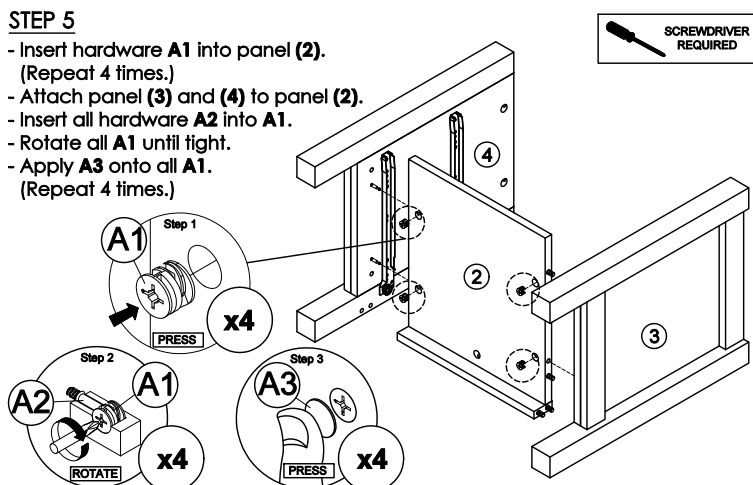


STEP 6

- Insert hardware **A1** into panel **(3)** and **(4)**.
(Repeat 4 times.)
- Attach panel **(1)** to panel **(3)** and **(4)**.
- Insert all hardware **A2** into **A1**.
- Rotate all **A1** until tight.
- Apply **A3** onto all **A1**.
(Repeat 4 times.)

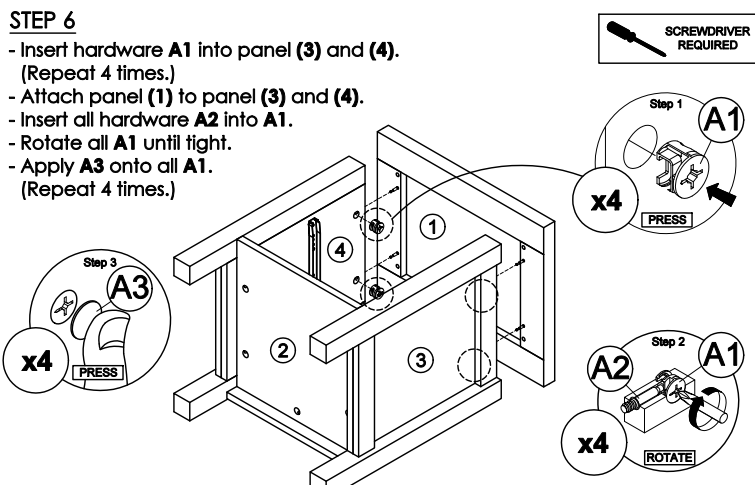

CODING
- 131190

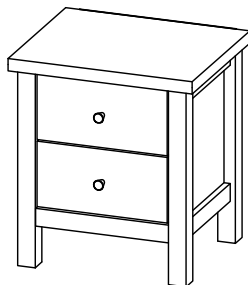


ISO 9001:2015
Reg. No. 00003-1-001-1-Q008

nuhoom.com


STEP 7

- Assemble panel (6) to entire body with hardware G.
(Repeat 12 times.)

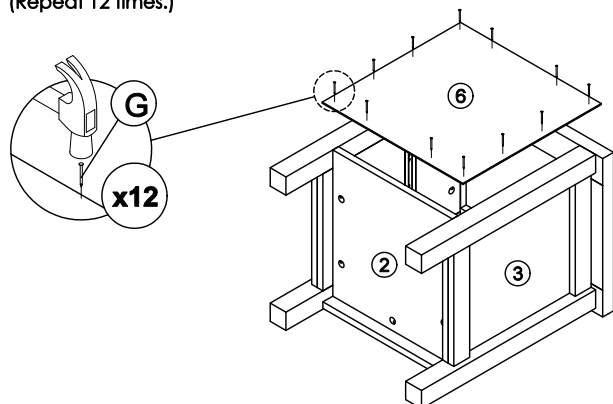


STEP 8

- Hit hardware H into bottom of panel (3) and (4).
(Repeat 4 times.)

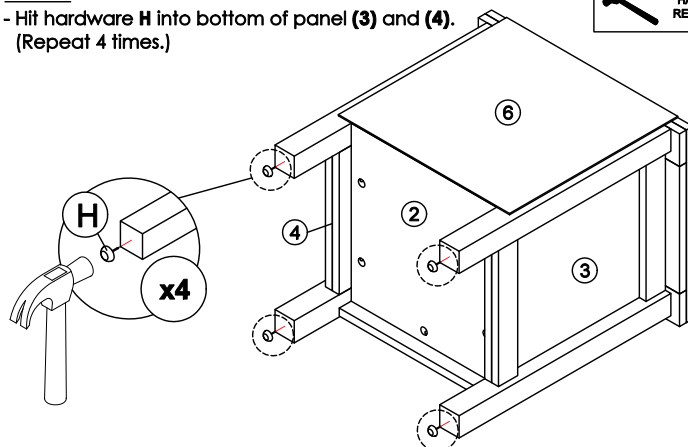


STEP 9

- Fix hardware I onto panel (7) by using hardware E.
(Repeat 1 times for each hardware.)

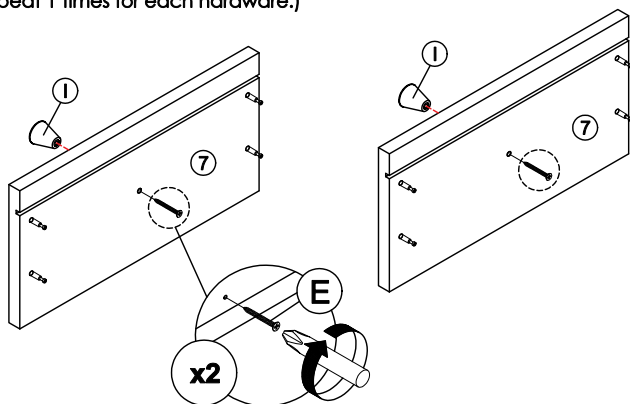


STEP 10

- Assemble panel (9) and (10) to panel (8) by using hardware D.
(Repeat 8 times.)

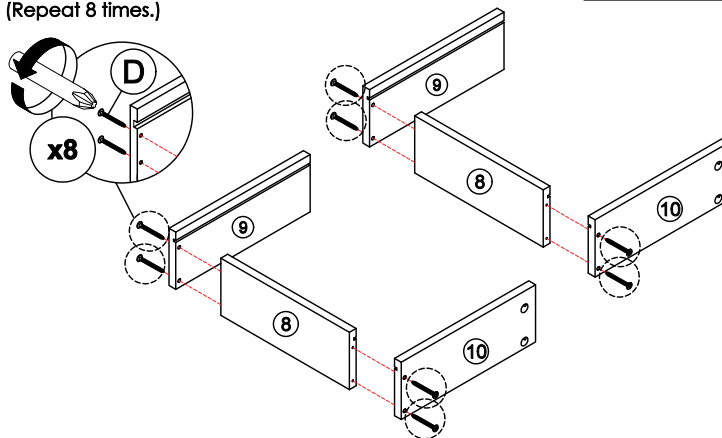


STEP 11

- Insert the panel (11) along the slot.
(Repeat 2 times.)

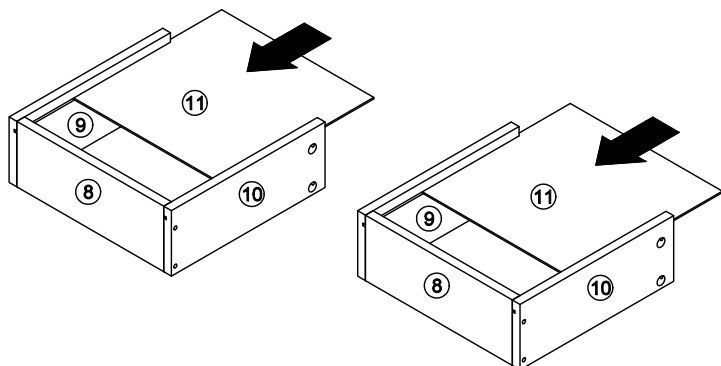


STEP 12

- Insert hardware A1 into panel (9) and (10).
(Repeat 8 times.)
- Attach panel (7) to panel (9) and (10).
- Insert all hardware A2 into A1.
- Rotate all A1 until tight.
- Apply A3 onto all A1.
(Repeat 8 times.)

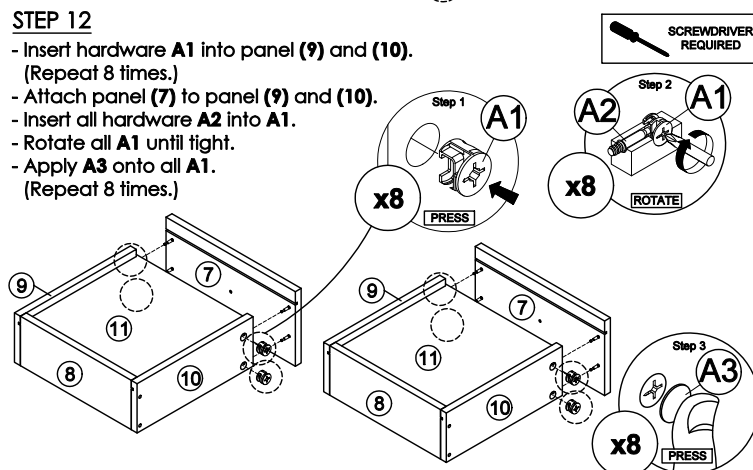

CODING
- 131190

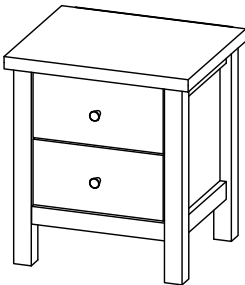


ISO 9001:2015
Reg. No. 000-05-1-217-1-Q008

nuhoom.com

STEP 13

- Assemble hardware J2 (L/R) to panel (9) and (10) by using hardware F.
(Repeat 3 times for each hardware.)

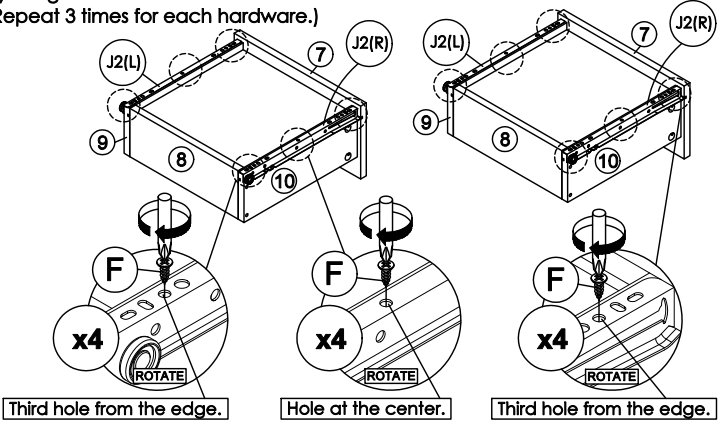

STEP 14

- Put all the drawer in place along the drawer slides.

