


CODING
- 131192

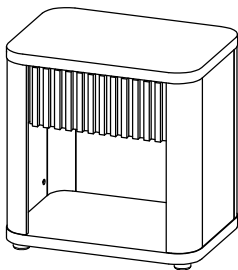


ISO 9001:2015
Reg. No. 000435-1-007-1-QMS


nuhoom.com

Read the instructions carefully. Remove all the wrappings , staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.

CAUTION
KEEP ALL THE PARTS OUT OF CHILDREN'S REACH.


HARDWARE			
A	MINI FIX	A1  A2  A3 	20 SETS
B	M8 X 30MM WOOD DOWEL		38 PCS
C	M6 X 60MM CSK CAP WOOD SCREW		6 PCS
D	ALLEN KEY M4		1 PC
E	M3.5 X 16MM C.B SCREW		12 PCS
F	M4 X 30MM C.B SCREW		4 PCS
G	M4 X 38MM C.B SCREW		4 PCS
H	12" DRAWER SLIDE	H1 (L/R)  H2 (L/R) 	1 SETS
I	25MM SOFA LEG		4 PCS

PART LIST		QTY
1	TOP PANEL	1 PC
2	BOTTOM PANEL	1 PC
3	SIDE PANEL (L&R)	2 PCS
4	BACK PANEL	1 PC
5	SIDE SUPPORT (L)	1 PC
6	SIDE SUPPORT (R)	1 PC
7	LEG CORNER (1)	2 PCS
8	LEG CORNER (2)	2 PCS
9	DRAWER FRONT	1 PC
10	DRAWER BACK	1 PC
11	DRAWER SIDE (L)	1 PC
12	DRAWER SIDE (R)	1 PC
13	DRAWER BOTTOM	1 PC

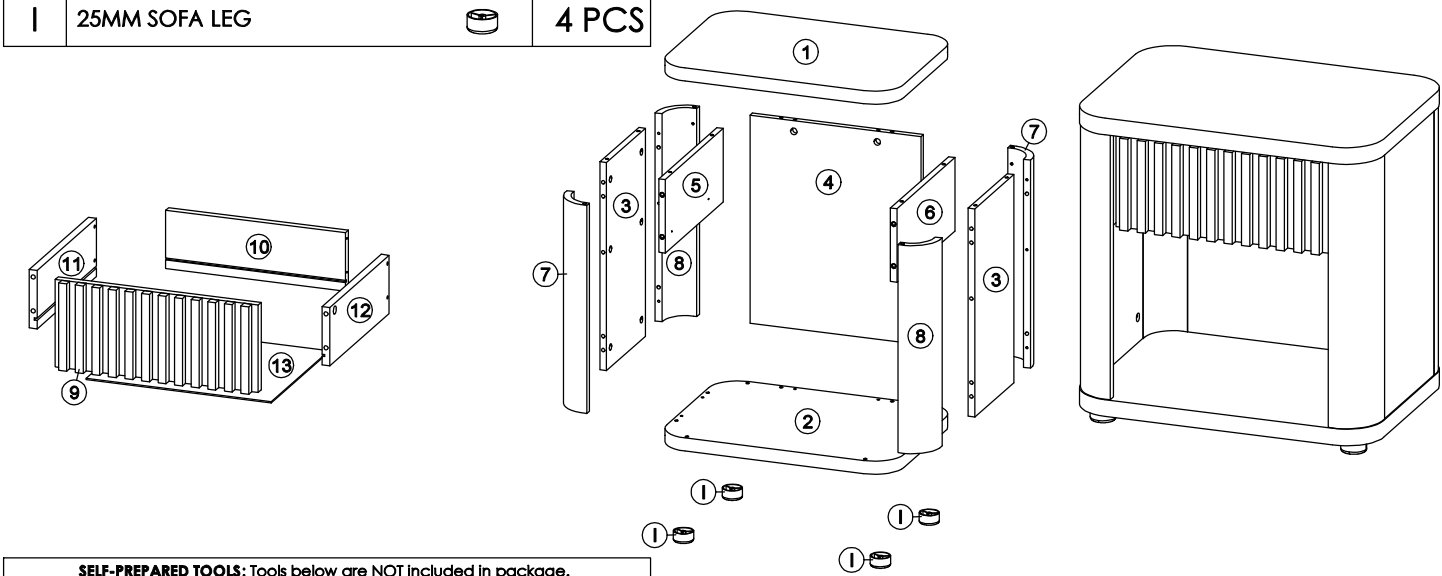

SELF-PREPARED TOOLS: Tools below are NOT included in package.	
 SCREWDRIVER	 HAMMER

CODING
- 131192


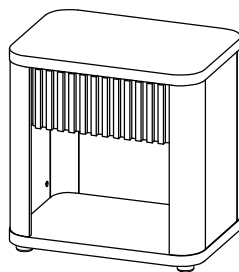


ISO 9001:2015
Reg. No. 000435-1-KTY-1-QMS

nuhoom.com

STEP 1


- Insert hardware **A2** onto panel (1), (7), (8) and (9).
(Repeat 20 times.)
- Insert hardware **B** into panel (3), (4), (5), (6), (7), (8), (11) and (12).
(Repeat 38 times.)

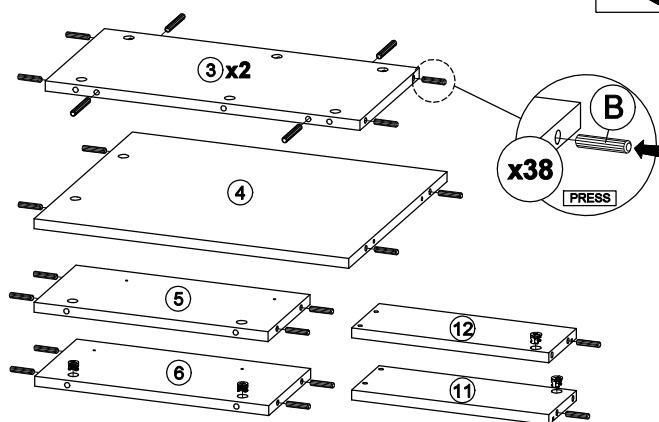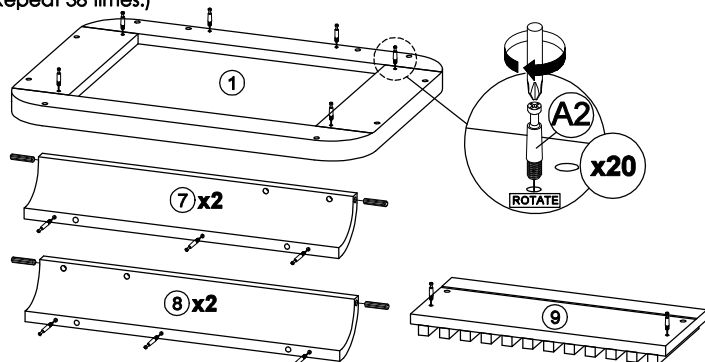

STEP 2


- Fix hardware **H1 (L/R)** onto panel (5) and (6) with hardware **E**.
(Repeat 3 times for each hardware.)

SCREWDRIVER
REQUIRED

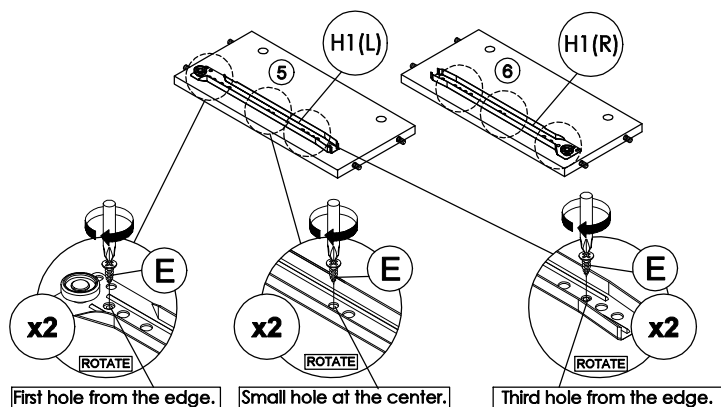

STEP 4


- Insert hardware **A1** into panel (3), (4), (5) and (6).
(Repeat 6 times.)
- Attach panel (3), (4), (5), (6), (7) and (8) to panel (1).
- Insert all hardware **A2** into **A1**.
- Rotate all **A1** until tight.
- Apply **A3** onto all **A1**.
(Repeat 6 times.)

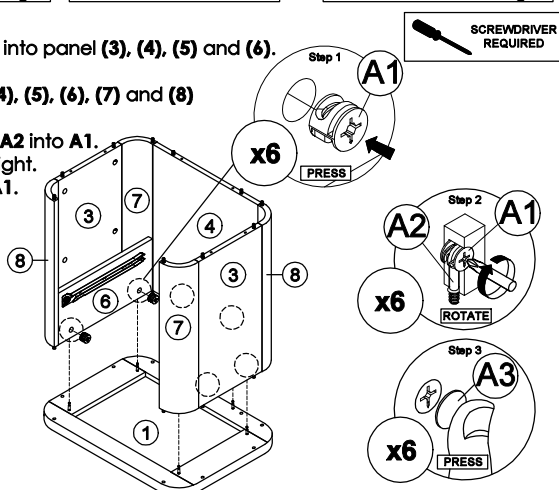

STEP 3

- Insert hardware **A1** into panel (3).
(Repeat 12 times.)
- Attach panel (7) and (8) to panel (3), (5) and (6).
- Insert all hardware **A2** into **A1**.
- Rotate all **A1** until tight.
- Apply **A3** onto all **A1**.
(Repeat 12 times.)


SCREWDRIVER
REQUIRED

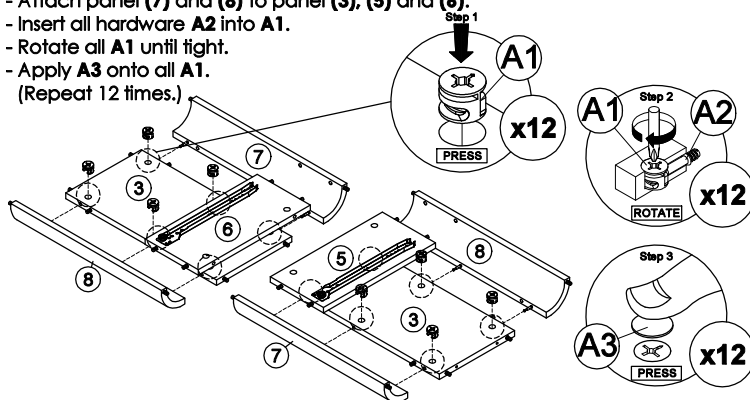


STEP 5

- Connect panel (2) to panel (3), (4), (7) and (8) by using hardware **C** and **D**.
(Repeat 6 times.)

HARDWARE
D

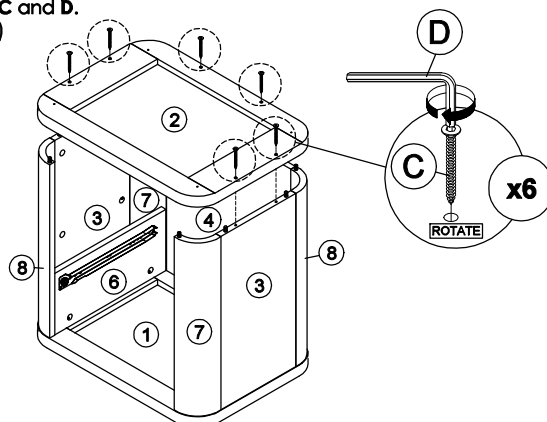

CODING
- 131192

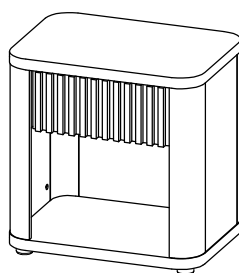


ISO 9001:2015
Reg. No. 000435-1-KTY-1-QMS

nuhoom.com


STEP 6

Fix hardware **I** onto panel **(2)** by using hardware **F**.
(Repeat 4 times.)

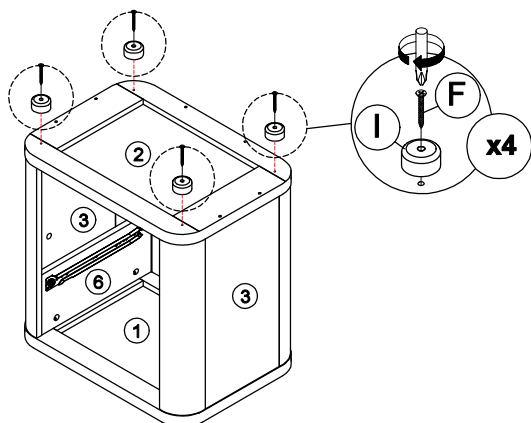


STEP 7

Assemble panel **(11)** and **(12)** to panel **(10)** by using hardware **G**.
(Repeat 4 times.)

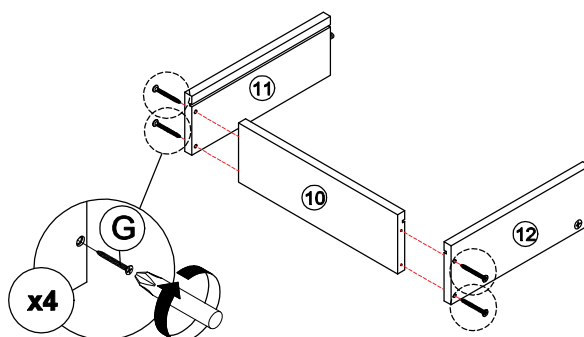


STEP 8

Insert the panel **(13)** along the slot.
(Repeat 1 times.)

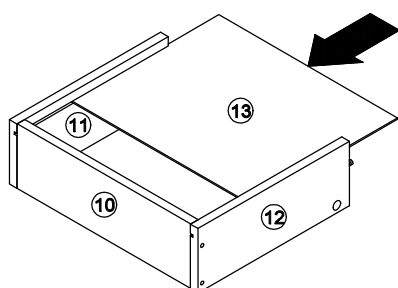


STEP 9

- Insert hardware **A1** into panel **(11)** and **(12)**.
(Repeat 2 times.)
- Attach panel **(9)** to panel **(11)** and **(12)**.
- Insert all hardware **A2** into **A1**.
- Rotate all **A1** until tight.
- Apply **A3** onto all **A1**.
(Repeat 2 times.)

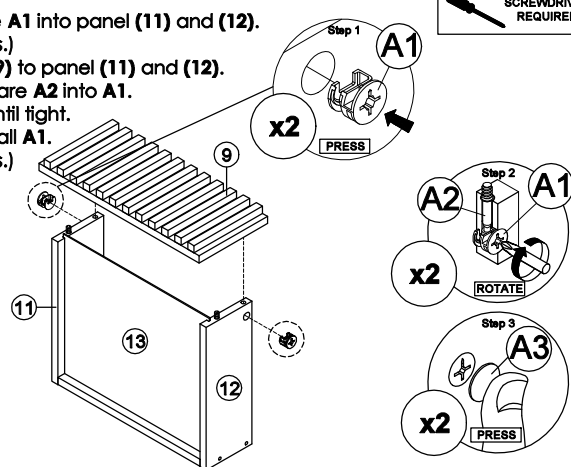

STEP 10

Assemble hardware **H2 (L/R)** to panel **(11)** and **(12)** by using hardware **E**.
(Repeat 3 times for each hardware.)

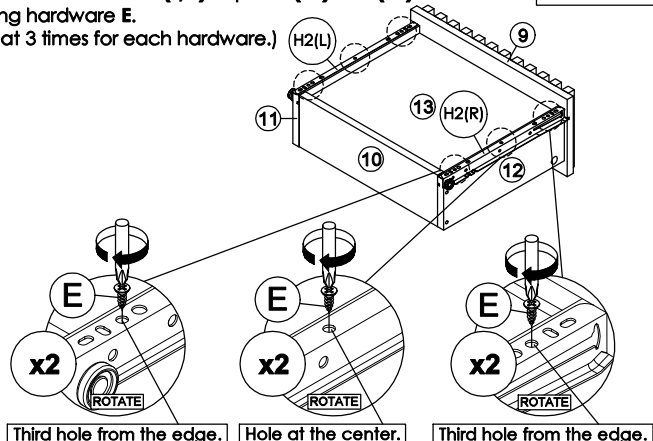

STEP 11

Put all the drawer in place along the drawer slides.

