


CODING  
- 132114


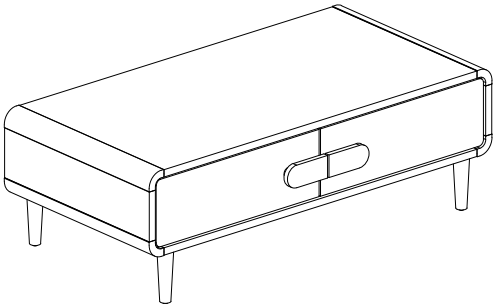


ISO 9001:2015  
Reg. No. 000405-1-2017-1-QMS




Read the instructions carefully. Remove all the wrappings , staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.

CAUTION  
KEEP ALL THE PARTS OUT OF CHILDREN'S REACH.

ITEM	PHOTO	PARTS NAME	QTY
①		Lome Coffee Table 102/173	1
②		Leg	4

CODING  
- 132114

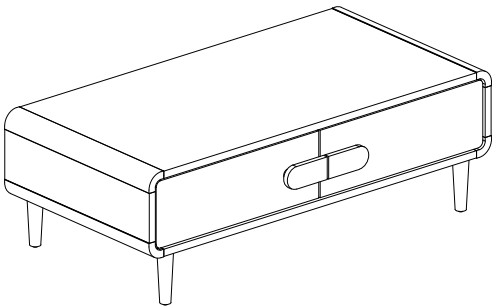

ISO 9001:2015

nuhoom.com

1

