BRADFORD

CODING -133043



ISO 9001:2015 Reg.No. 000435-1-MY-1-QMS

LUOOMa.com

Read the instruction carefully. Remove all the wrapping material, staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Be sure that you have all the parts before you start assembling. Place all the wooden furniture part on a clean and flat soft surface, such as carpet or rubbermat to prevent from scratches.

CAUTION KEEP ALL THE PARTS OUT OF REACH OF CHILDREN.

ITEM	РНОТО	HARDWARE NAME	QTY
A	9	Bolt M6x15	8
B	S	Screw Ø4x10	6
0		Allen key 4 mm	1


ITEM	РНОТО	PARTS NAME	QTY
1		Top plate	1
2		Leg frame	2
3		Top rail (L=968mm)	2
4		Bottom rail (L=968mm)	2

CODING -133043




ISO 9001:2015 Reg.No. 000435-1-MY-1-QMS

LUOOMa.com

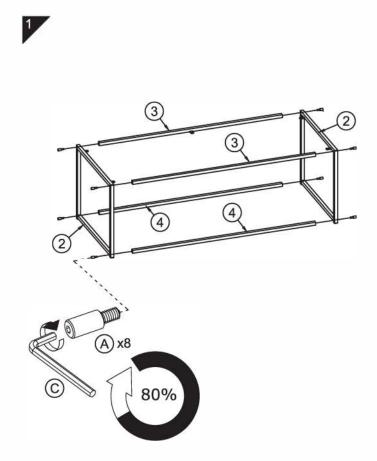



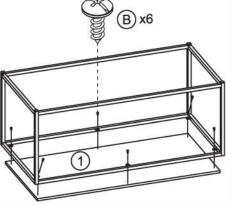

CODING -133043



ISO 9001:2015 Reg.No. 000435-1-MY-1-QMS

LUOOMa.com



