

CODING
-133048




ISO 9001:2015
Reg. No. 000435-1-027-1-Q045

nuhoom.com

Read the instructions carefully. Remove all the wrappings , staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.

CAUTION
KEEP ALL THE PARTS OUT OF CHILDREN'S REACH.

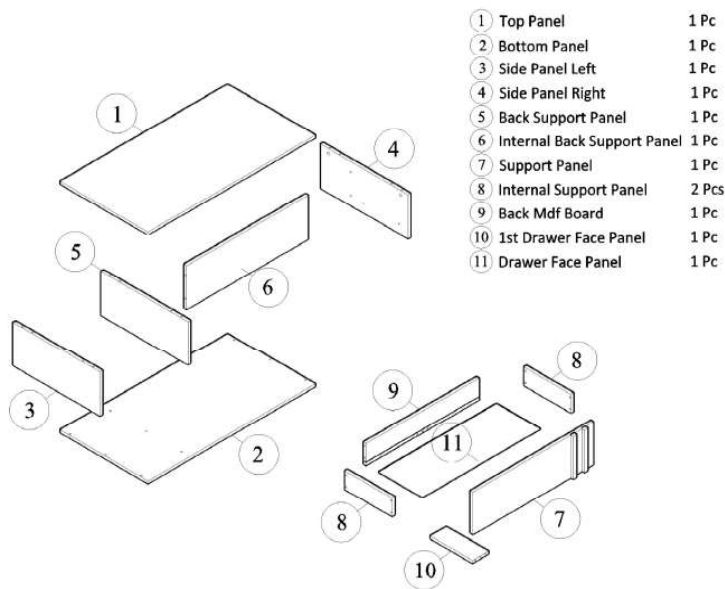

NO	PHOTO	HARDWARE LIST	QTY
A		WOOD DOWEL M8X30MM	14 PCS
B		MINIFIX M5x24MM	8 PCS
C		MINIFIX CASING	8 PCS
D		DRAWER SLIDE 12"	1 SET
E		SCREW M6X50MM	9 PCS
F		SCREW M4X38MM	8 SET
G		PVC ROUND TAPER LEG	5 SET
H		ALLEN KEY	1 PCS

CODING
-133048



ISO 9001:2015
Reg. No. 000435-1-001-1-Q005

nuhoom.com

Assembly Information

- Assemble screws
- Assemble Wood Dowels
- Assemble Minifix

<p>1. Screw up to half point to make sure all spots are lined up</p>	<p>1. Insert dowels into holes tightly</p>	<p>1. Screw Up Minifix M5X24MM into holes. Tighten all Minifix.</p>	<p>2. Insert Minifix Casing into holes. Set the arrow of the screw up toward the nut slot.</p> <p>Arrow</p>
<p>2. Tighten all screws</p>	<p>2. Attach the insert holes along with dowels</p>	<p>3. Insert Minifix M5X24mm and Minifix Casing together into the slot</p>	<p>4. Tighten the cam lock screw ※Use Allen Key or Screwdriver</p>


CODING
-133048




ISO 9001:2015
Reg. No. 000435-1-MEX-1-QM05

nuhoom.com

1

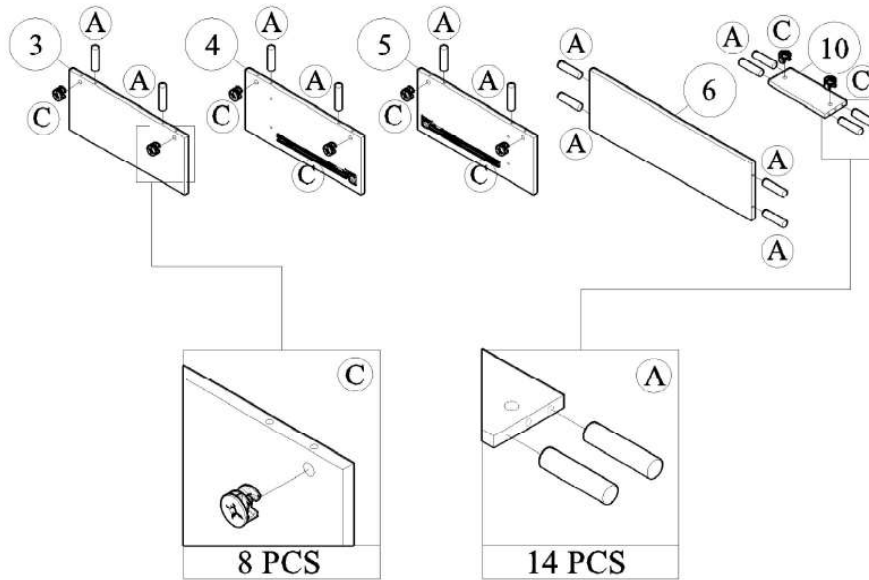

2

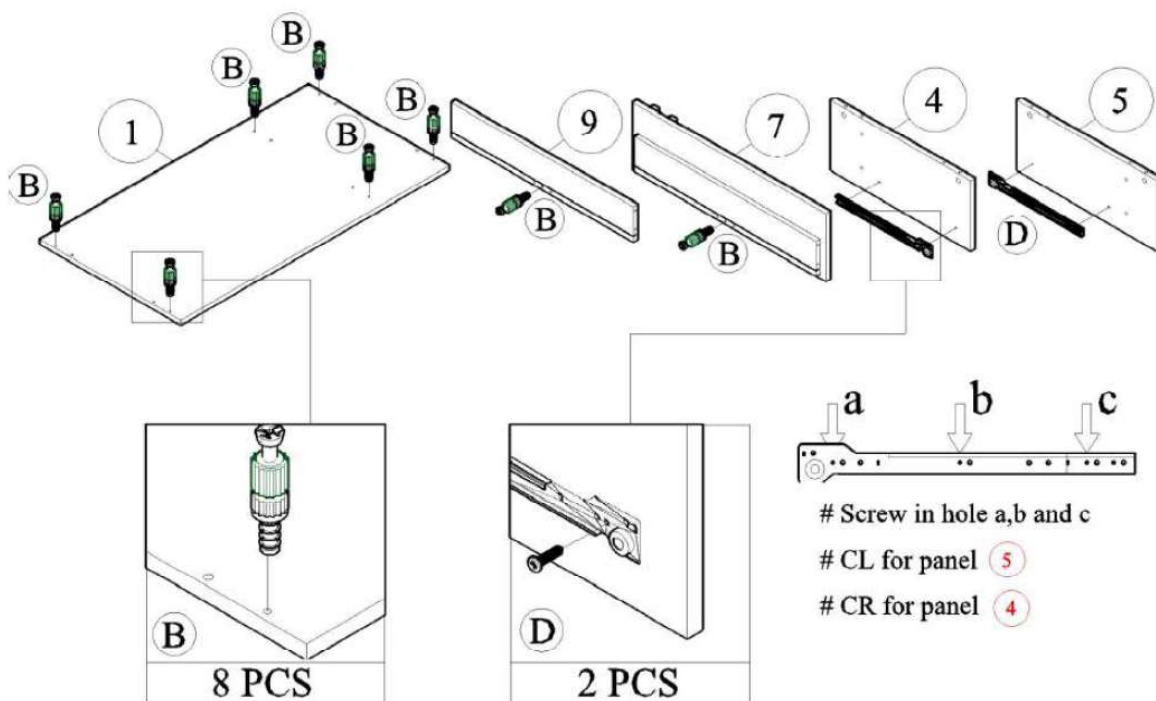


CODING
-133048




ISO 9001:2015
Reg. No. 000435-1-MEX-1-QM05

nuhoom.com



3

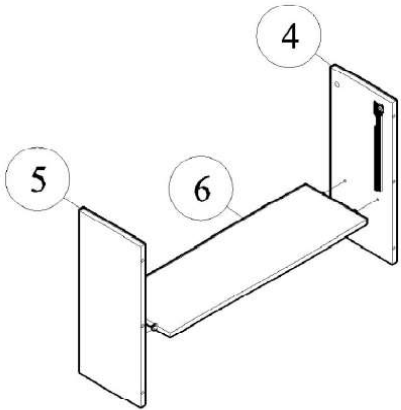



4

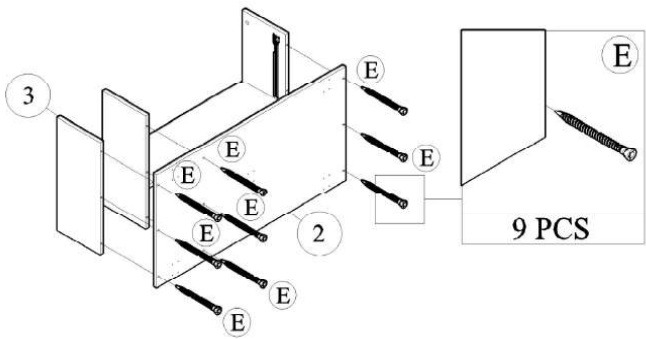

5

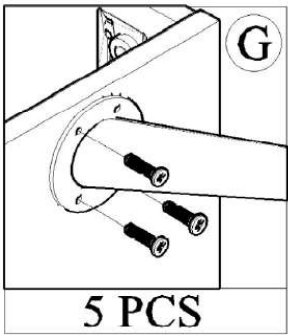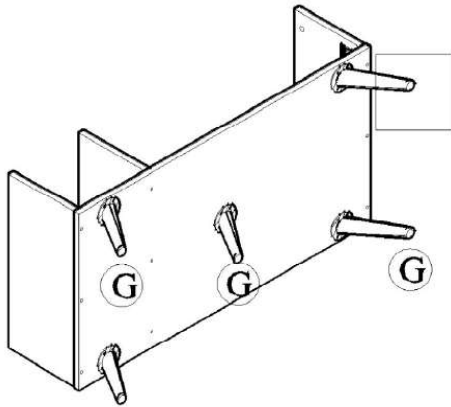

6

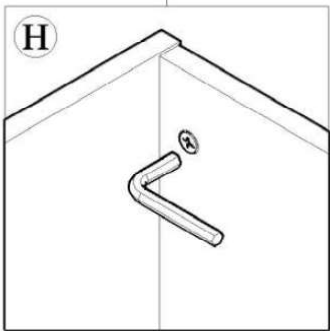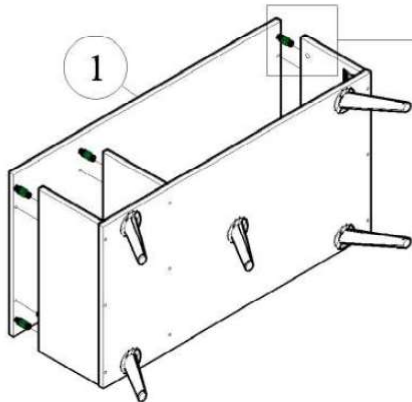



CODING
-133048





ISO 9001:2015
Reg. No. 000435-1-MEX-1-Q045

nuhoom.com



7

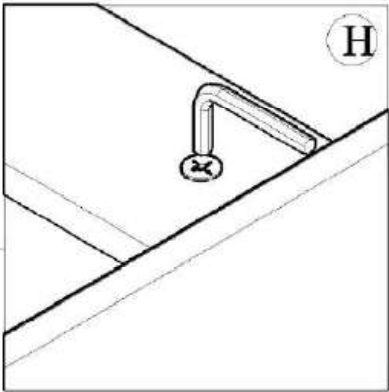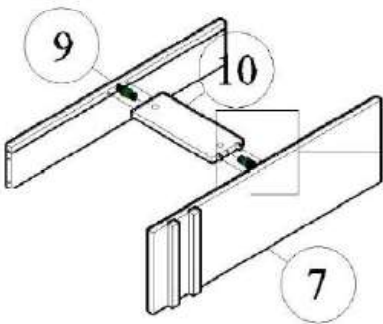

8

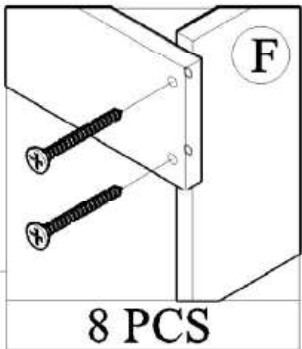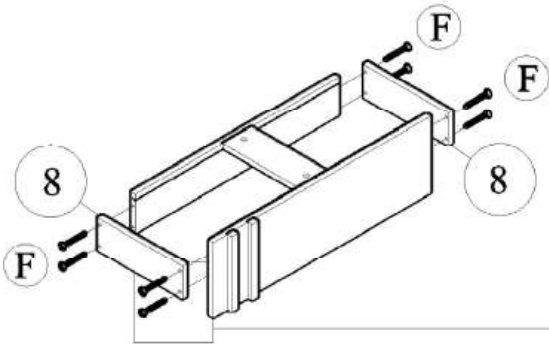

9

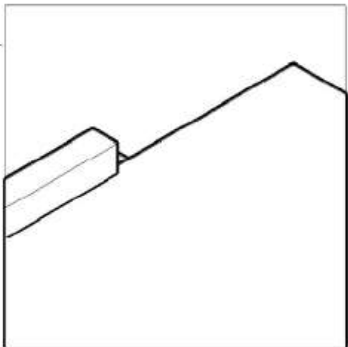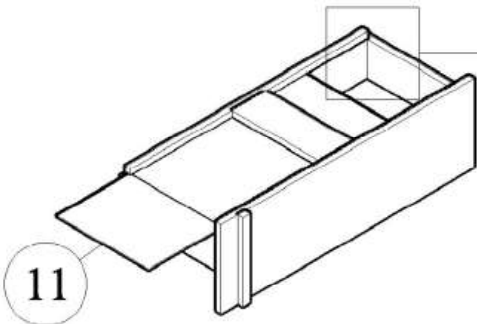



CODING
-133048



ISO 9001:2015
Reg. No. 000435-1-MEX-1-QM05

nuhoom.com

10

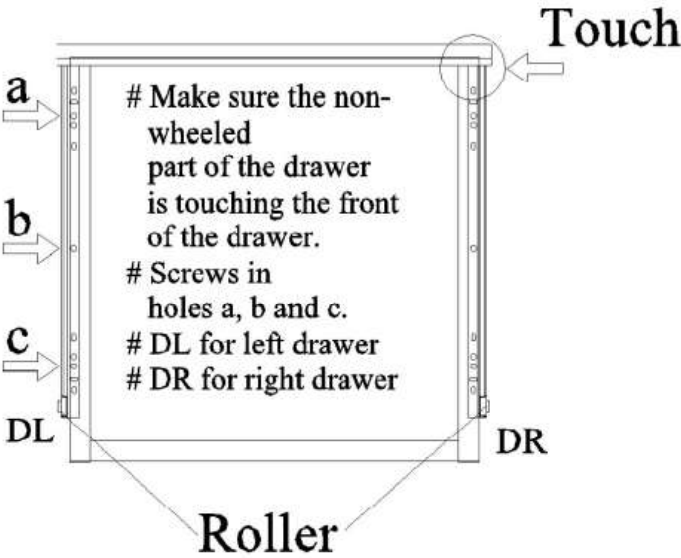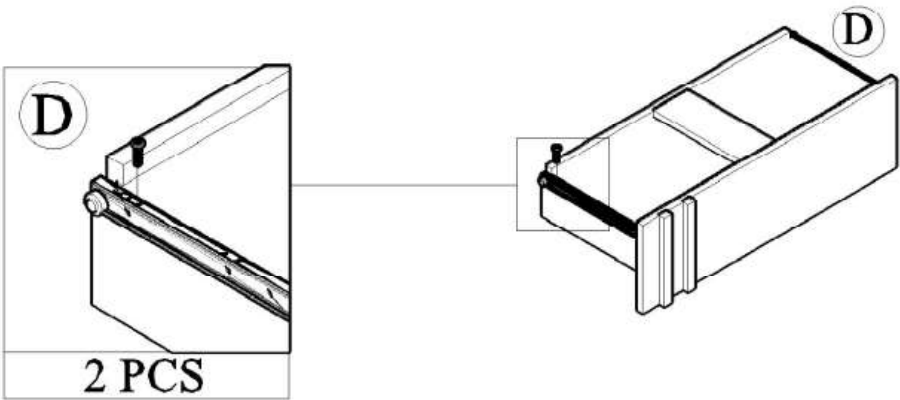

11

12

