

CODING

- 133050
- 133057



ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

nesthouz.com

Read the instructions carefully. Remove all the wrappings , staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.

CAUTION

KEEP ALL THE PARTS OUT OF CHILDREN'S REACH.

NO	PHOTO	HAREWARE NAME	QTY
(A)		JCBC SCREW M6 X 60MM	4 PCS
(B)		JCBC SCRWE M6 X 40MM	4 PCS
(C)		SPRING WASHER M6	4 PCS
(D)		FLAT WASHER M6 (BIG)	4 PCS
(E)		FLAT WASHER M6 (SMALL)	4 PCS
(F)		ALLEN KEY M4	1 PC

ITEM	PHOTO	PARTS NAME	QTY
(1)		TABLE TOP	1 PC
(2)		TABLE LEG	4 PCS
(3)		TABLE BOTTOM	1 PC


CODING
- 133050
- 133057



ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

nesthouz.com

1

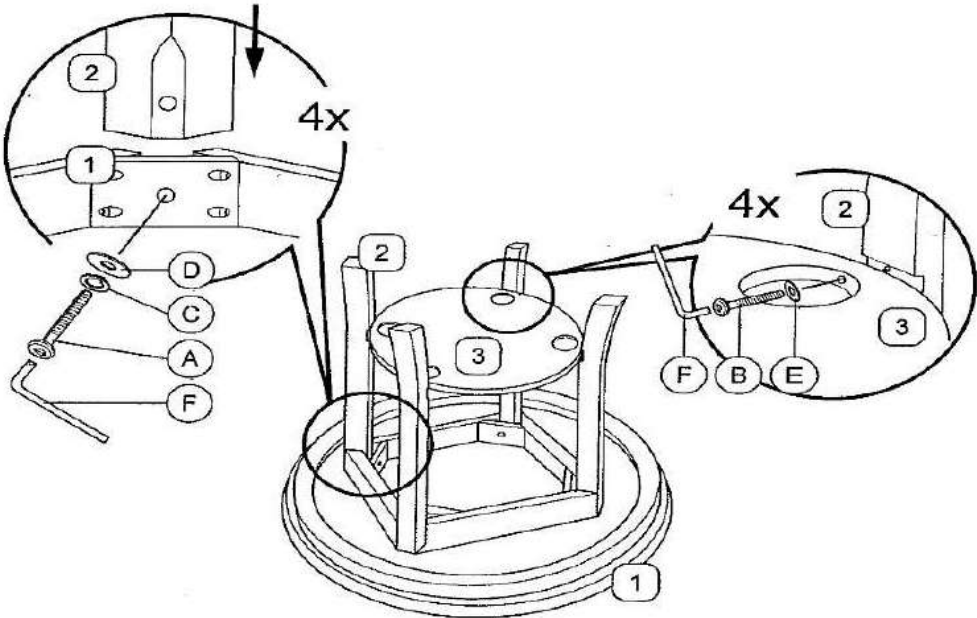

2

