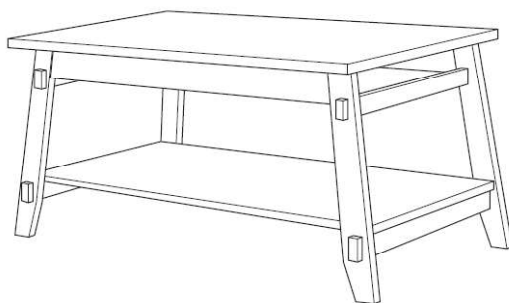


CODING

-133070

-133071


ISO 9001:2015
Reg. No. 000435-1-MEX-1-QMS





nuhoom.com

Read the instructions carefully. Remove all the wrappings , staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.

CAUTION

KEEP ALL THE PARTS OUT OF CHILDREN'S REACH.


NO	PHOTO	HARDWARE LIST	QTY
A		JCBC Screw M6 x 45mm	4
B		Spring Washer M6	4
C		CSK M4 x 32mm	10
D		Wood Dowel M8 x 30mm	8
E		M4 Allen Key	1

ITEM	PHOTO	PART LIST	QTY
1		Table Top	1
2		Side Leg	2
3		Apron	2
4		Bottom Panel	1

CODING

-133070


-133071

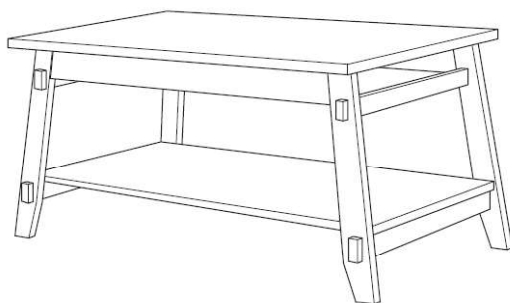

ISO 9001:2015
Reg. No. 000435-1-MEX-1-QM5

nuhoom.com

1

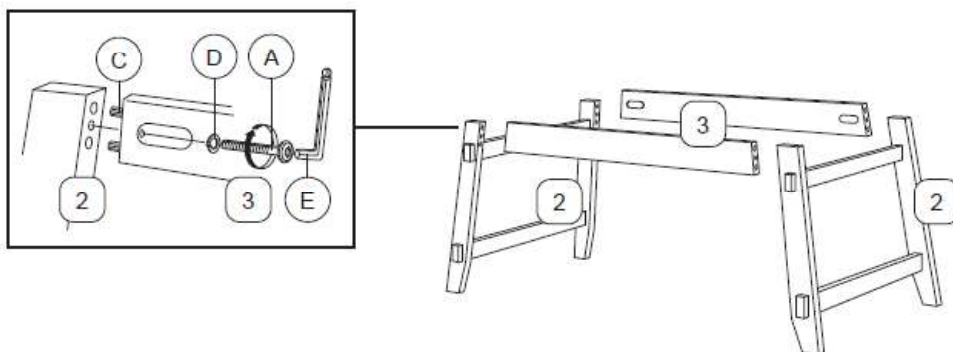

2

