


CODING

-133093

-133094

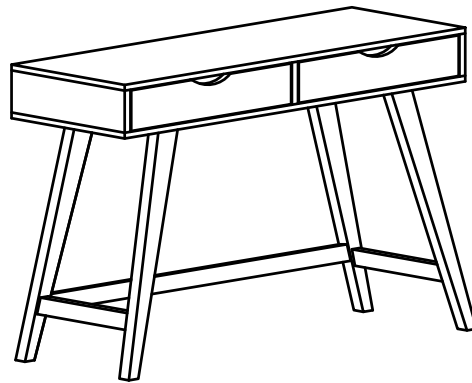

ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS


LUooma.com

Read the instruction carefully. Remove all the wrapping material, staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Be sure that you have all the parts before you start assembling. Place all the wooden furniture part on a clean and flat soft surface, such as carpet or rubber mat to prevent from scratches.

Caution

KEEP ALL PARTS OUT OF REACH OF CHILDREN.


ITEM	HARDWARE LIST	QTY
Ⓐ	JCBC SCREW M6 X 35MM 	4
Ⓑ	SPRING WASHER 5/16" 	4
Ⓒ	FLAT WASHER 5/16" 	4
Ⓓ	ALLEN KEY M5 	1
Ⓔ	SCREW CKS [4 X 32MM] 	2
Ⓕ	SCREW M3.5 X 16MM 	1
Ⓖ	PLASTIC HOOK 	2
Ⓗ	CABLE TIE	1
Ⓘ	FLAT WASHER (ø5 X ø9) 	2
Ⓙ	WALL PLUG 	1
Ⓚ	SCREW CKS [4 X 32MM] 	1

ITEM	PART LIST	QTY
①	BODY 	1
②	LEG 	2
③	WOODEN SUPPORT 	1

CODING

-133093


-133094

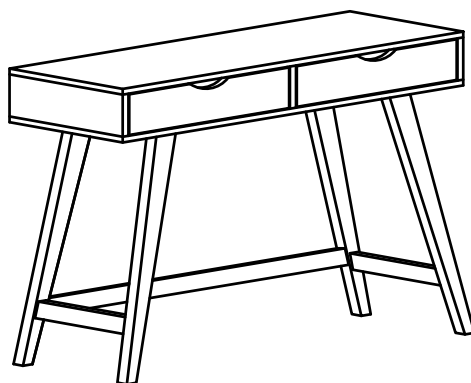


ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

LUOMA.COM


1

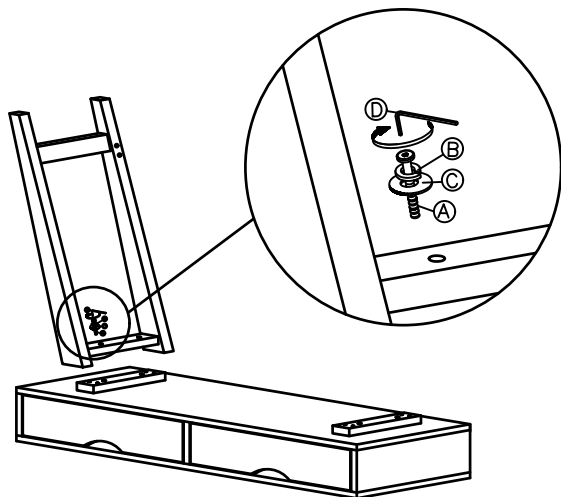

2

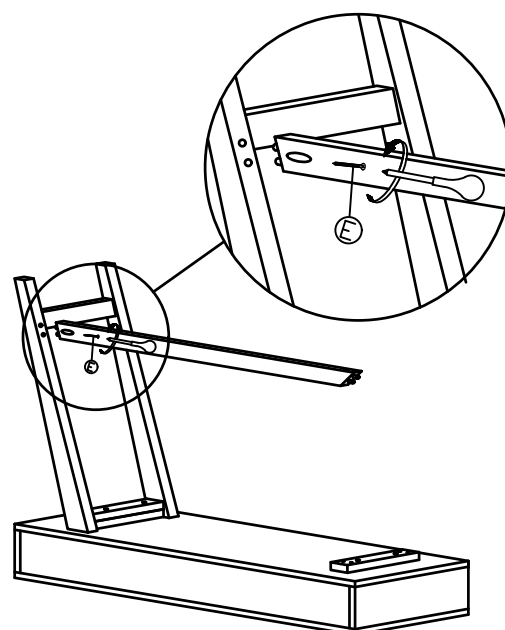


3

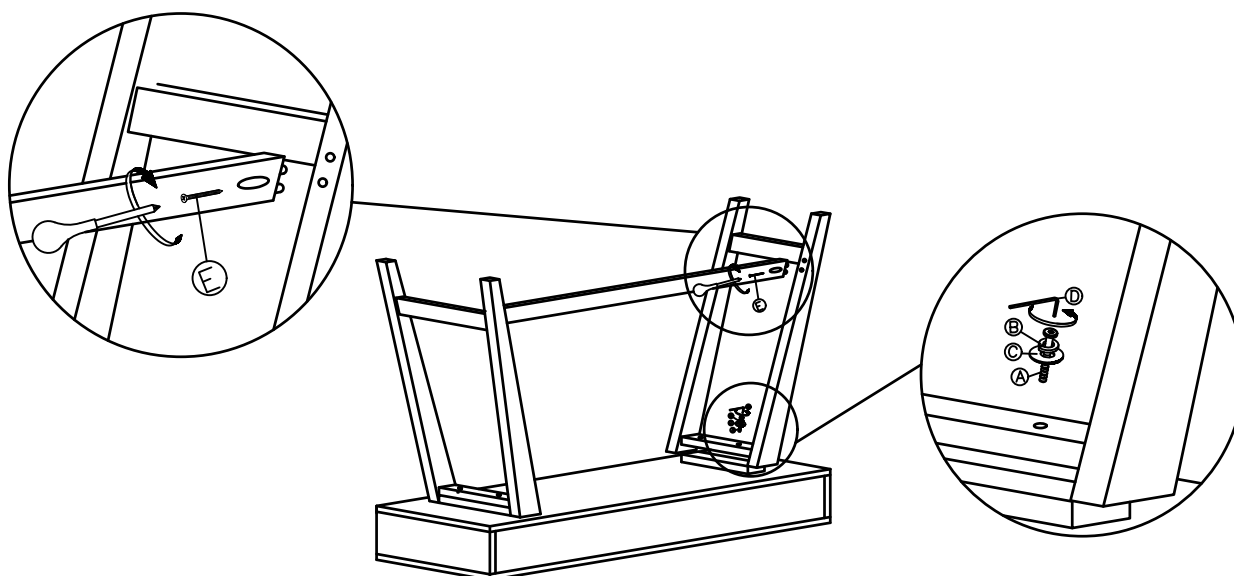

CODING

-133093


-133094

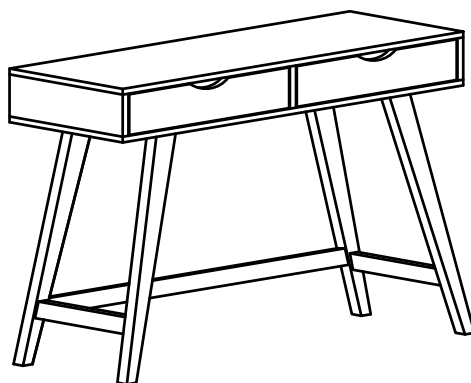


ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

LUOMA.COM

4

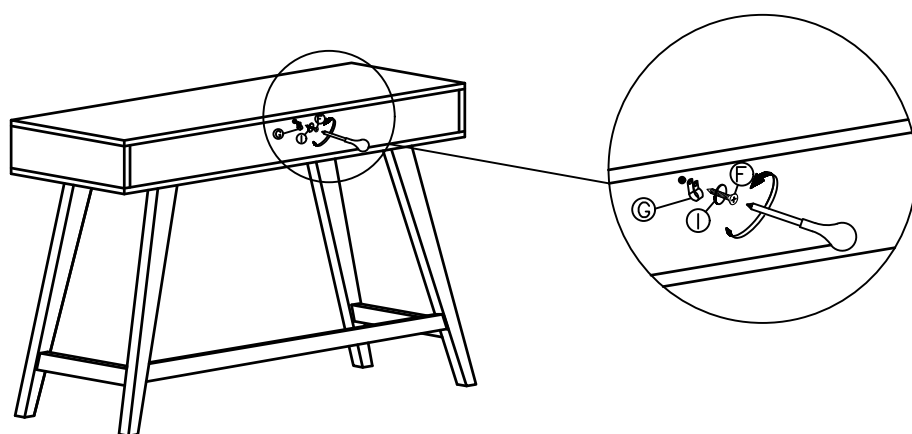

5

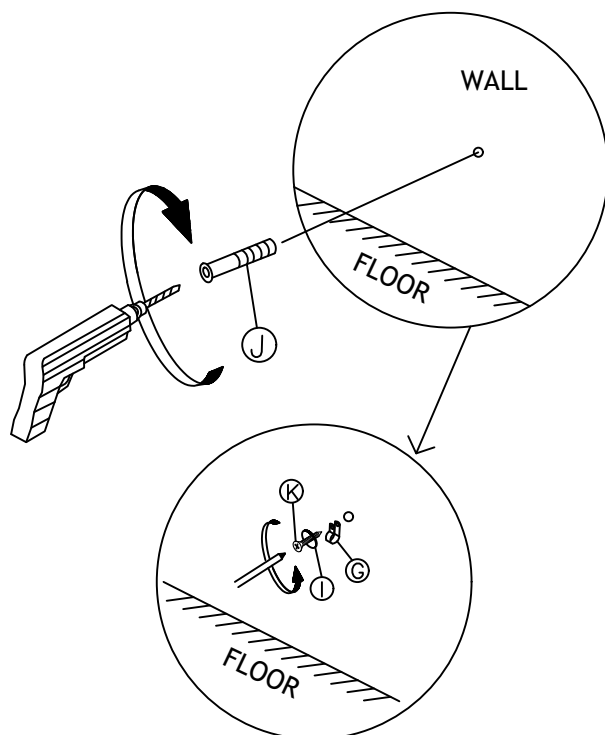

6

