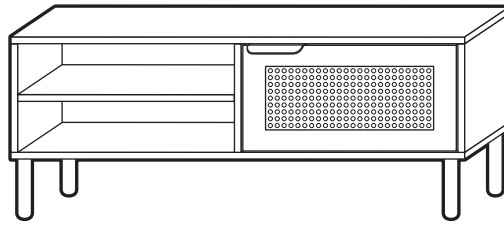


CODING

-133132

-133135

ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

nuhoom.com

Read the instructions carefully. Remove all the wrappings, staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.

CAUTION

KEEP ALL THE PARTS OUT OF REACH OF CHILDREN.


		HARDWARE LIST	QTY
A		M4 x 45mm Chipboard Screw	6
B		M3.5 x 16mm Chipboard Screw	27
F		Wood Dowel 6 x 25mm	16
D		Minifix Pin	6
E		Minifix Cam	6
F		Leg	4
G		Handle	1
H		Hinges Pump	2
I		Door Stopper	1

ITEM		PART LIST	QTY
1	Top Panel		1
2	Bottom Panel		1
3	Left Panel		1
4	Right Panel		1
5	Centre Panel		1
6	Shelf Panel		1
7	Back Panel		1
8	Door Panel		1

CODING

-133132


-133135

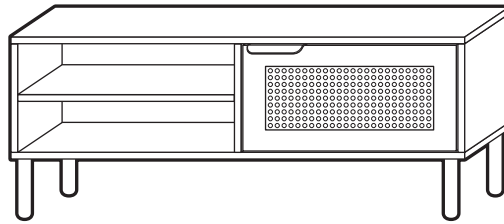


ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

nuhoom.com


Step 1

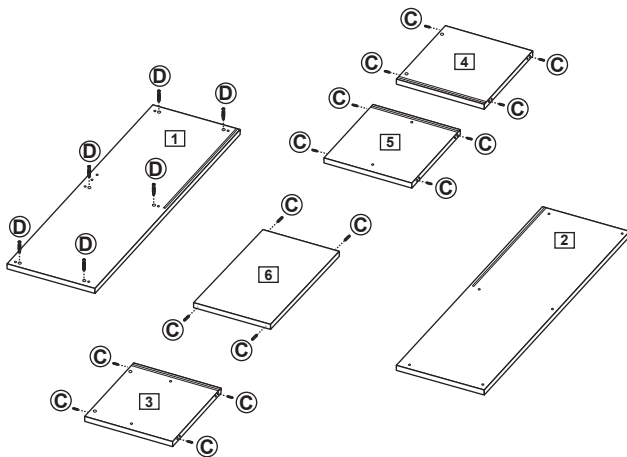


Step 2

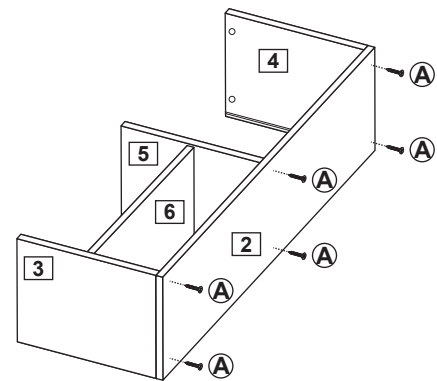


Step 3

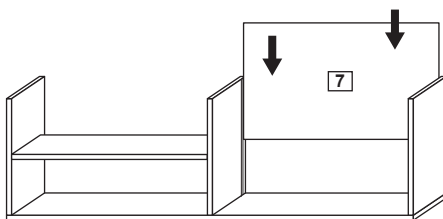

Step 4

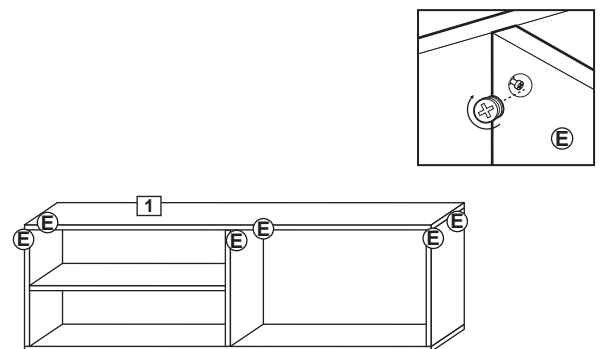

Step 5

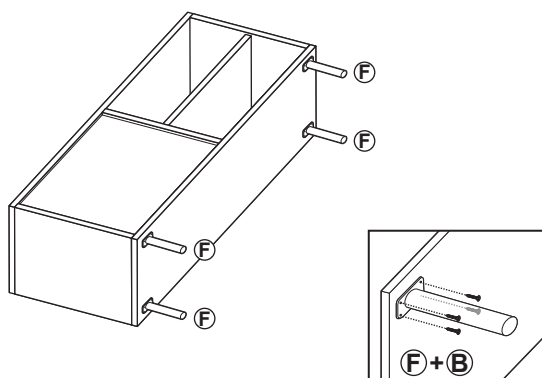

Step 6

