

CODING
- 133140
- 133141



ISO 9001 : 2015
Reg. 000435-1-MY-1-QMS

nesthouz.com

Read the instruction carefully . Remove all the wrapping material staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure you have all part before you start assembling. Place all the wooden furniture part on a clean and flat surface, such as carpet or rubbermat to prevent scratches.

ITEM	PHOTO	HARDWARE NAME	QTY
A		JCBC M6 x 30 mm	8
B		WOOD BUTTON	8
C		ALLEN KEY M4	1
D		WOOD DOWEL M8 X 30mm	2
E		SPRING WASHER M6	2
F		METAL HOLE	2
G		JCBC M6 x 50 mm	2

ITEM	PHOTO	PARTS NAME	QTY
1		BOX	1
2		LEG	2
3		SUPPORT RAIL	1


CODING
- 133140
- 133141




ISO 9001 : 2015
Reg. 000435-1-MY-1-QMS

nesthouz.com

1

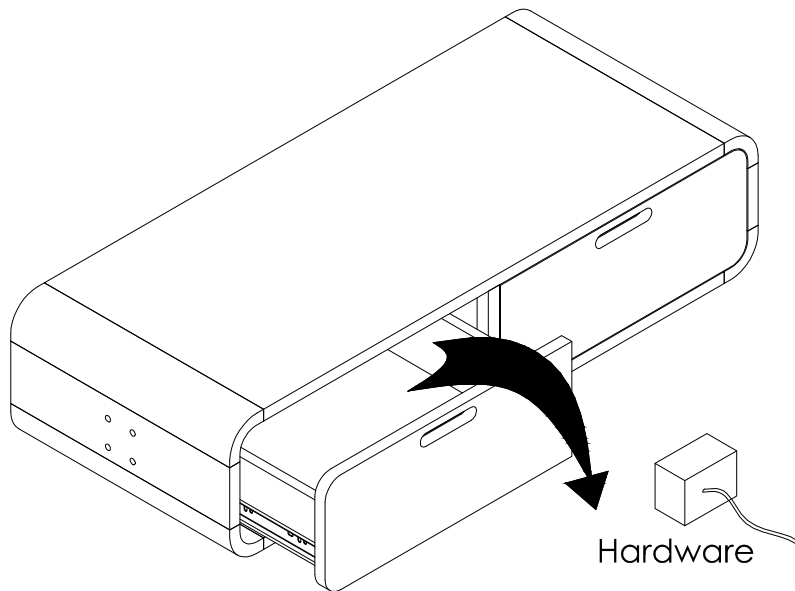

2

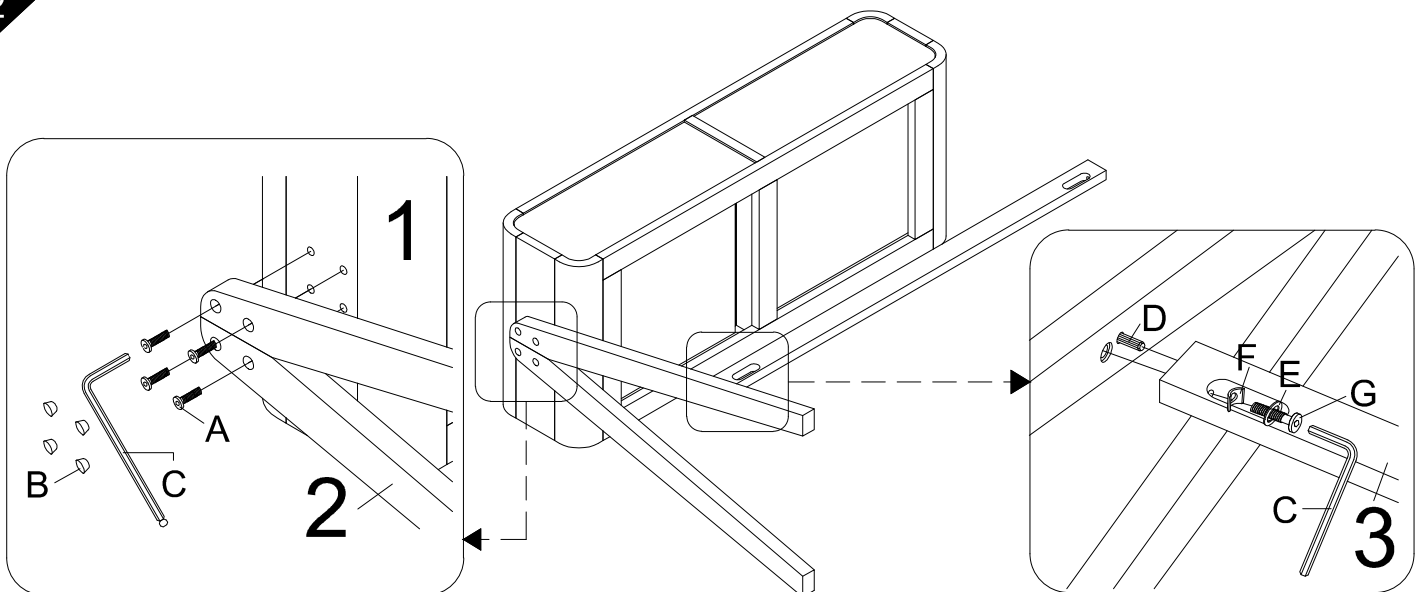



CODING
- 133140
- 133141





ISO 9001 : 2015
Reg. 000435-1-MY-1-QMS

nesthouz.com

3

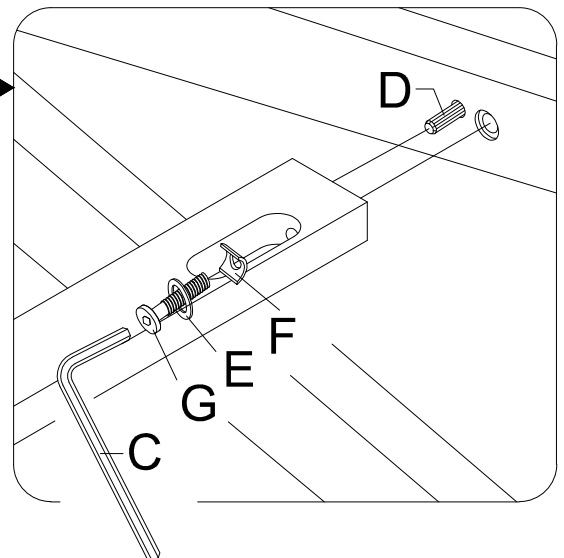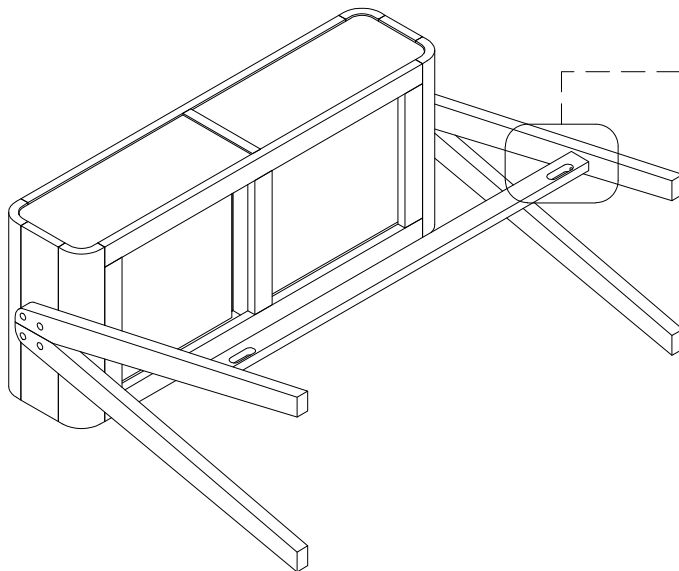

4

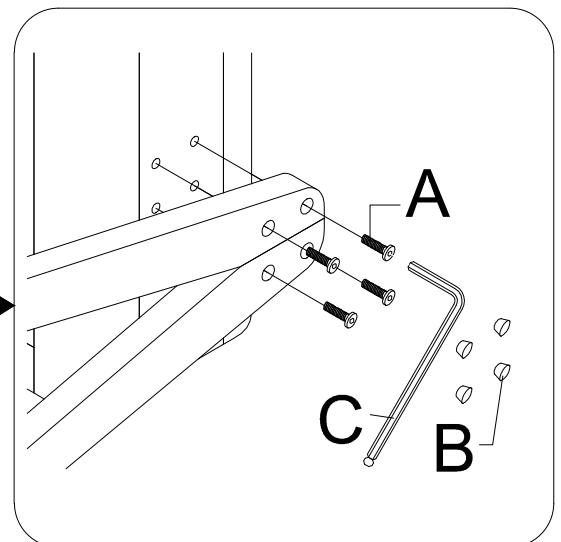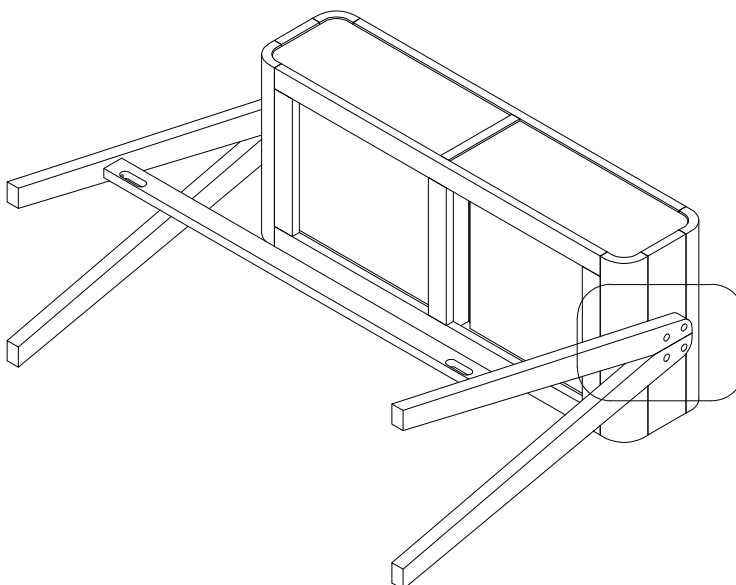


CODING
- 133140
- 133141




ISO 9001 : 2015
Reg. 000435-1-MY-1-QMS

nesthouz.com

5

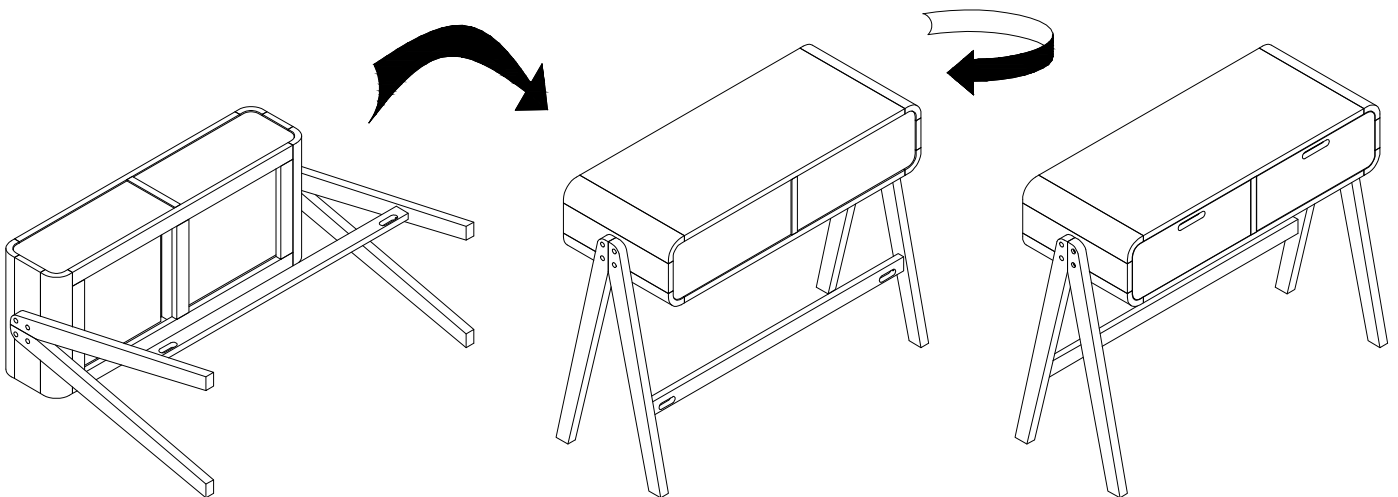

6

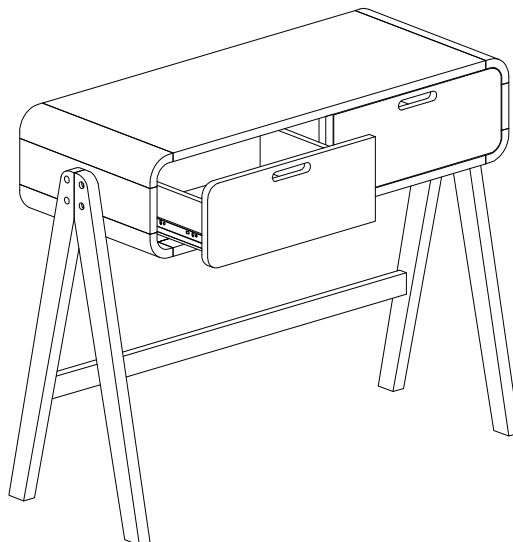

COMPLETED
ASSEMBLY