


CODING
- 133148

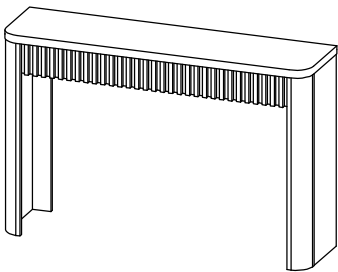

ISO 9001:2015
Reg. No. 000435-1-007-1-QM8


nuhoom.com

Read the instructions carefully. Remove all the wrappings , staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.

CAUTION
KEEP ALL THE PARTS OUT OF CHILDREN'S REACH.


HARDWARE				
A	MINI FIX	A1  A2  A3 	28 SETS	
B	M8 X 30MM WOOD DOWEL		20 PCS	
C	5/8 PVC NAIL LEG		6 PCS	
D	ALLEN KEY M4		1 PC	
E	M4 X 25MM C.B SCREW		4 PCS	
TIPPING PACK WITH A1				2 SETS
				

PART LIST		QTY
1	TOP PANEL	1 PC
2	SIDE PANEL (L)	1 PC
3	SIDE PANEL (R)	1 PC
4	SIDE BONE (L)	1 PC
5	SIDE BONE (R)	1 PC
6	FRONT PANEL	1 PC
7	BACK PANEL	1 PC
8	LEG CORNER (L)	1 PC
9	LEG CORNER (R)	1 PC

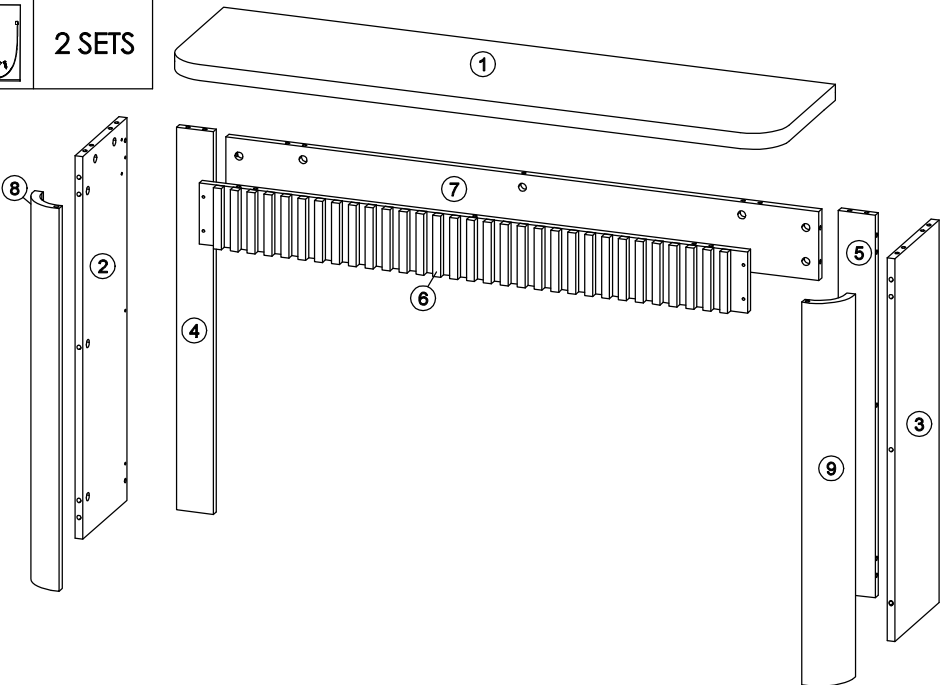

SELF-PREPARED TOOLS: Tools below are NOT included in package.	
 SCREWDRIVER	 HAMMER

CODING
- 133148

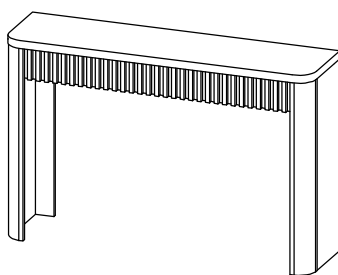


ISO 9001:2015
Reg. No. 000435-1-KTY-1-QMS

nuhoom.com


STEP 1

- Insert hardware **A2** onto panel (1), (2), (3), (8), (9).
(Repeat 28 times.)
- Insert hardware **B** into panel (2), (3), (4), (5), (6), (7), (8), (9).
(Repeat 20 times.)

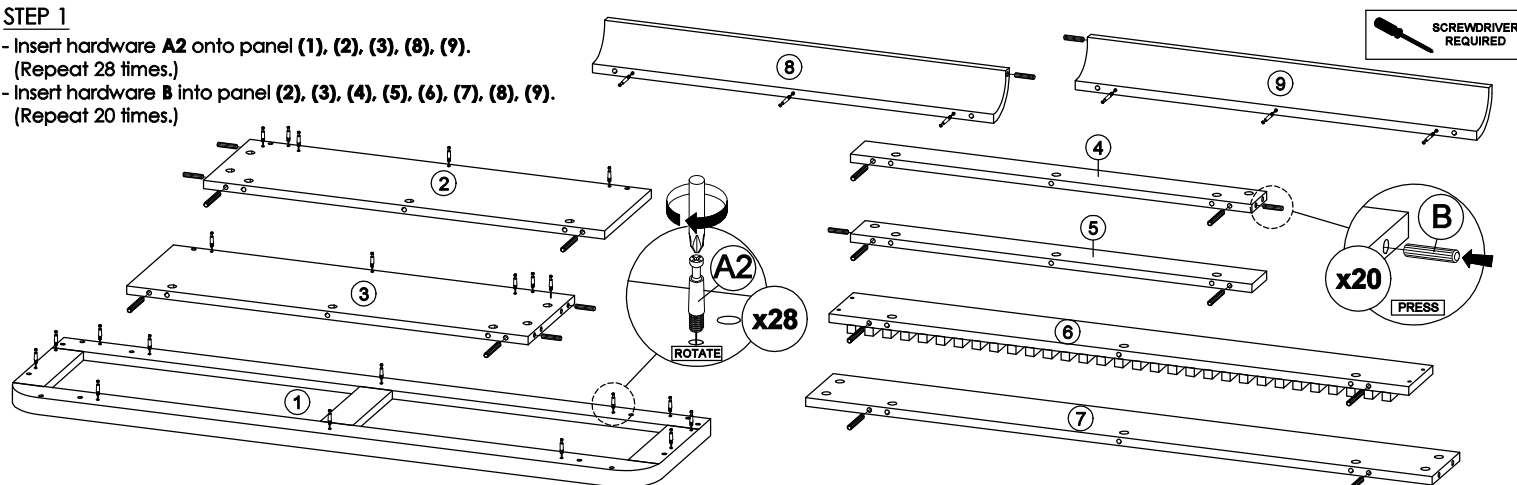


STEP 2

- Insert hardware **A1** into panel (2) and (3).
(Repeat 6 times.)
- Attach panel (8) to panel (2).
- Attach panel (9) to panel (3).
- Insert all hardware **A2** into **A1**.
- Rotate all **A1** until tight.
- Apply **A3** onto all **A1**.
(Repeat 6 times.)

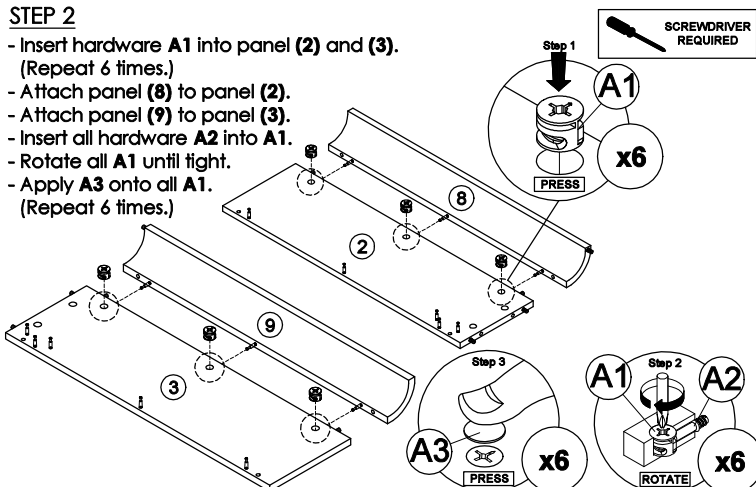


STEP 3

- Insert hardware **A1** into panel (4) and (5).
(Repeat 6 times.)
- Attach panel (4) to panel (2).
- Attach panel (5) to panel (3).
- Insert all hardware **A2** into **A1**.
- Rotate all **A1** until tight.
- Apply **A3** onto all **A1**.
(Repeat 6 times.)

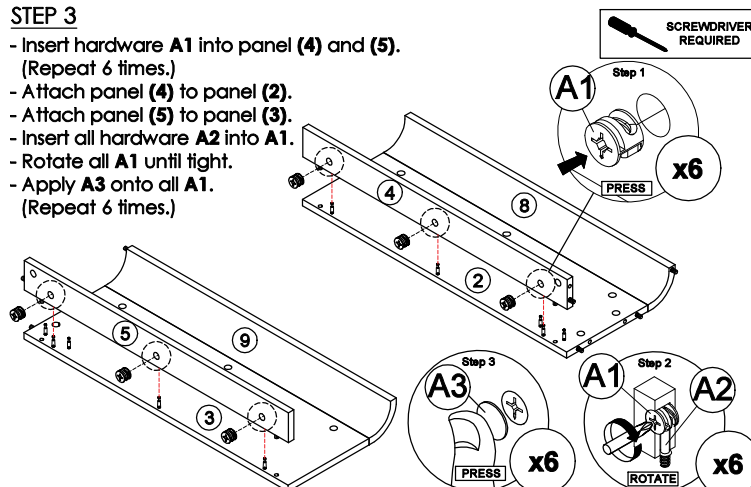


STEP 4

- Insert hardware **A1** into panel (7).
- Attach panel (2) and (3) to panel (7).
- Insert all hardware **A2** into **A1**.
- Rotate all **A1** until tight.
- Apply **A3** onto all **A1**.
(Repeat 4 times.)

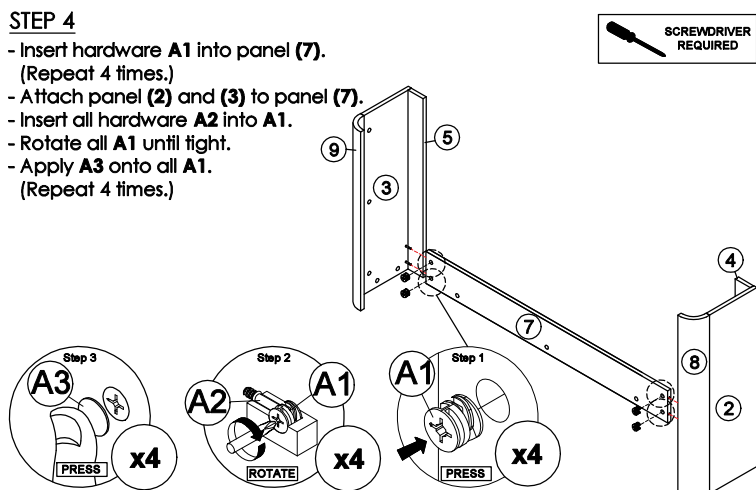


STEP 5

- Insert hardware **A1** into panel (2), (3), (4), (5), (6) and (7).
(Repeat 12 times.)
- Attach panel (2), (3), (4), (5), (6), (7), (8) and (9) to panel (1).
- Insert all hardware **A2** into **A1**.
- Rotate all **A1** until tight.
- Apply **A3** onto all **A1**.
(Repeat 12 times.)

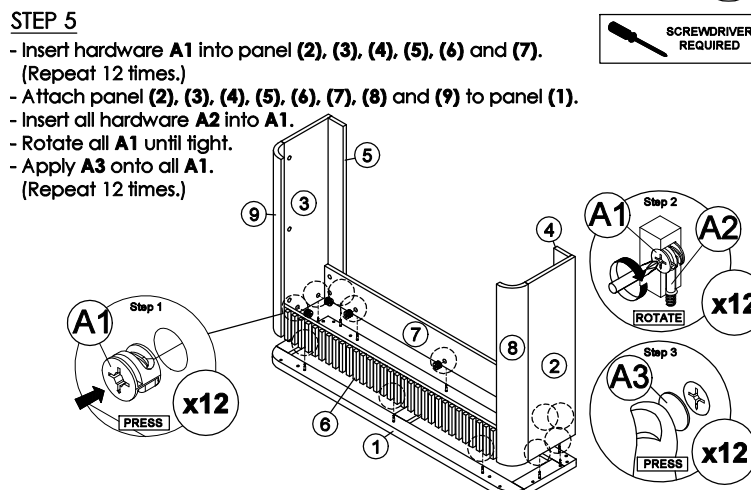


CODING
- 133148

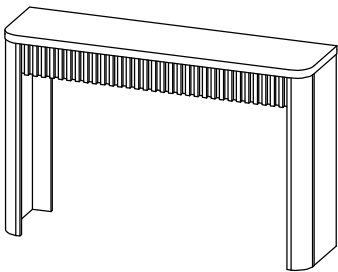

ISO 9001:2015
Reg. No. 000435-1-001-1-QM8


nuhoom.com

STEP 6
Assemble panel (6) with panel (8) and (9) by using hardware E. (Repeat 4 times.)

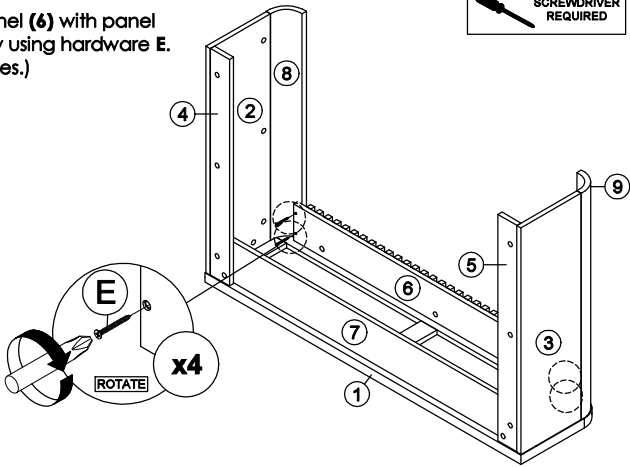

SCREWDRIVER
REQUIRED

STEP 7
Hit hardware C onto bottom of panel (2), (3), (4), (5), (8) and (9). (Repeat 6 times.)

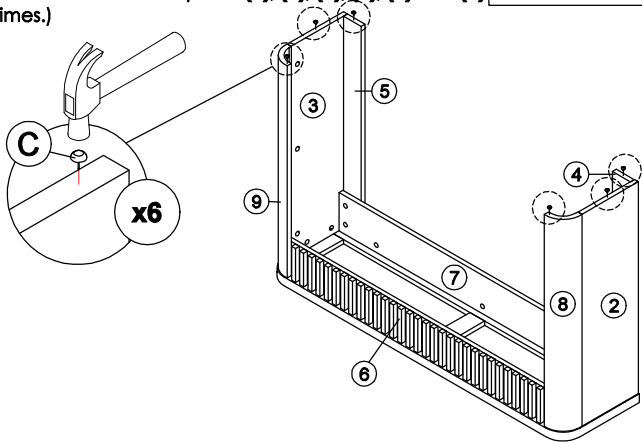

HAMMER
REQUIRED