
FROME

CODING
-133158
-133163

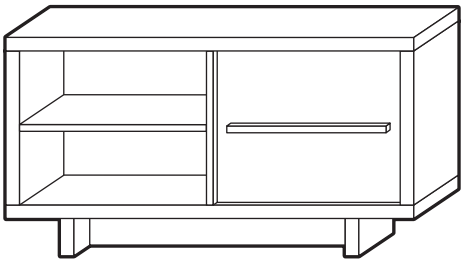

ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

nuhoom.com

Read the instructions carefully. Remove all the wrappings , staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.


CAUTION
KEEP ALL THE PARTS OUT OF REACH OF CHILDREN.

	HARDWARE LIST	QTY
A	M4 x 65mm Chipboard Screw	8
B	M4 x 28mm Chipboard Screw	2
C	M3.5 x 16mm Chipboard Screw	9
D	Wood Dowel 6 x 25mm	28
E	Leg Nail	4
F	Minifix Pin	11
G	Minifix Carn	11
H	Door Stoper	1
I	Hinges Pump	2

ITEM	PART LIST	QTY
1	Top Panel	1
2	Bottom Panel	1
3	Lelf Panel	1
4	Right Panel	1
5	Centre Panel	1
6	Shelf Panel	1
7	Back Panel	1
8	Door Panel + Handle	1
9	Leg Panel	1

FROME


CODING
-133158
-133163

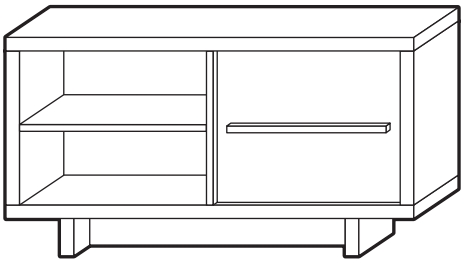


ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

nuhoom.com


Step 1

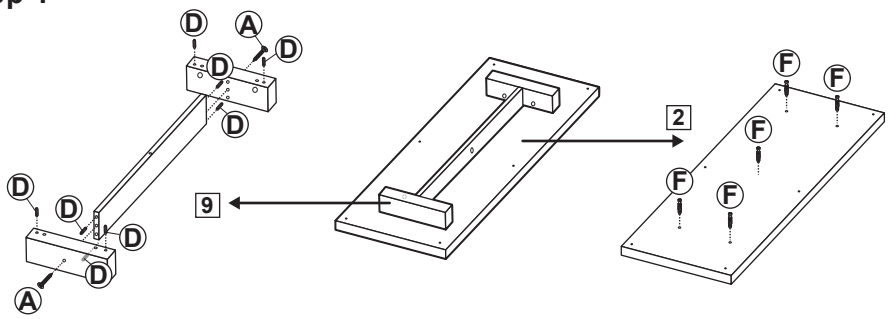


Step 2

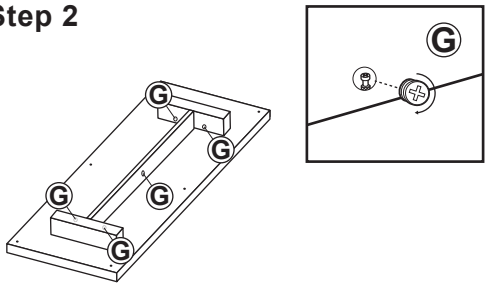


Step 3

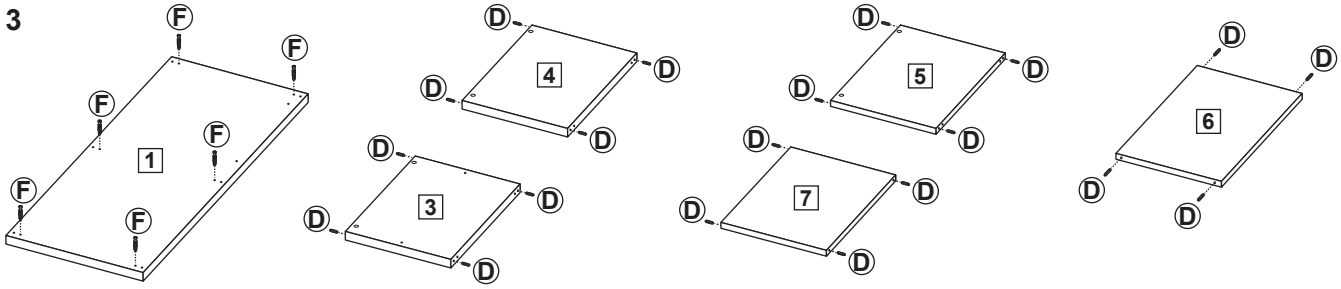


Step 3

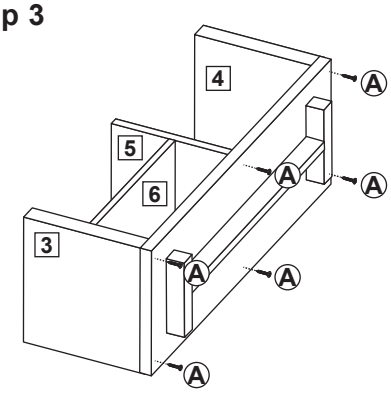


Step 4

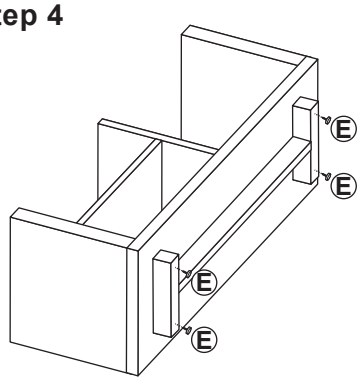


Step 5

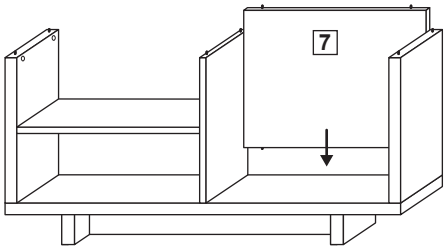

Step 6

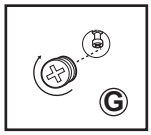

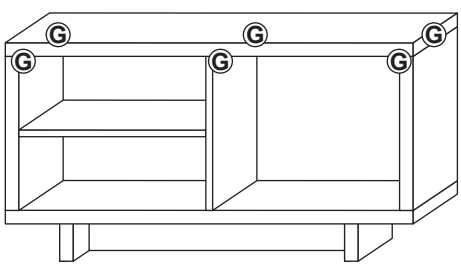

Step 7

