HAMILTON

CODING - 134065



ISO 9001:2015

fyndfurniture.com

Read the instructions carefully. Remove all the wrappings, staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.

CAUTION
KEEP ALL THE PARTS OUT OF CHILDREN'S REACH.

ITEM	РНОТО	HAREWARE NAME	QTY
A		Allen key 4mm	1
B		Bolts (M8x20)	16
<u>C</u>		Bolts (M6x15)	20
(D)	0	Lock washers (Ø10xØ14)	36
E	0	Flat washers (Ø8xØ18)	36

ITEM	РНОТО	PARTS NAME	QTY
1		Table Top	1
2		Shelf	1
3		Leg	2
4	<i>\$</i> /	Frame	2


HAMILTON

CODING - 134065



ISO 9001:2015 Reg. No. 000435-1-MY-1-OMS

fyndfurniture.com

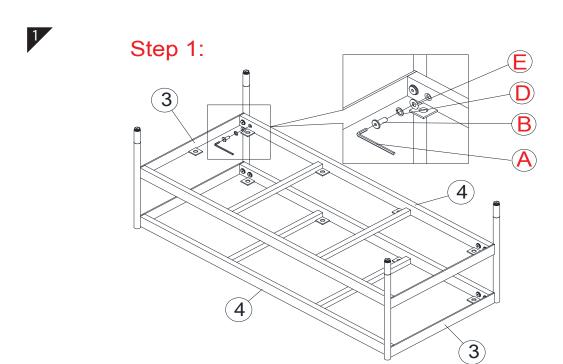



Step 2:

