


CODING

-134105

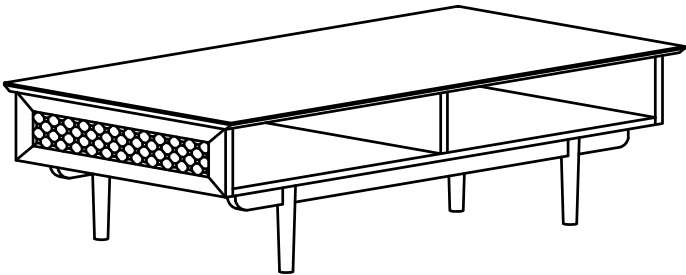

ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

nestnordic.com

Read the instruction carefully. Remove all the wrapping material , staples and straps from the carton . Refer to the hardware and furniture part list for guidance . Be sure that you have all the parts before you start assembling . Place all the wooden furniture part on a clean and flat soft surface, such as carpet or rubberma to prevent from scratches .


Caution
KEEP ALL PARTS OUT OF REACH OF CHILDREN.

ITEM	HARDWARE LIST	QTY
Ⓐ	JCBC SCREW M6 X 35MM 	16
Ⓑ	SPRING WASHER 5/16" 	16
Ⓒ	FLAT WASHER 5/16" 	16
Ⓓ	ALLEN KEY M5 	1

ITEM	PART LIST	QTY
①	BODY 	1
②	TABLE LEG 	4

CODING

-134105

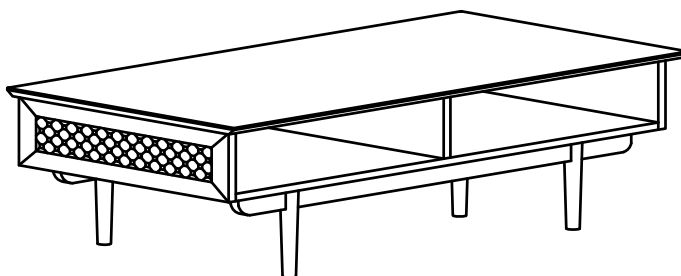

ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

nestnordic.com

1

