

CODING

-134138



ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

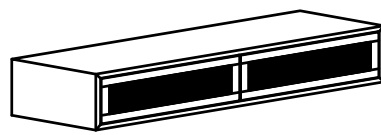

fyndfurniture.com

Read the instruction carefully. Remove all the wrapping material , staples and straps from the carton . Refer to the hardware and furniture part list for guidance . Be sure that you have all the parts before you start assembling . Place all the wooden furniture part on a clean and flat soft surface, such as carpet or rubbermat to prevent from scratches .

Caution

KEEP ALL PARTS OUT OF REACH OF CHILDREN.

ITEM	HARDWARE LIST	QTY
(A)	JCBC SCREW M6 X 35MM 	8
(B)	SPRING WASHER 5/16" 	8
(C)	FLAT WASHER 5/16" 	8
(D)	ALLEN KEY M5 	1
(E)	SCREW CKS M4 X 32MM 	1
(F)	SCREW M3.5 X 16MM 	1
(G)	PLASTIC HOOK 	2
(H)	CABLE TIE 	1
(I)	FLAT WASHER (ø5 X ø9) 	2
(J)	WALL PLUG 	1

ITEM	PART LIST	QTY
(1)	BODY 	1
(2)	TABLE LEG 	4

CODING

-134138



ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

fyndfurniture.com

