


CODING
- 134145

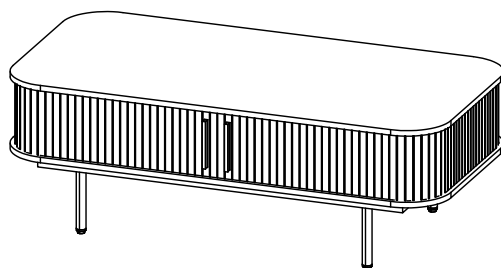












ISO 9001:2015
Reg. No. 000435-1-MY-1-OMR

nuhoom.com

Read the instructions carefully. Remove all the wrappings , staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.

CAUTION
KEEP ALL THE PARTS OUT OF CHILDREN'S REACH.

PART LIST		QTY
1	TOP PANEL	1 PC
2	BOTTOM PANEL	1 PC
3	SIDE PANEL (L/R)	2 PCS
4	CENTER PANEL	1 PC
5	SLIDING DOOR	2 PCS

HARDWARE			
A	MINI FIX	A1  A2  A3 	6 SETS
B	M8 X 30MM WOOD DOWEL		8 PCS
C	M6 X 50MM CSK CAP WOOD SCREW		6 PCS
D	ALLEN KEY M4		1 PC
E	PAN HEAD SCREW M4 X 12MM		4 PCS
F	METAL BRACKET		2 PCS
G	M3.5 X 16MM C.B SCREW		4 PCS
H	PVC HANDLE 7050.96		2 PCS
I	ROSE METAL LEG		4 PCS


SELF-PREPARED TOOLS: Tools below are NOT included in package.




SCREWDRIVER



HAMMER

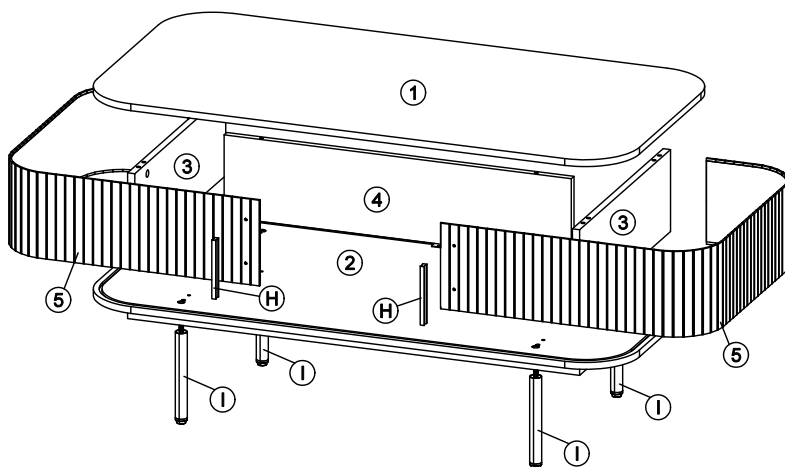

CODING
- 134145

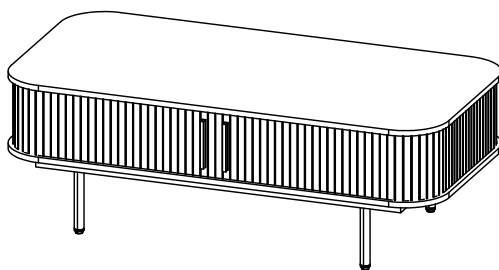


ISO 9001:2015
Reg. No. 00035-1-2017-1-Q008

nuhoom.com


STEP 1

- Insert hardware **A2** onto panel **(1)**.
(Repeat 6 times.)

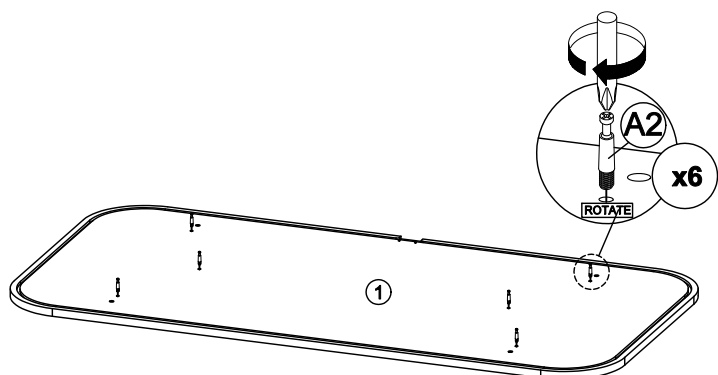


STEP 2

- Insert hardware **B** onto panel **(3)**.
(Repeat 8 times.)

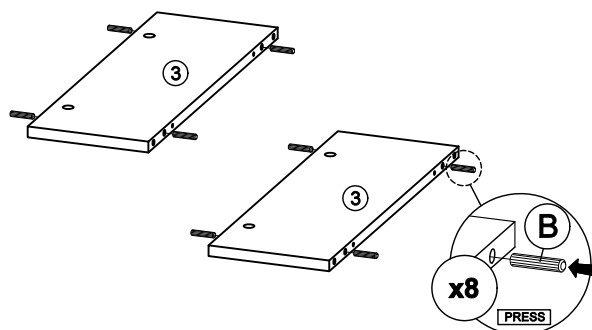


STEP 3

- Insert hardware **A1** onto panel **(3)**.
- Attach panel **(3)** to panel **(1)**.
- Rotate all **A1** until tight.
- Apply **A3** onto all **A1**.
(Repeat 4 times.)

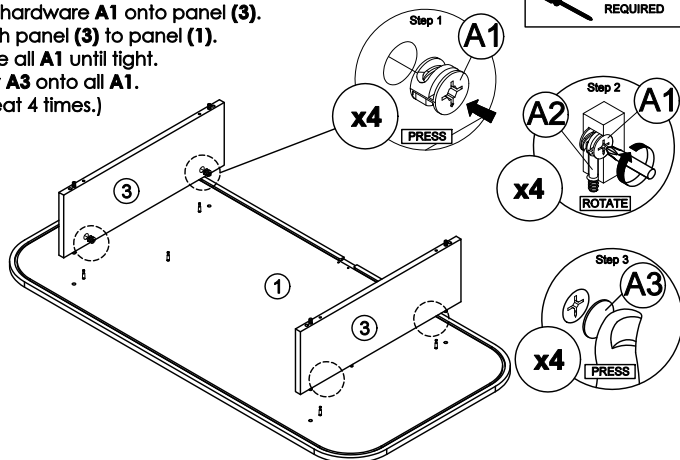


STEP 4

- Insert hardware **A1** onto panel **(4)**.
- Attach panel **(4)** to panel **(1)**.
- Rotate all **A1** until tight.
- Apply **A3** onto all **A1**.
(Repeat 2 times.)

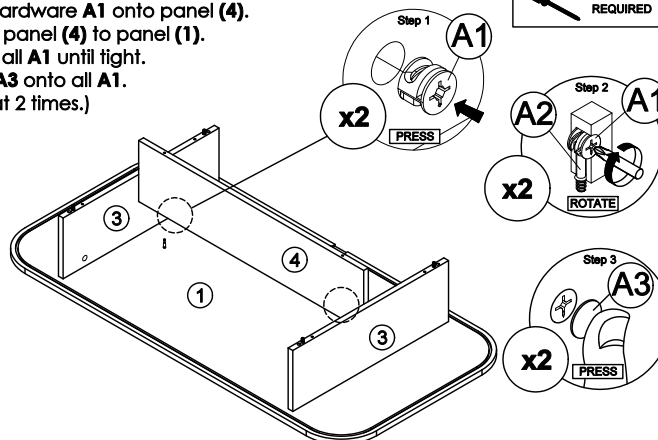


STEP 5

- Connect panel **(2)** to panel **(3)** and **(4)** by using hardware **C** and **D**.
(Repeat 6 times.)

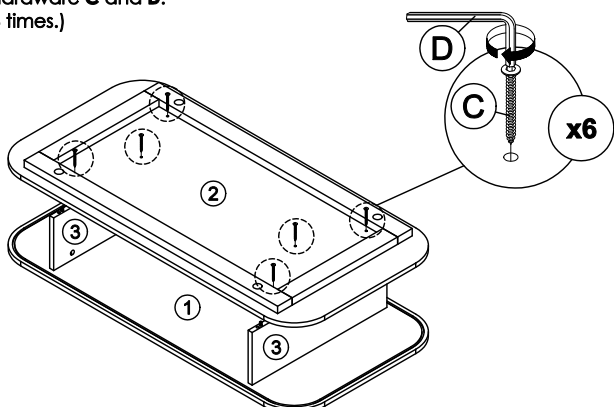


STEP 6

- Assemble hardware **I** into bottom of panel **(2)**.
(Repeat 4 times.)

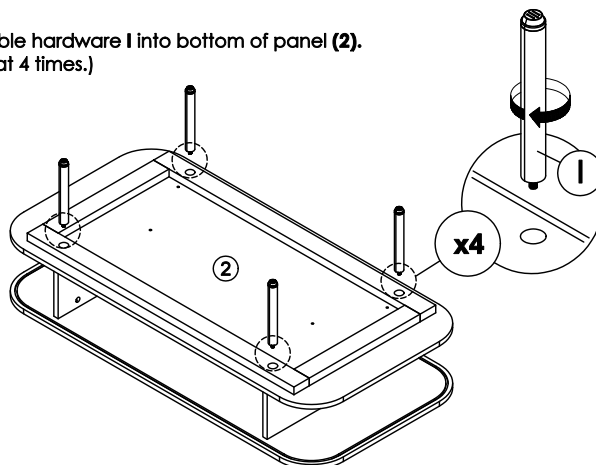

CODING
- 134145

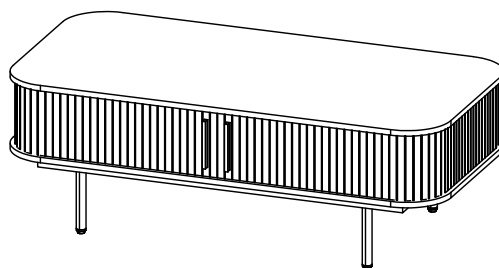


ISO 9001:2015
Reg. No. 00005-1-0000-1-0000

nuhoom.com


STEP 7

- Fix hardware **H** onto panel **(5)** by using hardware **G**.
(Repeat 2 times for each hardware.)

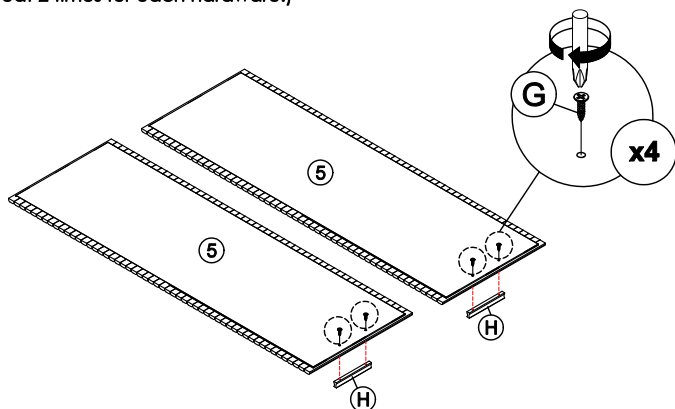


STEP 8

- Insert panel **(5)** into the panel grooves **(1)** and **(2)**.
(Repeat 1 times.)

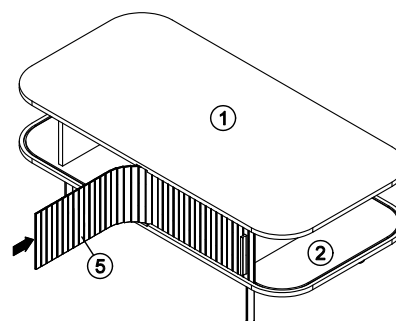

STEP 9

- Insert panel **(5)** into the panel grooves **(1)** and **(2)**.
(Repeat 1 times.)

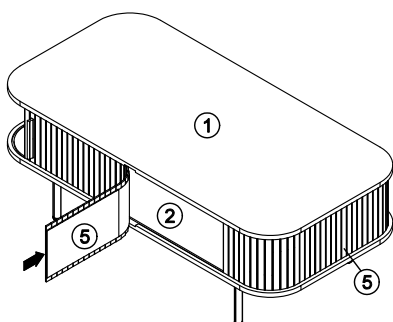

STEP 10

- Assemble the hardware **F** onto panel **(1)** and **(2)** by using hardware **E**.
(Repeat 2 times for each hardware.)

