


CODING
- 134158

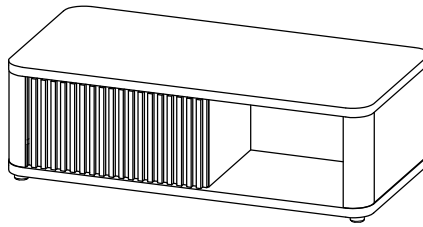

ISO 9001:2015
Reg. No. 000435-1-KTY-1-QMS



nuhoom.com

Read the instructions carefully. Remove all the wrappings , staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.

CAUTION
KEEP ALL THE PARTS OUT OF CHILDREN'S REACH.


HARDWARE			
A	MINI FIX	A1 A2 A3	22 SETS
B	M8 X 30MM WOOD DOWEL		36 PCS
C	M6 X 60MM CSK CAP WOOD SCREW		8 PCS
D	ALLEN KEY M4		1 PC
E	M3.5 X 16MM C.B SCREW		12 PCS
F	M4 X 30MM C.B SCREW		4 PCS
G	M4 X 38MM C.B SCREW		8 PCS
H	14" DRAWER SLIDE	H1 (L/R) H2 (L/R)	1 SETS
I	25MM SOFA LEG		4 PCS

PART LIST		QTY
1	TOP PANEL	1 PC
2	BOTTOM PANEL	1 PC
3	SIDE PANEL (L&R)	2 PCS
4	CENTER PANEL	1 PC
5	MIDDLE PANEL	1 PC
6	SIDE SUPPORT	1 PC
7	SIDE BLOCK	2 PCS
8	LEG CORNER	4 PCS
9	DRAWER FRONT	1 PC
10	DRAWER BACK	1 PC
11	DRAWER SIDE (L)	1 PC
12	DRAWER SIDE (R)	1 PC
13	DRAWER BOTTOM	1 PC

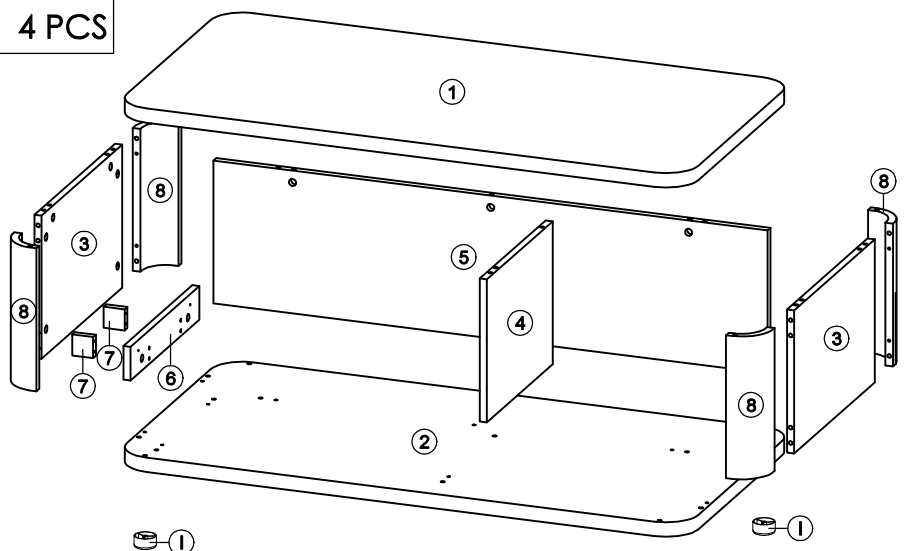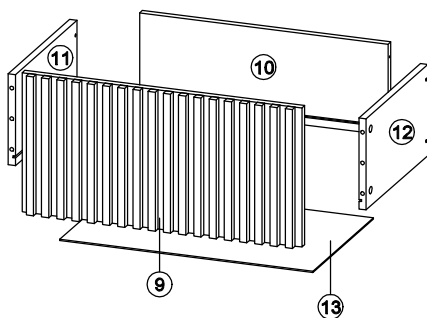

SELF-PREPARED TOOLS: Tools below are NOT included in package.	
SCREWDRIVER	HAMMER

CODING
- 134158

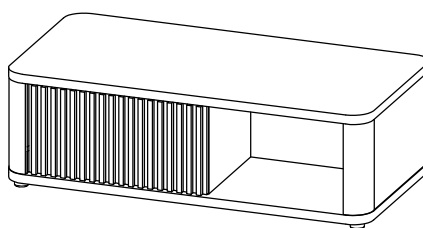


ISO 9001:2015
Reg. No. 000435-1-KTY-1-QMS

nuhoom.com


STEP 1

- Insert hardware **A2** onto panel (1), (2), (8) and (9).
(Repeat 22 times.)
- Insert hardware **B** into panel (3), (4), (5), (6), (8), (11), and (12).
(Repeat 36 times.)

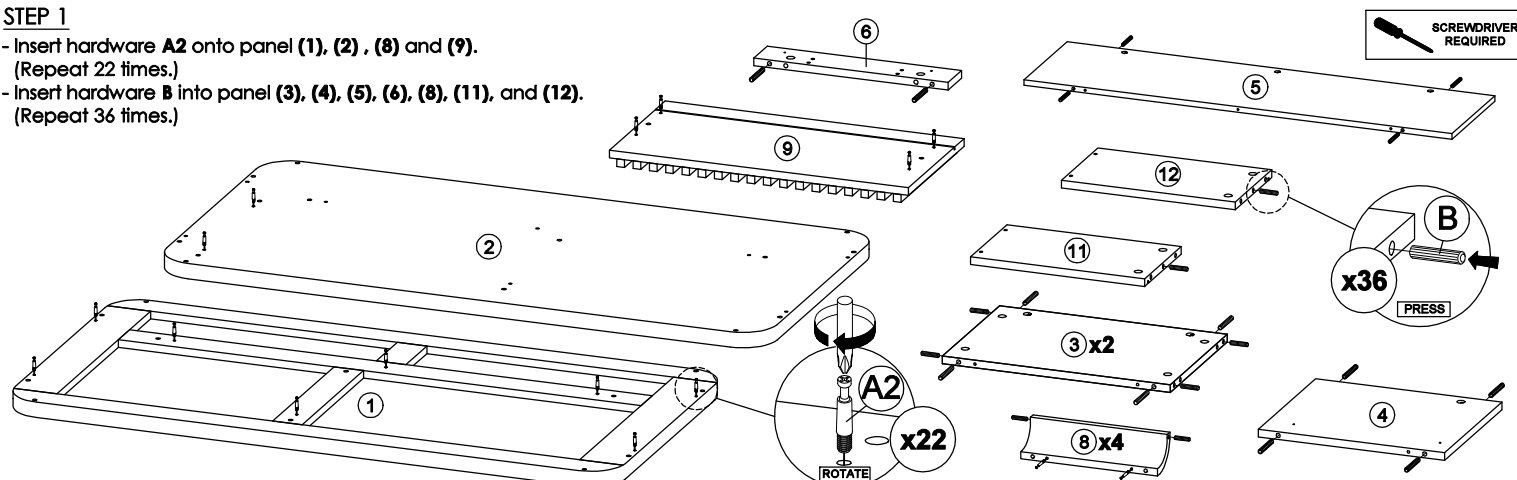


STEP 2

- Insert hardware **A1** into panel (3).
(Repeat 8 times.)
- Attach panel (8) to panel (3).
- Insert all hardware **A2** into **A1**.
- Rotate all **A1** until tight.
- Apply **A3** onto all **A1**.
(Repeat 8 times.)

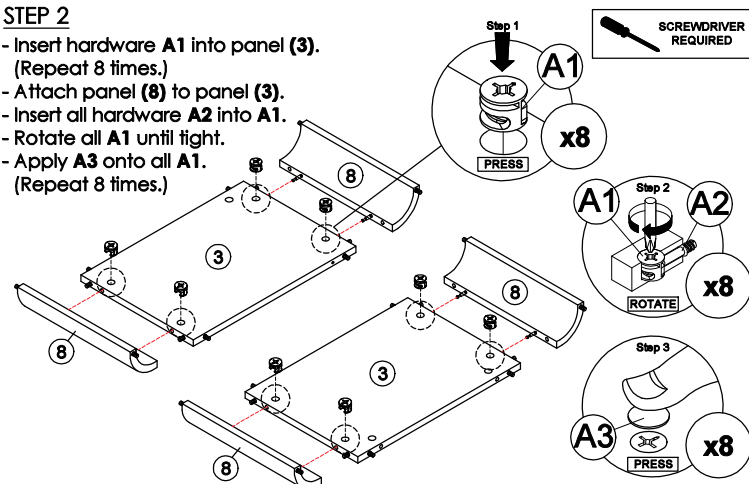


STEP 3

- Connect panel (6) to panel (7) by using hardware **G**.
(Repeat 4 times.)

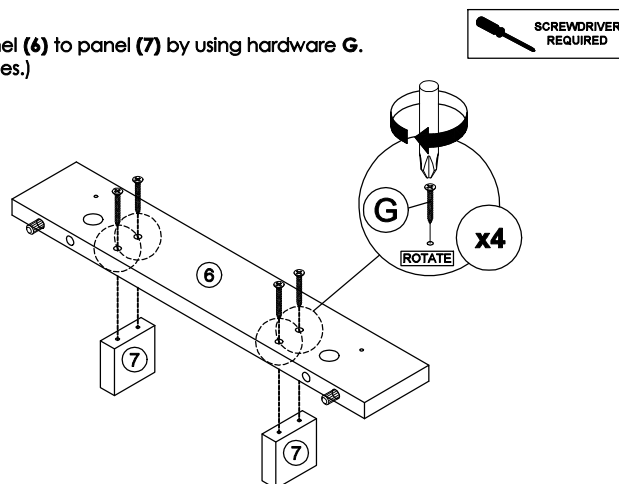


STEP 4

- Fix hardware **H1 (L/R)** onto panel (4) and (6) with hardware **E**.
(Repeat 3 times for each hardware.)

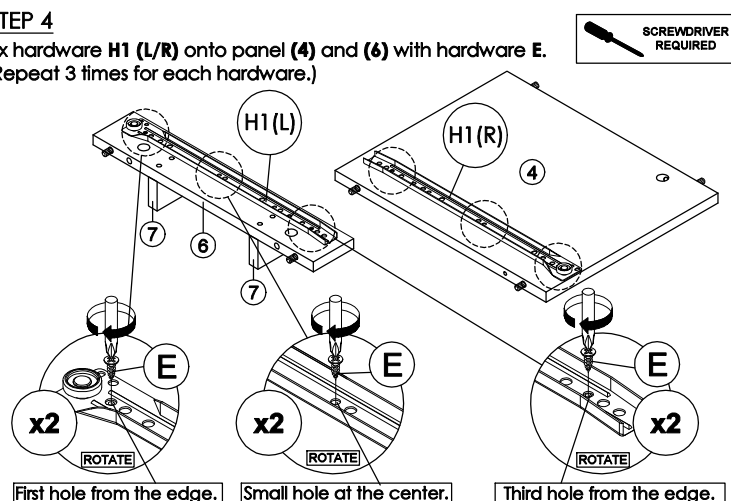


STEP 5

- Insert hardware **A1** into panel (3), (4), (5).
(Repeat 8 times.)
- Attach panel (3), (4), (5) and (8) to panel (1).
- Insert all hardware **A2** into **A1**.
- Rotate all **A1** until tight.
- Apply **A3** onto all **A1**.
(Repeat 8 times.)

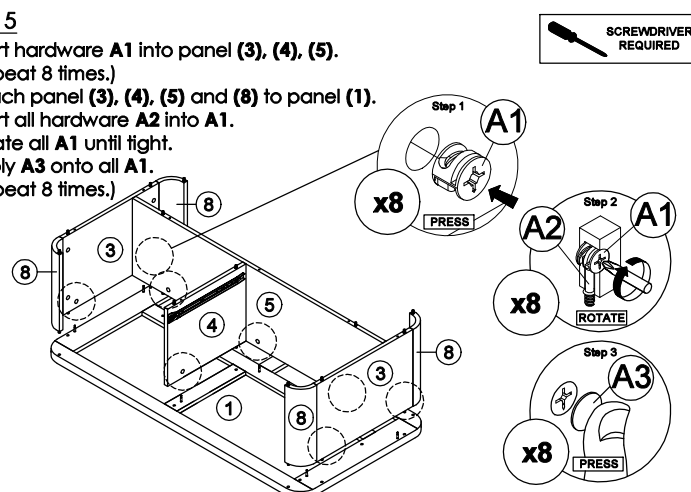

CODING
- 134158

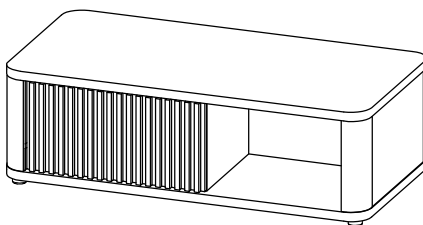


ISO 9001:2015
Reg. No. 000435-1-KTY-1-QMS

nuhoom.com


STEP 6

Connect panel (2) to panel (3), (4), (5) and (8) by using hardware C and D.
(Repeat 8 times.)

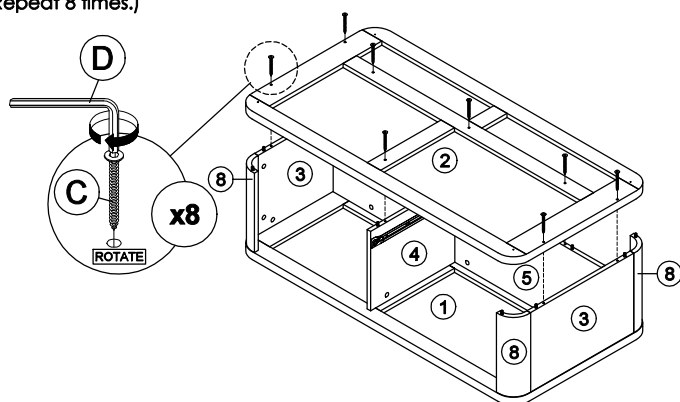


STEP 7

Fix hardware I onto panel (2) by using hardware F.
(Repeat 4 times.)

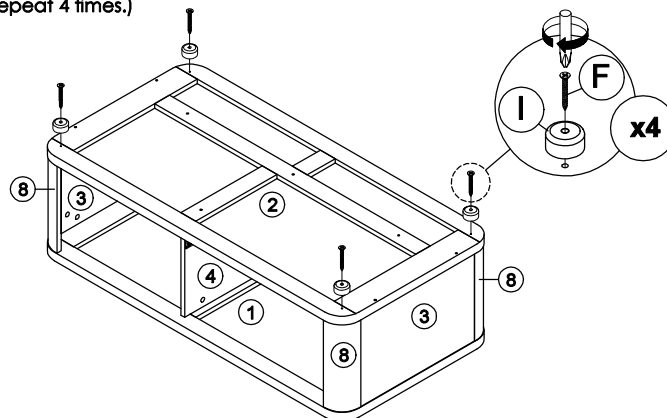


STEP 8

- Insert hardware A1 into panel (6).
(Repeat 2 times.)
- Attach panel (6) to panel (2).
- Insert all hardware A2 into A1.
- Rotate all A1 until tight.
- Apply A3 onto all A1.
(Repeat 2 times.)

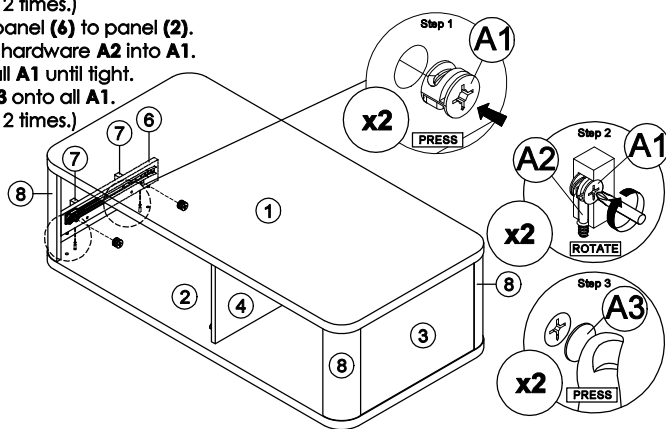


STEP 9

Assemble panel (11) and (12) to panel (10) by using hardware G.
(Repeat 4 times.)

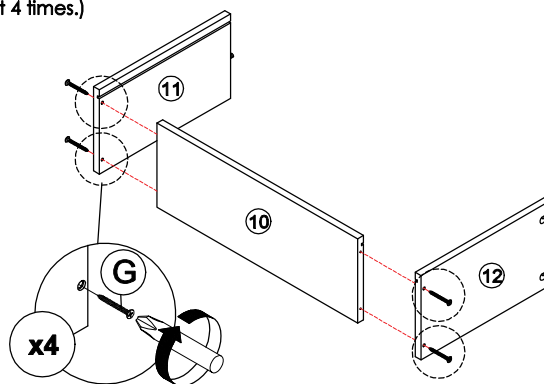


STEP 10

Insert the panel (13) along the slot.
(Repeat 1 times.)

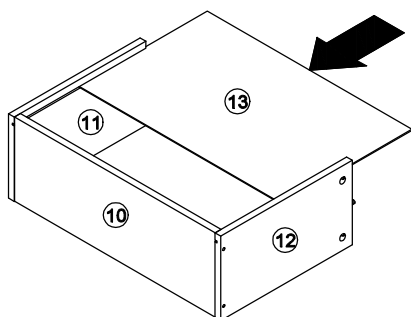


STEP 11

- Insert hardware A1 into panel (11) and (12).
(Repeat 4 times.)
- Attach panel (9) to panel (11) and (12).
- Insert all hardware A2 into A1.
- Rotate all A1 until tight.
- Apply A3 onto all A1.
(Repeat 4 times.)

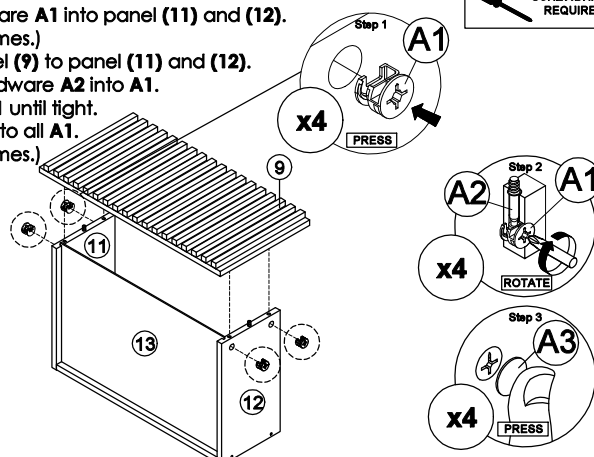

CODING
- 134158

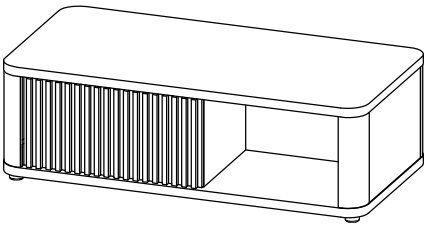

ISO 9001:2015
Reg. No. 000435-1-001-1-QMS

nuhoom.com

STEP 12
Assemble hardware **H2 (L/R)** to panel **(11)** and **(12)** by using hardware **E**.
(Repeat 3 times for each hardware.)



STEP 13
Put all the drawer in place along the drawer slides.

