



- -1469064
- -1469063


ISO 9001:2015

## nesthouz.com

Read the instruction carefully. Remove all the wrapping material. Staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Be sure that you have all the parts before you start assembling. Place all the wooden furniture part on a clean and flat soft surface, such as carpet or rubbermat to prevent from scratches

## CAUTION KEEP ALL THE PARTS OUT REACH OF CHILDREN

ITEM	HARDWARE L	IST	QTY	SPARE QTY
1	PAN HEAD WOOD SC M5 X 16mm	REW	8	
2	CSK SOCKET SCREW M6 x 45mm		4	
3	JCBC SCREW M6 x 40mm		12	
4	HEX NUT 5/16"		4	
5	M4 ALLEN KEY(BALL SHAPE)LONG		1	
6	WRENCH	<b>2</b>	1	
$\overline{7}$	FLAT WASHER 5/16"	$\odot$	4	
8	SPRING WASHER 5/16"		4	
9	FLAT WASHER 1/4"	$\odot$	12	
10	SPRING WASHER 1/4"		12	

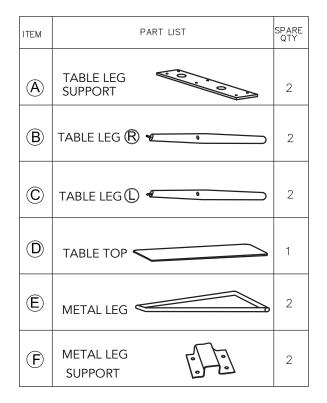

1/2 nesthouz.com



## CODING

- -1409696
- -1409697
- -1409698
- -1469062 -1469064
- -1469063


1


2


3



## nesthouz.com

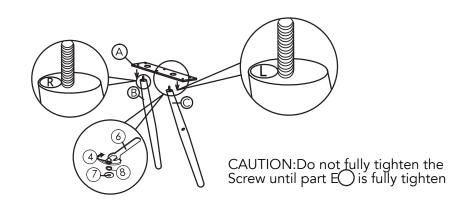

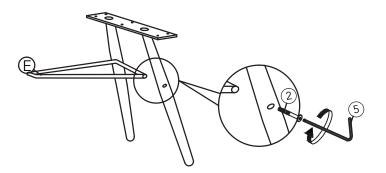

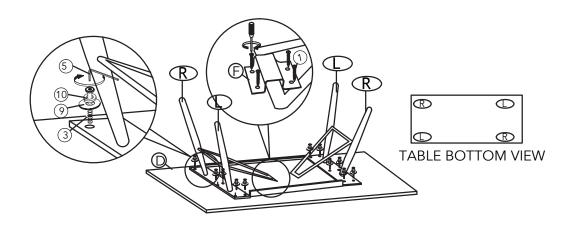

2/2 nesthouz.com