
CODING

- -145180
- -145181
- -145179

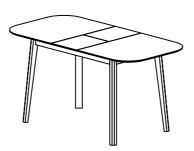

ISO 9001:2015

Reg.No. 00435-1-MY-1-QMS

nesthouz.com

Read the instructions carefully. Remove all the wrappings, staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.


CAUTION KEEP ALL THE PARTS OUT OF CHILDREN'S REACH.

ITEM	РНОТО	HARDWARE NAME	QTY
(A)		JCBB SCREW M8 x 70MM	8
B		SPRING WASHER 5/16"	8
©	0	FLAT WASHER 5/16"	8
0		ALLEN KEY M5	1

ITEM	РНОТО	PARTS NAME	QTY
1		TABLE TOP	1
2		TABLE LEG	4

CODING

- -145180
- -145181
- -145179

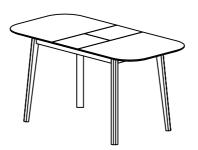

ISO 9001:2015

Reg.No. 00435-1-MY-1-QMS

nesthouz.com

