## **DRAKE**

**CODING** 

-146114



ISO 9001:2015

## nesthouz.com

Read the instruction carefully. Remove all the wrapping material, staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Be sure that you have all the parts before you start assembling. Place all the wooden furniture part on a clean and flat soft surface, such as carpet or rubbermat to prevent from scratches.

## CAUTION KEEP ALL THE PARTS OUT OF REACH OF CHILDREN.

ITEM	РНОТО	HARDWARE NAME	QTY
(A)	<b>(13111</b>	JCBC SCREW M6 x 40MM	8
B	<b></b>	JCBC SCREW M6 x 60MM	8
0	0	SPRING WASHER 1/4"	16
0		AJUSTABLE SCREW C99 M6 X 23mm	4
Œ	•www.	PAN HEAD SCREW M4 x 25mm	16
Ē		ALLEN KEY M4 BALL SHAPE(LONG)	1

ITEM	РНОТО	PARTS NAME	QTY
1		TABLE TOP	1
2		TABLE LEG (L & R)	4
3		LEG SUPPORT RAIL	2
4		CENTER SUPPORT RAIL	1

**CODING** 


-146114





ISO 9001:2015 Reg. No. 000435-1-MY-1-OMS


## nesthouz.com

4

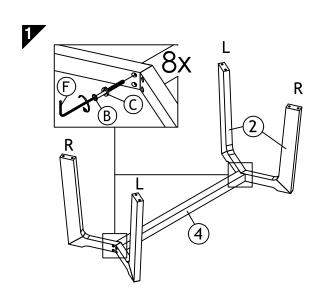

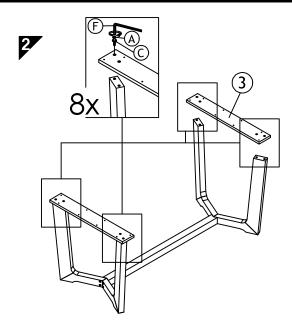

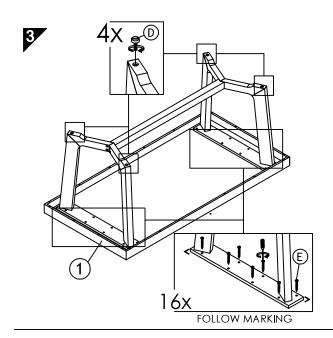

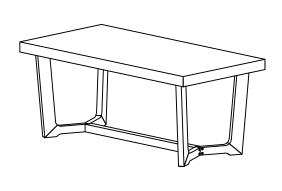

<sup>2/2</sup> nesthouz.com