

CODING

-146146



ISO 9001:2015
Reg. No. 000435-I-MY-I-QMS

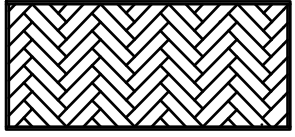
fyndfurniture.com

Read the instruction carefully. Remove all the wrapping material , staples and straps from the carton . Refer to the hardware and furniture part list for guidance . Be sure that you have all the parts before you start assembling . Place all the wooden furniture part on a clean and flat soft surface, such as carpet or rubbermat to prevent from scratches .

Caution

KEEP ALL PARTS OUT OF REACH OF CHILDREN.

ITEM	HARDWARE LIST	QTY
Ⓐ	JCBC SCREW M8 X 25MM 	16
Ⓑ	FLAT WASHER 5/16" 	16
Ⓒ	ALLEN KEY 4MM 	1

ITEM	PART LIST	QTY
①	TOP 	1
②	LEG (L&R) 	4

CODING

-146146



ISO 9001:2015
Reg. No. 000435-I-MY-I-QMS

fyndfurniture.com

1

