
TOFFER

CODING - 146164

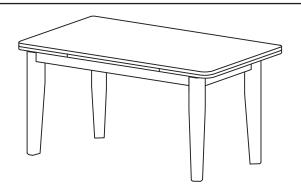

ISO 9001:2015

nesthouz.com

Read the instructions carefully. Remove all the wrappings, staples and straps from the carton. Refer to the hardware and furniture part list for guidance. make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent screatches.


CAUTION
KEEP ALL THE PARTS OUT OF CHILDREN REACH.

ITEM	РНОТО	H ARDWARE NAME	QTY
A		JCBB SCREW M8 X 70MM	8
B	© .	SPRING WASHER 5/16"	8
C	0	FLAT WASHER 5/16"	8
D		ALLEN KEY M5	1

ITEM	РНОТО	PARTS NAME	QTY
1		TABLE TOP	1
2		TABLE LEG	4

TOFFER

CODING - 146164

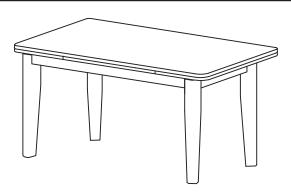

ISO 9001:2015 Reg. No. 000435-1-MY-1-OMS

nesthouz.com

