


CODING

146179

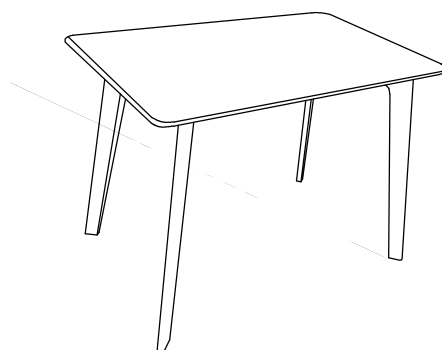

ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

nesthouz.com

Read the instructions carefully. Remove all the wrappings , staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.

CAUTION

KEEP ALL THE PARTS OUT OF CHILDREN'S REACH.

ITEM	PHOTO	HARDWARE NAME	QTY
(A)		JCBB M8 x 80mm	8
(B)		M8 Spring Washer	8
(C)		Flat Washer M8 X 22mm	8
(D)		Allen Key M5	1


ITEM	PHOTO	PARTS NAME	QTY
(1)		Table Top	1
(2)		Table Leg	4

ROVAN

ASSEMBLY GUIDE

CODING


146179

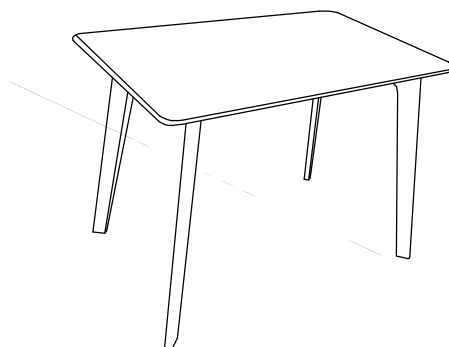

ISO 9001:2015
Reg. No. 000435-1-0EY-1-QM01

nesthouz.com

1

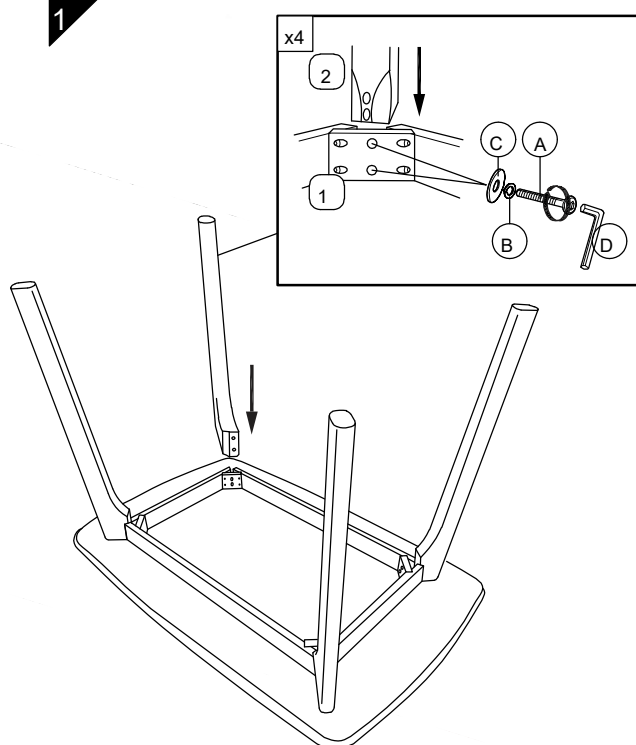

2

