


## CODING

-152017

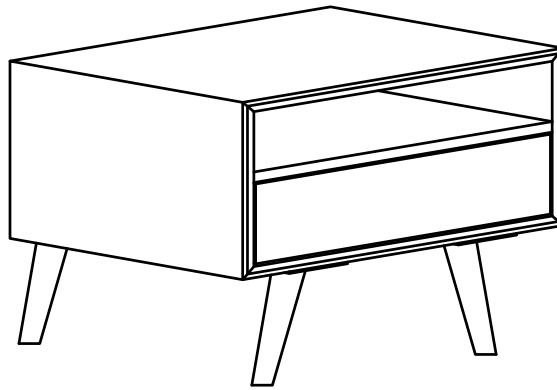

**ISO 9001:2015**  
Reg. No. 000435-I-MY-I-QMS


fyndfurniture.com

Read the instruction carefully. Remove all the wrapping material , staples and straps from the carton . Refer to the hardware and furniture part list for guidance . Be sure that you have all the parts before you start assembling . Place all the wooden furniture part on a clean and flat soft surface, such as carpet or rubbermat to prevent from scratches .

### Caution


**KEEP ALL PARTS OUT OF REACH OF CHILDREN.**

| ITEM | HARDWARE LIST                                                                                            | QTY |
|------|----------------------------------------------------------------------------------------------------------|-----|
| (A)  | JCBC SCREW M6 X 15MM  | 16  |
| (B)  | FLAT WASHER 5/16"     | 16  |
| (C)  | ALLEN KEY 4MM         | 1   |
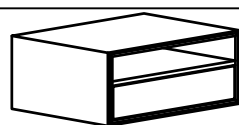
| ITEM | PART LIST                                                                                       | QTY |
|------|-------------------------------------------------------------------------------------------------|-----|
| (1)  | BODY       | 1   |
| (2)  | LEG (L&R)  | 4   |

## CODING

-152017

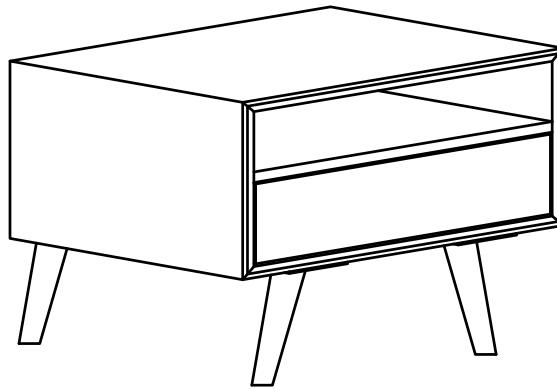

ISO 9001:2015  
Reg. No. 000435-I-MY-I-QMS

fyndfurniture.com

1

