


CODING
- 230020

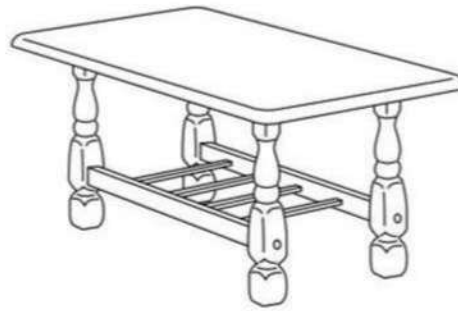

ISO 9001:2015
Reg. No. 000455-1-MY-1-QMS

nuhoom.com


Read the instruction carefully. Remove all the wrapping material, staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Be sure that you have all the parts before you start assembling. Place all the wooden furniture part on a clean and flat soft surface, such as carpet or rubbermat to prevent from scratches.

CAUTION
KEEP ALL THE PARTS OUT OF REACH OF CHILDREN .

ITEM	PHOTO	HAREWARE NAME	QTY
(A)		JCBC M6 x 90mm	8
(B)		M6 Barrenl Nut	8
(C)		CSK M4 x 30mm	16
(D)		M4 Allen Key	1

ITEM	PARTS NAME	QTY
①	Table Top	2
②	Top Support	4
③	Table Leg	8
④	Table Bottom	2


CODING
- 230020

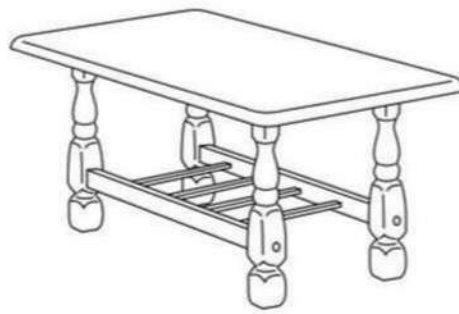


ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

nuhoom.com

1

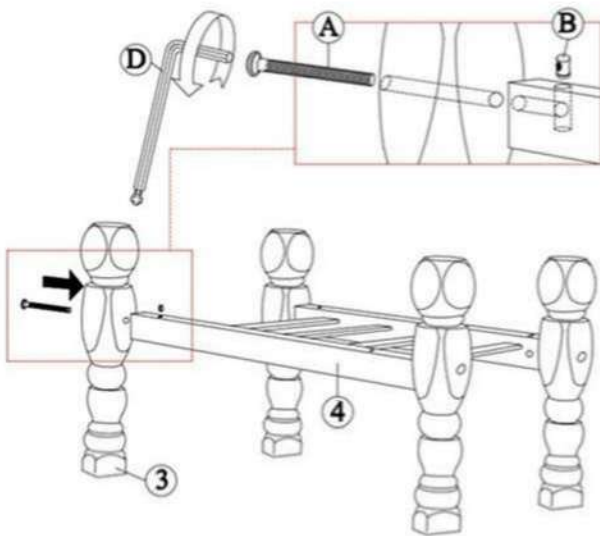

2

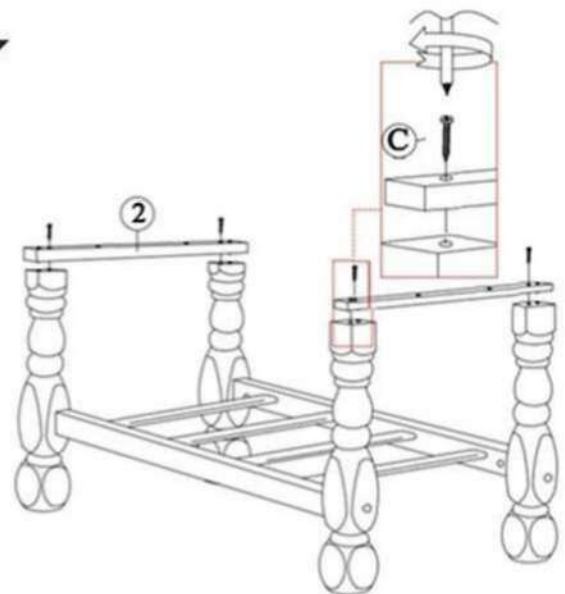

3

