

CODING

-230024


ISO 9001:2015
Reg. No. 000435-1-MEX-1-QMS

nuhoom.com

Read the instructions carefully. Remove all the wrappings , staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.

CAUTION

KEEP ALL THE PARTS OUT OF CHILDREN'S REACH.

NO	PHOTO	HARDWARE LIST	QTY
A		JCBCW Screw M6 x 40mm	10
B		Wood Dowel M8 x 30mm	4
C		CSK Screw M4 x 32mm	6
D		M4 Allen Key	1

ITEM	PHOTO	PART LIST	QTY
1		Backrest	1
2		Chair Leg	2
3		Front Rail	1
4		Wooden Seat	1


CODING
-230024




ISO 9001:2015
Reg. No. 000435-1-MEY-1-QM&S

nuhoom.com


1

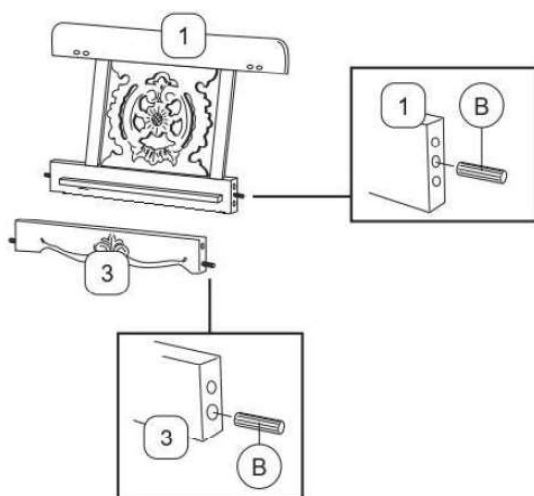

2

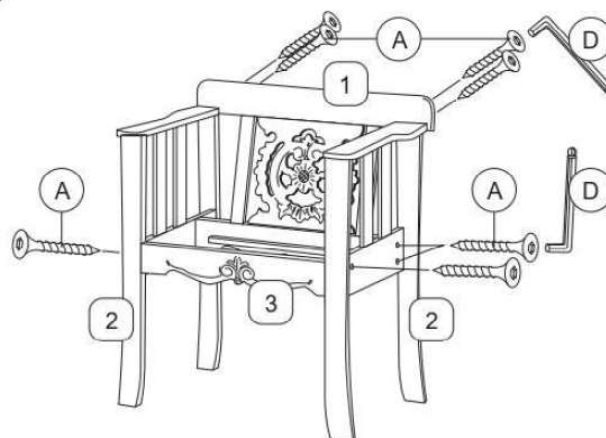

3

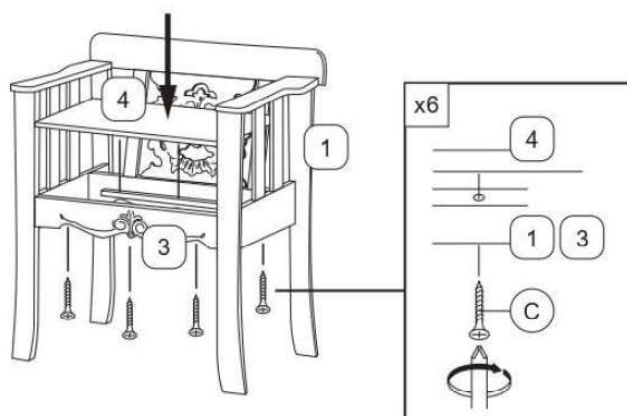

CODING

-230024



ISO 9001:2015
Reg. No. 000435-1-MEY-1-QM5




nuhoom.com

Read the instructions carefully. Remove all the wrappings, staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Make sure that you have all the parts before you start assembling. Place all the wooden furniture parts on a clean, flat and soft surface, such as a carpet or rubbermat to prevent scratches.

CAUTION

KEEP ALL THE PARTS OUT OF CHILDREN'S REACH.

NO	PHOTO	HARDWARE LIST	QTY
A		JCBC/W Screw M6 x 50mm	4
B		Wood Dowel M8 x 30mm	4
C		CSK Screw M4 x 30mm	4
D		M4 Allen Key	1

ITEM	PHOTO	PART LIST	QTY
1		Table Top	1
2		Table Side	2
3		Bottom Panel	1

CODING
-230024



ISO 9001:2015
Reg. No. 000435-1-MEY-1-QM&S

nuhoom.com

