

CODING

- 231376
- 230057
- 230058



ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

nesthouz.com

Read the instruction carefully. Remove all the wrapping material, staples and straps from the carton. Refer to the hardware and furniture part list for guidance. Be sure that you have all the parts before you start assembling. Place all the wooden furniture part on a clean and flat soft surface, such as carpet or rubbermat to prevent from scratches.

CAUTION

KEEP ALL THE PARTS OUT OF REACH OF CHILDREN .

ITEM	PHOTO	HAREWARE NAME	OTTOMAN	SINGLE SEATER	ARM REST
(A)		JCBC M8 x 60 MM	4	4	3
(B)		FLAT WASHER M8	8	8	6
(C)		HEX NUT	4	4	3
(D)		SPANNER	1	1	1
(E)		ALLEN KEY M5 x 65 MM	1	1	1
(F)		JCBC M6 x 50 MM	0	0	2
(G)		FLAT WASHER M6	0	0	2
(H)		ALLEN KEY M4 x 65 MM	0	0	1
(I)		PLASTIC LEG	4	4	4
(J)		CSK SCREW M4 x 32 MM	4	4	4

ITEM	PHOTO	PARTS NAME	QTY
(1)		ARM REST	1
(2)		SINGLE SEATER	1
(3)		OTTOMAN	1

CODING


- 231376
- 230057
- 230058




ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

nesthouz.com

1

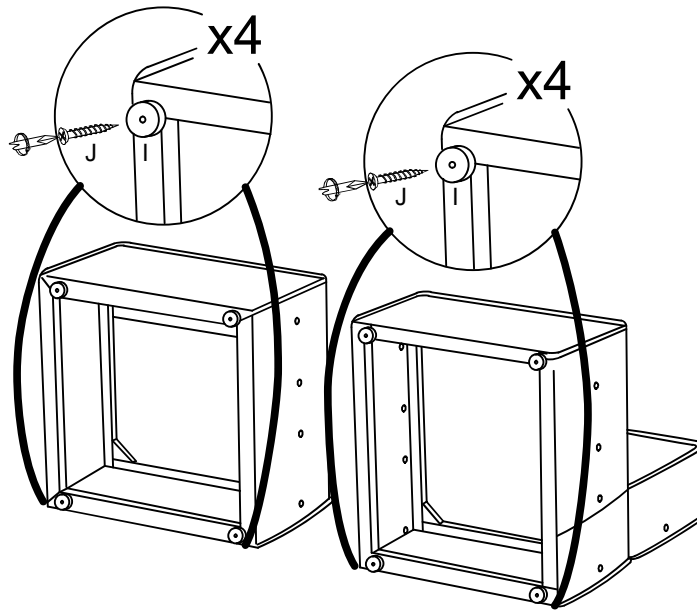

2

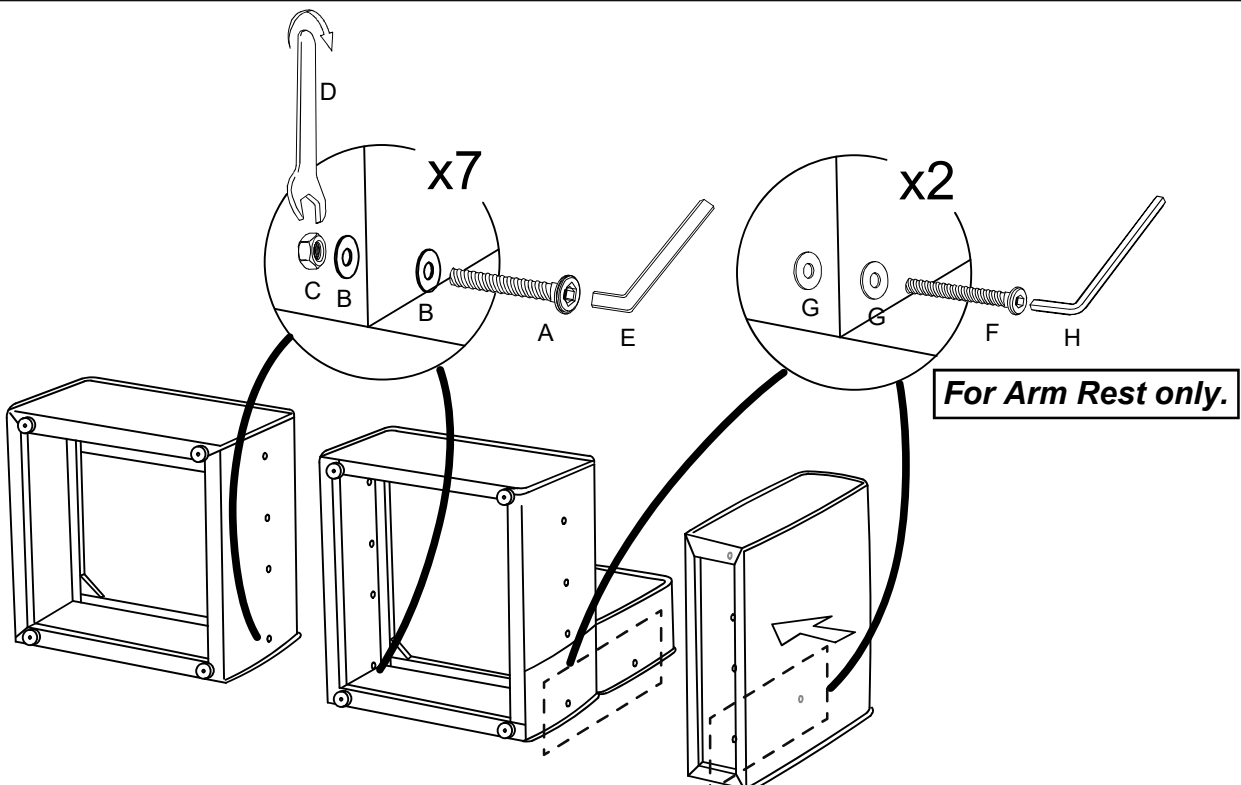

CODING


- 231376
- 230057
- 230058




ISO 9001:2015
Reg. No. 000435-1-MY-1-QMS

nesthouz.com


EXAMPLE

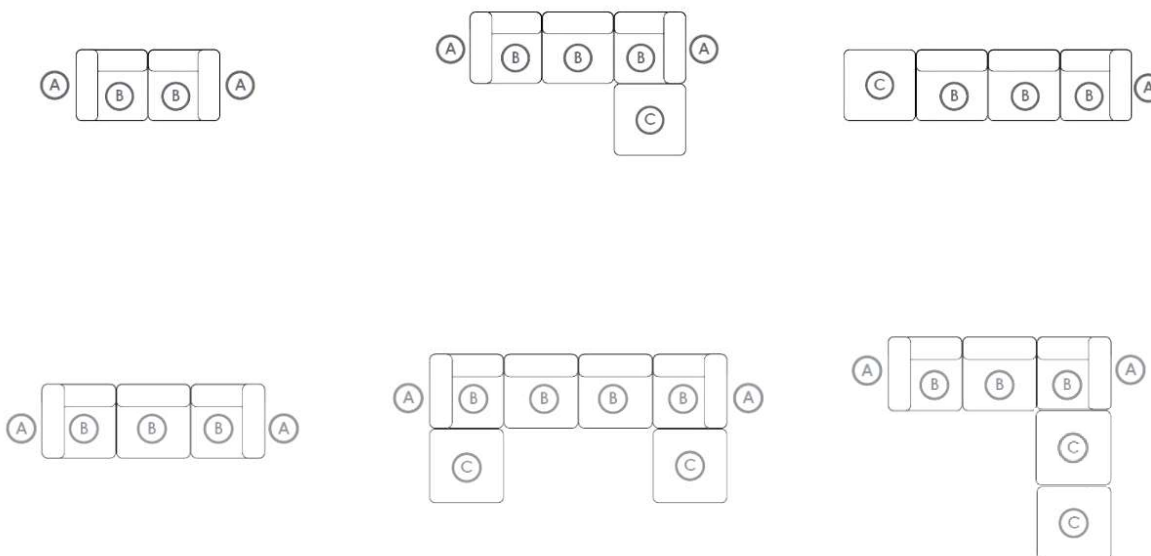


COMPONENTS



Arm
Rest

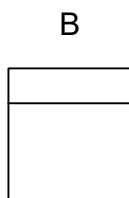

Single
Seater

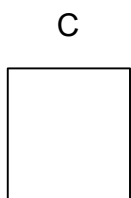

Ottoman